



GASTROPARTS

Capic

[EN] Cooking

[DE] Kochtechnik

[ES] Cocción

[FR] Cuisson

[IT] Cottura

[PL] Obróbka termiczna

[RU] Термическая обработка

✉ gastroparts@gastroparts.com

☎ tel. +48 56 657 00 66

📘 fb.com/gastroparts.global

GASTROPARTS.COM



Open tops (electric)

 


| Item | Order | Description | Model | OEM |
|------|--------|------------------------|------------|-------|
| 1 | 490014 | 1500W/230V, Ø180mm | EK36-18/22 | 63889 |
| 1 | 490018 | 2000W/230V, Ø220mm | | 63890 |
| 2 | 490065 | 2000W/230V, 220x220mm | EK36-22/22 | 63887 |
| 2 | 490066 | 2600W/230V, 220x220xmm | | 63886 |
| 3 | 490054 | 2500W/230V, 300x300mm | EK38-30/30 | 63885 |
| 3 | 490074 | 4000W/400V, 300x300mm | | 63884 |




| Item | Order | Description | Model | OEM |
|------|--------|------------------|------------|-------|
| 1 | 380015 | energy regulator | SGP36/53, | 63867 |
| 2 | 110189 | knob | SGP70/102, | 63919 |
| 3 | 110551 | symbol | BP36/53 | |

Chargrills (electric)

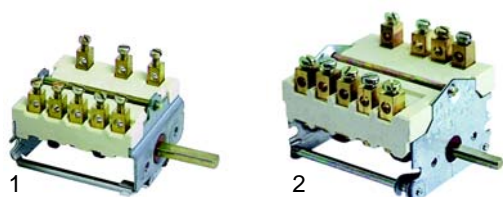

| Item | Order | Description | Model | OEM |
|------|--------|------------------------|------------|-------|
| 1 | 300025 | 7-position switch, 16A | universal | 63873 |
| 2 | 300106 | 7-position switch, 32A | EK38-30/30 | 63872 |

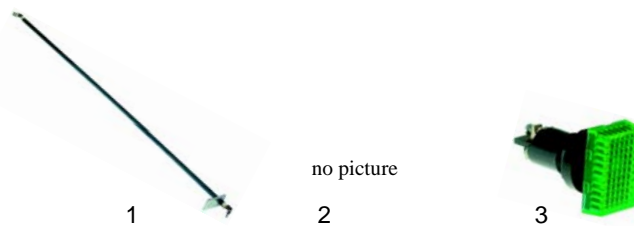 

| Item | Order | Description | Model | OEM |
|------|--------|-------------|-------|-------|
| 1 | 418261 | 330W/230V | | 63854 |
| 2 | 418264 | 700W/230V | RB38, | 63855 |
| 3 | 359861 | signal lamp | RB53 | 63922 |




| Item | Order | Description | Model | OEM |
|------|--------|-------------------|-------|-------|
| 1 | 110189 | knob | | 63907 |
| 2 | 110552 | symbol | | |
| 3 | 359861 | signal lamp/green | | 63922 |




| Item | Order | Description | Model | OEM |
|------|--------|------------------|-------|-------|
| 1 | 380015 | energy regulator | | 63867 |
| 2 | 110189 | knob | RB38, | 63919 |
| 3 | 110551 | symbol | RB53 | |

 Fry tops/bratt pans (electric)

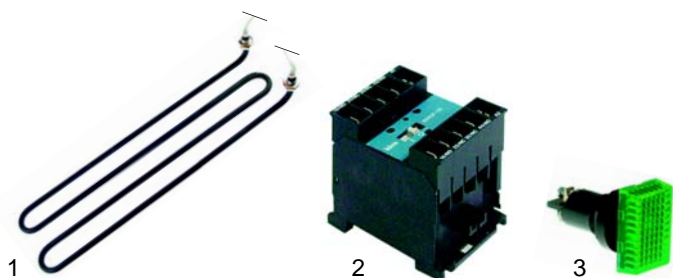

| Item | Order | Description | Model | OEM |
|------|--------|-------------------|------------|-------|
| 1 | 418268 | 2000W/230V | SGP36/53, | 63853 |
| 2 | 380416 | contactor | SGP70/102, | 63906 |
| 3 | 359861 | signal lamp/green | BP36/53 | 63922 |

 Bains-marie (electric)

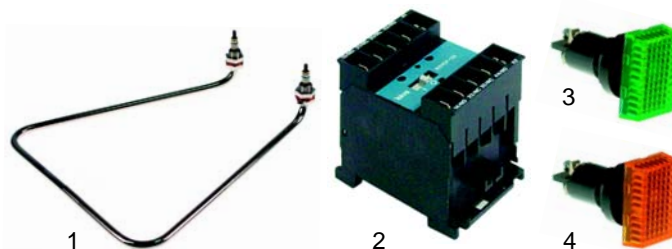

| Item | Order | Description | Model | OEM |
|------|--------|--------------------|-------|-------|
| 1 | 418250 | 1500W/230V | BM36, | 63857 |
| 2 | 380416 | contactor | BM53, | 63906 |
| 3 | 359861 | signal lamp/green | BM70, | 63922 |
| 4 | 359860 | signal lamp/yellow | BM102 | 63923 |


Thermal bridges (electrical)



| Item | Order | Description | Model | OEM |
|------|--------|-------------|----------------|-------|
| 1 | 375406 | thermostat | BM36, | 63862 |
| 2 | 110189 | knob | BM53, | 63917 |
| 3 | 111878 | symbol | BM70, BM102 | |



| Item | Order | Description | Model | OEM |
|------|--------|-----------------------|-------|-------|
| 1 | 415102 | 400W/230V | WB | 63851 |
| 2 | 301003 | rocker switch, 2-pole | | 63871 |

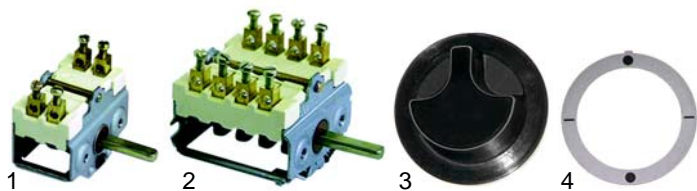 


| Item | Order | Description | Model | OEM |
|------|--------|------------------------|----------------------------------|-------|
| 1 | 300020 | switch (0 - I), 2-pole | BM36, BM53, BM70, BM102 | 63870 |
| 2 | 300021 | switch (0 - I), 4-pole | | 63869 |
| 3 | 110189 | knob | | 63920 |
| 4 | 110542 | symbol | | |



| Item | Order | Description | Model | OEM |
|------|--------|------------------|-------|-------|
| 1 | 380015 | energy regulator | WB | 63867 |
| 2 | 110189 | knob | | 63919 |
| 3 | 110551 | symbol | | |

Chip scuttles (electric)

 Hot cupboards (electric)

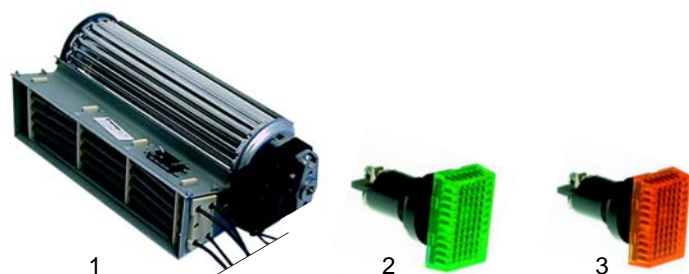

| Item | Order | Description | Model | OEM |
|------|--------|-----------------------------------|-------|-------|
| 1 | 601027 | fan with heating, 2x1000W/230V | 309 | 63905 |
| 2 | 359861 | signal lamp/green | | 63922 |
| 3 | 359860 | signal lamp/yellow | | 63923 |



| Item | Order | Description | Model | OEM |
|------|--------|-------------------|-------|-------|
| 1 | 415104 | 1000W/230V | SB | 63850 |
| 2 | 359861 | signal lamp/green | | 63922 |




| Item | Order | Description | Model | OEM |
|------|--------|-------------------|-------|-------|
| 1 | 375406 | thermostat, 110 C | 309 | 63862 |
| 2 | 110189 | knob | | 63917 |
| 3 | 111878 | symbol | | |




| Item | Order | Description | Model | OEM |
|------|--------|------------------|-------|-------|
| 1 | 380015 | energy regulator | SB | 63867 |
| 2 | 110189 | knob | | 63919 |
| 3 | 110551 | symbol | | |

 Fryers (electric)

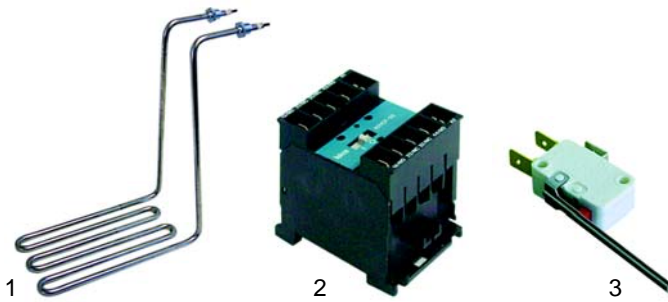

| Item | Order | Description | Model | OEM |
|------|--------|--------------|-----------|-------|
| 1 | 415740 | 3000W/230 V | | 63852 |
| 2 | 380416 | contactor | universal | 63906 |
| 3 | 345107 | micro switch | | 63875 |

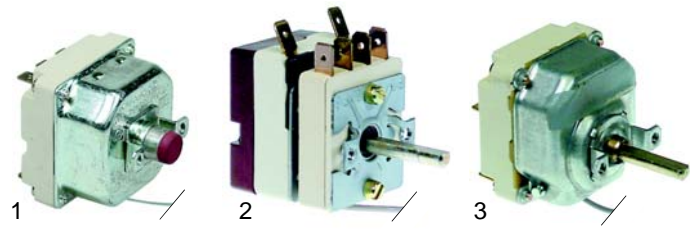 

| Item | Order | Description | Model | OEM |
|------|--------|---------------------------|-----------|-----------------|
| 1 | 375700 | safety thermostat, 3-pole | | 63860, 63864 |
| 2 | 375701 | thermostat, 1-pole | universal | 63863 |
| 3 | 375713 | thermostat, 3-pole | | 63859 |



| Item | Order | Description | Model | OEM |
|------|--------|-----------------------------|-----------|-------|
| 1 | 300020 | switch (0 - I), 16A, 2-pole | | 63870 |
| 2 | 300021 | switch (0 - I), 16A, 4-pole | universal | 63869 |
| 3 | 300102 | switch (0 - I), 32A, 4-pole | | 63868 |




| Item | Order | Description | Model | OEM |
|------|--------|----------------|-----------|-----|
| 1 | 110189 | knob | | - |
| 2 | 110542 | symbol (0 - I) | universal | - |
| 3 | 110536 | symbol | | - |




| Pos. | Order | Description | Model | OEM |
|------|--------|--------------------------------|-----------|-------|
| 1 | 970442 | fryer basket, 165x280x130mm | universal | 63877 |

Single devices

 Stockpot stoves (electrical)

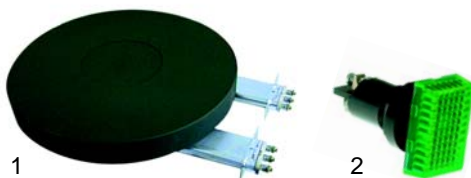

| Item | Order | Description | Model | OEM |
|------|--------|-------------------|-------|-------|
| 1 | 490103 | 5000W/400 V | | 63883 |
| 2 | 359861 | signal lamp/green | 3111E | 63922 |

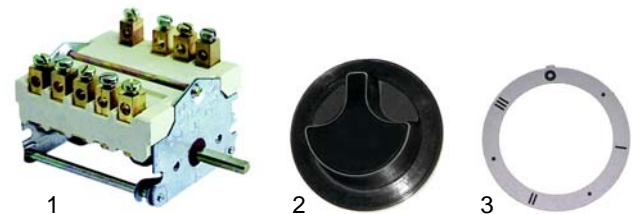 

| Item | Order | Description | Model | OEM |
|------|--------|------------------------|-------|-------|
| 1 | 300106 | 7-position switch, 32A | | 63872 |
| 2 | 110189 | knob | 3111E | 63907 |
| 3 | 110552 | symbol | | |



GASTROPARTS.COM



© 2020 Gastroparts Sp. J. All rights reserved.