



GASTROPARTS

FriFri

[EN] Cooking

[DE] Kochtechnik

[ES] Cocción

[FR] Cuisson

[IT] Cottura

[PL] Obróbka termiczna

[RU] Термическая обработка

✉ gastroparts@gastroparts.com

 
☎ tel. +48 56 657 00 66

📘 fb.com/gastroparts.global


GASTROPARTS.COM



Fryers (electric)

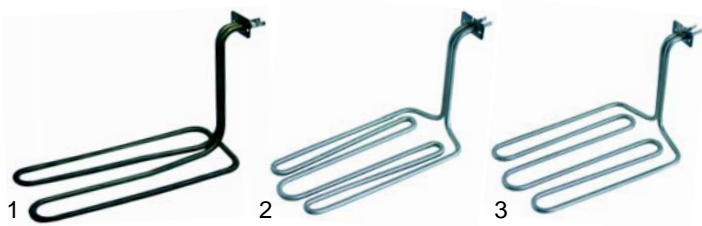


Item	Order	Description	Model	OEM
1	415716	2000W/230V	114, 214, 149, TF4, TF4+4	1145031
2	416423	3200W/230V	ECO4, ECO4+4	300914
3	416424	3200W/230V	ECO6, ECO6+6	300915

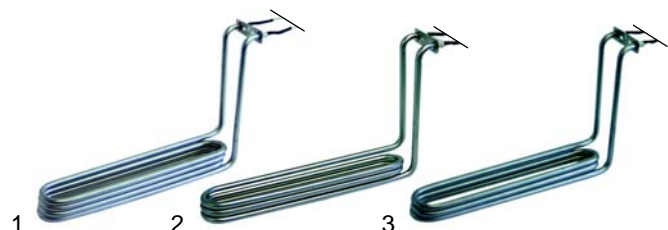 


Item	Order	Description	Model	OEM
1	415739	3000W/230V	D4	400534 400362
2	415717	1500W/230V	D6	400532 400360
3	415738	2000W/230V	D8	400533 400361



Item	Order	Description	Model	OEM
1	415742	2300V/230V	FT4, FT4+4, FT6, FT8	100947
2	415743	3750W/400V	215, 219, TF6	21550015

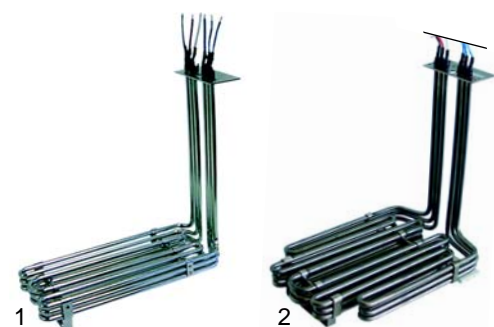 


Item	Order	Description	Model	OEM
1	415741	7500W/3 phases 230V	FF21, FF41, FF42, FF_21, FF_41, FF_42	600644 101105
2	416425	11400W/3 phases 230V	FF31, FFS31, FFE31, FFM31	100744 300950

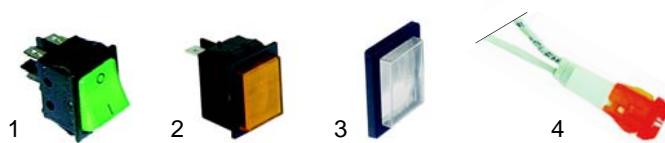 


Item	Order	Description	Model	OEM
1	301003	switch, 2-pole	FT4,	400627
2	359156	signal lamp	FT6,	400698
3	301036	protective cover	FT8	400647
4	359258	signal lamp	ECO_	400771



Item	Order	Description	Model	OEM
1	359098	signal element/green		400365
1	359118	signal element/clear		400366
2	359097	lamp holder/green	D4, D6, D8	400367
3	359257	lamp holder/yellow		400368
4	359230	signal lamp		400543
5	359231	signal lamp	FF_, FFS_	400544

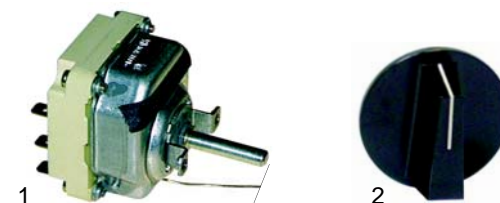 


Item	Order	Description	Model	OEM
1	375050	thermostat	TF4	100374
2	110164	knob		400F55

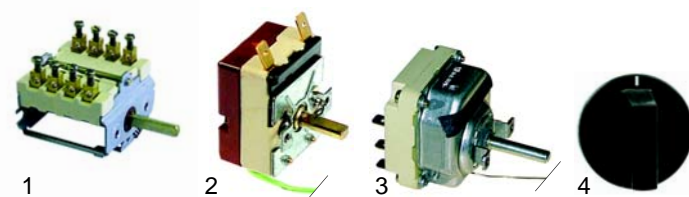 


Item	Order	Description	Model	OEM
1	300080	switch		21558010
2	375527	thermostat, 1-pole		100374
3	375043	thermostat, 3-pole	TF6/8	09580111
4	110258	knob		09741058

F

 
Suitable for Fri Fri

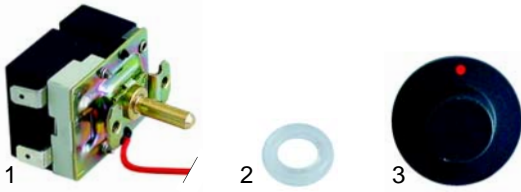


Item	Order	Description	Model	OEM
1	375224	thermostat	ECO	400772
2	550369	gasket		998999
3	110879	knob		400769

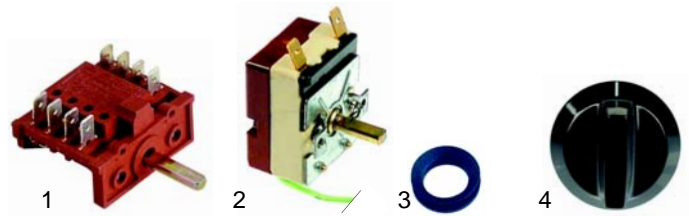 


Item	Order	Description	Model	OEM
1	300118	switch, 4-pole	FF_, FFS_	400542
2	375677	thermostat, 195 C		400541
3	550490	gasket		400373
4	110880	knob		400545

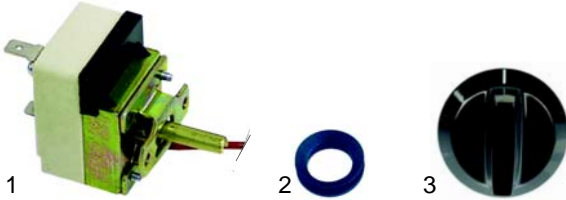 


Item	Order	Description	Model	OEM
1	375129	thermostat	FT_	400625
2	550490	gasket		400373
3	110880	knob		400545

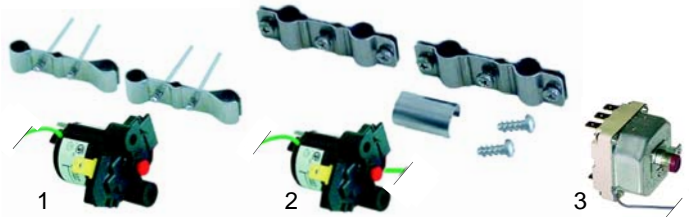 


Item	Order	Description	Model	OEM
1	375244	safety thermostat	ECO	600709
2	375248	safety thermostat	FT_	400697 600707
3	375127	safety thermostat, 290 C, 3-pole	TF_	400189

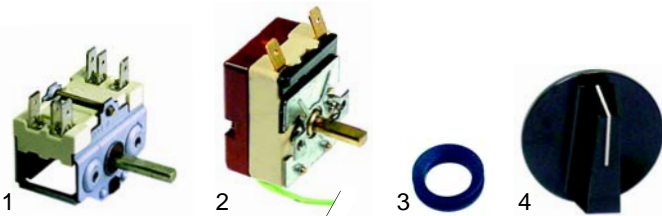 

Item	Order	Description	Model	OEM
1	300001	switch, 2-pole	D4	400372
2	375683	thermostat, 1-pole, 175 C		400374 400388
3	550490	gasket		400373
4	110164	knob		400755

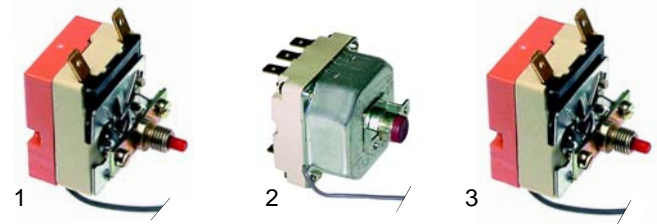 

Item	Order	Description	Model	OEM
1	375678	safety thermostat, 290 C, 1-pole	D4	400375
2	375679	safety thermostat, 295 C, 3-pole	D6, D8	400364
3	375682	safety thermostat, 285 C, 1-pole	FF_	400537 400674 600383 400676

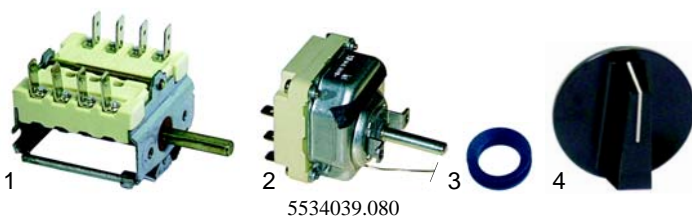 


Item	Order	Description	Model	OEM
1	300002	switch, 4-pole	D6, D8	400371
2	375256	thermostat, 3-pole, 175 C		400369
2	375512	thermostat, 3-pole, 185 C		400370
3	550490	gasket		400373
4	110164	knob	400755	



Item	Order	Description	Model	OEM
1	375249	safety thermostat	FFS to 1998	600711
2	300092	micro switch	D4	400358
3	345127	micro switch	D6, D8	400359

 
Small appliances and single devices

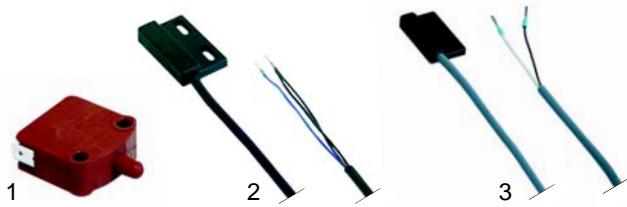


Item	Order	Description	Model	OEM
1	345060	micro switch	FT_, FF_	400547
2	345808	magnetic switch	FFS_bis1998, FFE_, FFM_, FFE Digital, FFM Digital	400906 101418
3	345217	magnetic switch	FFS_ab 1998	400857




Item	Order	Description	Model	OEM
1	380186	contactor	FT6/8	400640
2	380134	relay	FF21/41/42	400540
3	380185	relay	FF_	400559

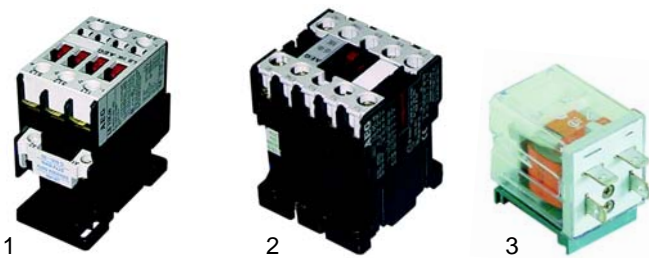 


Item	Order	Description	Model	OEM
1	380264	contactor	FF31, FFS31/41, FFE31/41, FFM31/41	400797
2	380238	contactor	FFS21/42, FFE21/42, FFM42	400796
3	380376	relay	FFS_, FFE, FFM_	400798

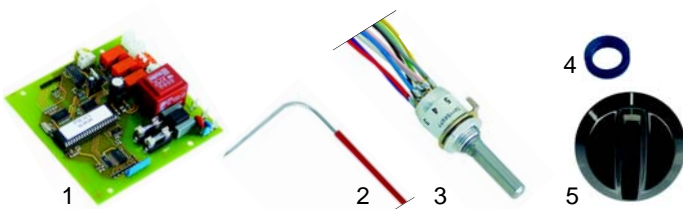 


Item	Order	Description	Model	OEM.
1	400844	control p.c.b.		101335
2	379909	sensor		600724
3	400849	switch	FFE ab 1998	101336
4	550490	gasket		400373
5	110880	knob		400545

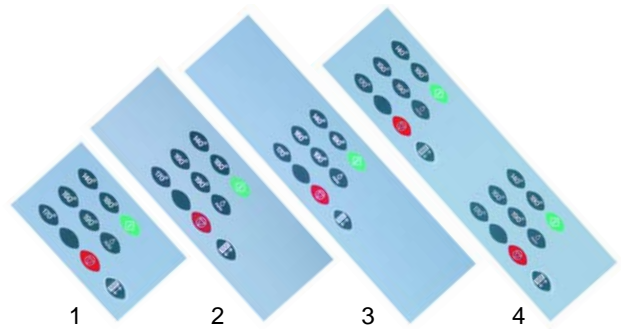 


Item	Order	Description	Model	OEM
1	400855	fascia	FFS21	300992
2	400856	fascia	FFS31	300993
3	400857	fascia	FFS41	300994
4	400858	fascia	FFS42	300995

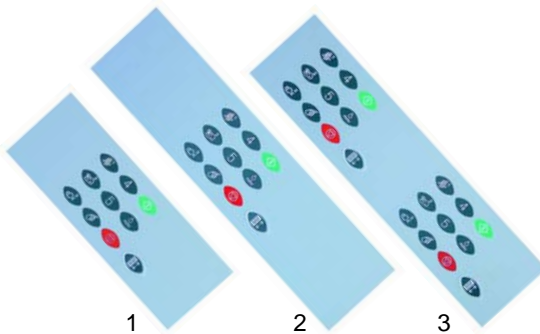 

Item	Order	Description	Model	OEM
1	400584	fascia	FFM31	300989
2	400586	fascia	FFM41	300990
3	400609	fascia	FFM42	300991

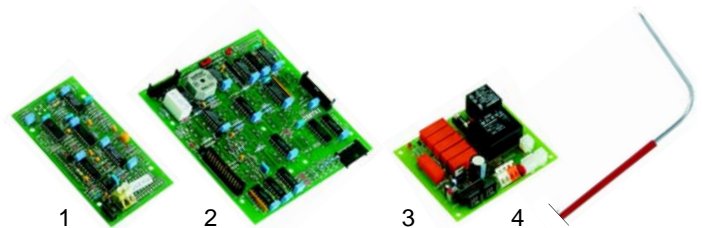 

Item	Order	Description	Model	OEM
1	400852	temperature control p.c.b.		300917
2	400853	main p.c.b.	FFS_	300916
3	400854	power p.c.b.	FFM_	300918
4	379909	sensor		600463

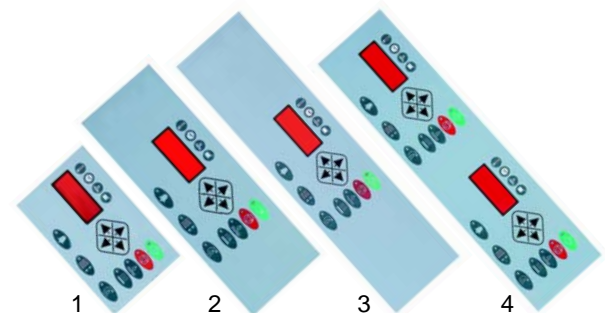 

Item	Order	Description	Model	OEM
1	400618	fascia	FFE21 Digital	301302
2	400633	fascia	FFE31 Digital	301303
3	400635	fascia	FFE41 Digital	301304
4	400636	fascia	FFE42 Digital	301305

Suitable for Fri Fri



Item	Order	Description	Model	OEM
1	400638	print digital display	FFE21 Digital,	101386
2	400650	control p.c.b.	FFE31 Digital,	101406
3	379909	sensor	FFE41 Digital, FFE42 Digital	600724



Item	Order	Description	Model	OEM
1	970176	260x130x100mm	114, 125, 126, 141, 142, 149, 214, 235, 236	300941
2	970287	260x140x100mm	ECO4	300941
3	970288	260x190x105mm	ECO6	300942



Item	Order	Description	Model	OEM
1	970177	225x220x100mm		
2	970178	250x130x100mm	D4/8, TF4, FT4	101010
3	970179	260x220x100mm	D6, TF5/6, FT6	300716




Item	Order	Description	Model	OEM
1	970289	340x140x155mm	FF21/41/42	100831
2	970290	340x105x155mm	FF31 (small)	301093
3	970291	340x220x155mm	FF31 (big)	100761




Pos.	Order	Description	Model	OEM
1	970180	275x160x135mm	E7, E8	600216

 
Salamander/pizza ovens

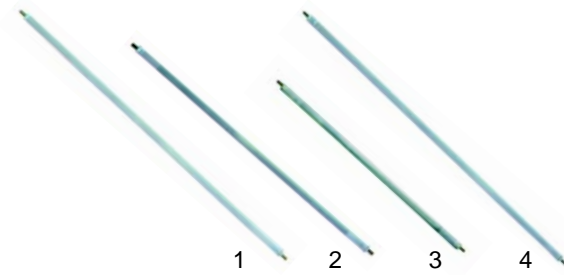


Item	Order	Description	Model	OEM
1	415301	190W/230V, 420mm	FU231	23050001
2	415302	400W/230V, 420mm	DUO, DUO Four	600005 400595
3	415309	400W/230V, 340mm	SAL I	12050000
4	415313	420W/230V, 450mm	SA II	25550001

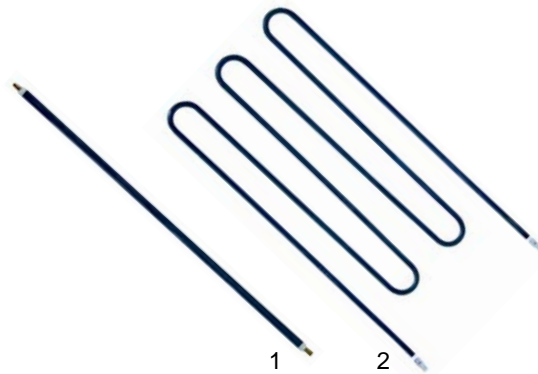 

Item	Order	Description	Model	OEM
1	416427	400W/230V	DUO, DUO Four (upper)	300009
2	416428	800W/230V (lower)	DUO Four	1406

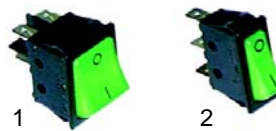 

Item	Order	Description	Model	OEM
1	301003	switch	DUO, DUO Four	400627
2	301012	switch	DUO Four	400553

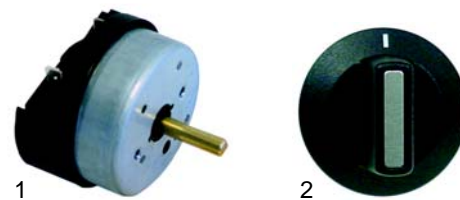 

Item	Order	Description	Model	OEM
1	350049	timer, 30 Min.	DUO, DUO Four	400765
2	110163	knob		09741069

GASTROPARTS.COM



© 2020 Gastroparts Sp. J. All rights reserved.