



GASTROPARTS

Haka

[EN] Cooking

[DE] Kochtechnik

[ES] Cocción

[FR] Cuisson

[IT] Cottura

[PL] Obróbka termiczna

[RU] Термическая обработка

✉ gastroparts@gastroparts.com

 
☎ tel. +48 56 657 00 66

📘 fb.com/gastroparts.global


GASTROPARTS.COM



Open tops (electric)

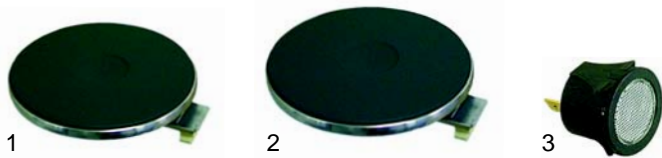

Item	Order	Description	Model	OEM
1	490016	2000W/230 V, 180mm	EEP400	9016
2	490020	2600W/230 V, 220mm		9017
3	359079	signal lamp		9060

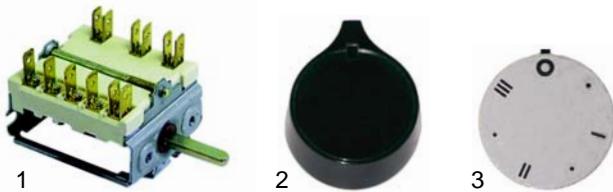 

Item	Order	Description	Model	OEM
1	300004	7-position switch	EEP400	300004
2	110191	knob		9029
3	110522	symbol		9035/1-6

Open tops/ceramic (electrical)




Item	Order	Description	Model	OEM
1	490024	1200W/230V, 140mm	ECT600,	
2	490025	1700W/230V, 180mm	ECT400,	
3	490028	2100W/230V, 210mm	ECT600	



Item	Order	Description	Model	OEM
1	380015	energy regulator (1-circuit)	ECT400,	
2	380027	energy regulator (2-circuit)		
3	110191	knob		
4	111881	symbol (1-circuit)		
5	111879	symbol (2-circuit)		

 
Fry tops (electric)

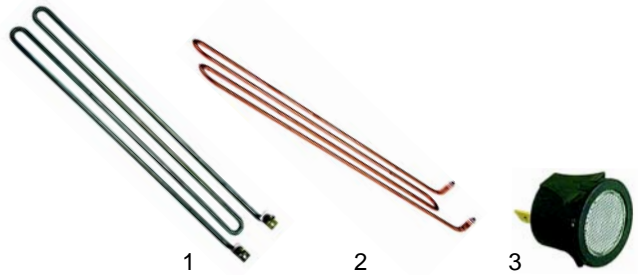

Item	Order	Description	Model	OEM
1	415633	1500W/230 V	EGT400/600	9005
2	418254	2250W/230 V		9006
3	359079	signal lamp		9060




Item	Order	Description	Model	OEM
1	300017	switch	EGT400,	9021
2	110191	knob	EGT600,	9029
3	111880	symbol/0 - I	EGT800, EGT500	9035/0 - I

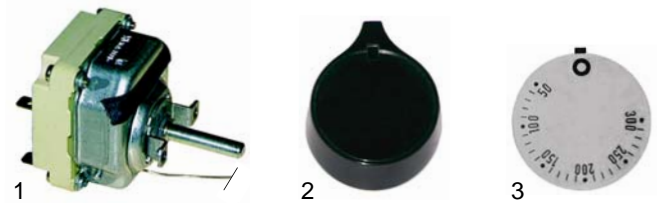 

Item	Order	Description	Model	OEM
1	375038	thermostat	EGT400,	9044
2	110191	knob	EGT600,	9029
3	110520	symbol	EGT800, EGT500	9035/0-300 C


Fry tops (electric) - ERB

 Chargrills (electric) - ERT, ERDT

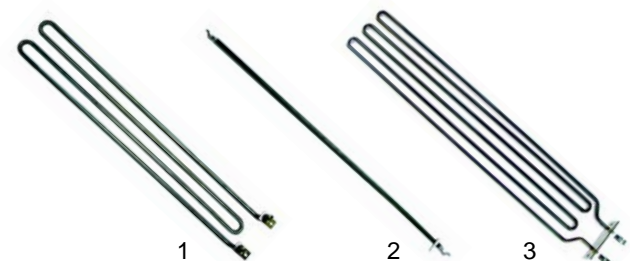

Item	Order	Description	Model	OEM
1	415633	1500W/230V	EBT400/600	9005
2	415644	400W/230V	ERT400/600/800	9013
3	418253	1260W/400V	ERDT400/600, ERDT800/1200	9025

 
Chip scuttle tops (electric)

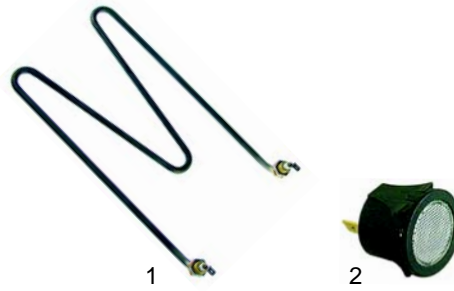

Item	Order	Description	Model	OEM
1	418252	1000W/230V	EFW400	9008
2	359079	signal lamp		9060



Item	Order	Description	Model	OEM
1	345635	energy regulator		9028
2	110191	knob	EBT_	9029
3	111881	symbol	ERT_	9035/1 - 3
4	359079	signal lamp	ERDT_	9060

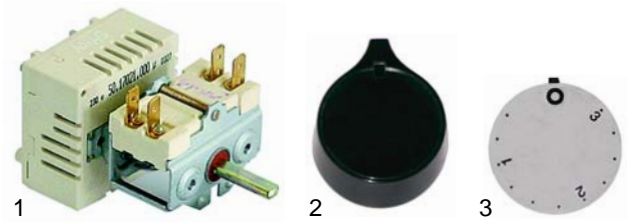 

Item	Order	Description	Model	OEM
1	345635	energy regulator		9028
2	110191	knob	EFW400	9029
3	111881	symbol		9035/1 - 3

Bains-marie (electric)



Item	Order	Description	Model	OEM
1	415428	1500W/230V	EWT400,	9007
2	359079	signal lamp	EWT600	9060



Item	Order	Description	Model	OEM
1	375001	thermostat		9040
2	110191	knob	EWT400,	9029
3	110517	symbol	EWT600	9035/110 C

Fryers (electric)




Item	Order	Description	Model	OEM
1	415630	6000W/400V	EFT-25	9004
2	418251	3500W/400V	EFT-5/-8	9036
3	359079	signal lamp	universal	9060



Item	Order	Description	Model	OEM
1	300074	switch		9020
2	110191	knob	EWT400,	9029
3	111880	symbol	EWT600	9035/0 - I



Item	Order	Description	Model	OEM
1	415631	4000W/400V	EFT-10	9048
2	415632	6000W/400V	EFT-12	9049
3	359079	signal lamp	universal	9060

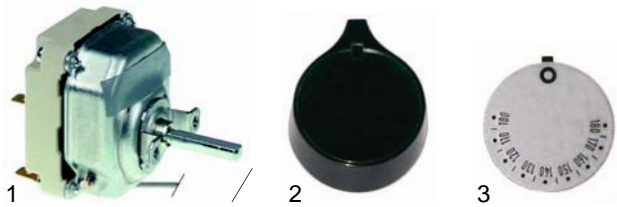 

Item	Order	Description	Model	OEM
1	375022	thermostat		9042
2	110191	knob	EFT-__	9029
3	110518	symbol		9035/180 C
4	375704	safety thermostat		9047



Item	Order	Description	Model	OEM
1	300017	switch		9021
2	110191	knob	EFT-__	9029
3	111880	symbol		9035/0 - I

Fryers (mechanical)




Item	Order	Description	Model	OEM
1	970443	110x235x130mm (5)	EFT5/8	8119
2	970444	195x240x130mm (8)		8118
3	970254	170x300x110mm (10)	EFT10	8114



Item	Order	Description	Model	OEM
1	970445	210x300x130mm	EFT12	8133
2	970446	250x225x120mm	EFT25	8134
3	970447	340x295x130mm		8131

 Chicken grills

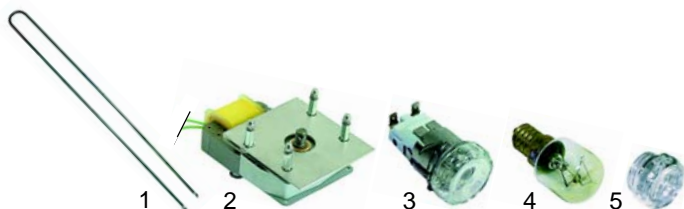

Item	Order	Description	Model	OEM
1	415749	1500W/230V		9011
2	500492	motor, 20W		9135
3	359718	bulb + housing/complete	106, 115, 206	9063
4	359610	lamp, 15W/230V		9064
5	359709	lens nipple		9058



Item	Order	Description	Model	OEM
1	350030	timer		9026
2	110191	knob		9029
3	111882	symbol		9035/Zeit




Order	Description	Model	OEM
1	300074	switch	9020
2	110191	knob	9029
3	111880	symbol	9035/0-I



Item	Order	Description	Model	OEM
1	359084	double signal lamp/new design		9061
2	359079	signal lamp		9060

 Gyros grills

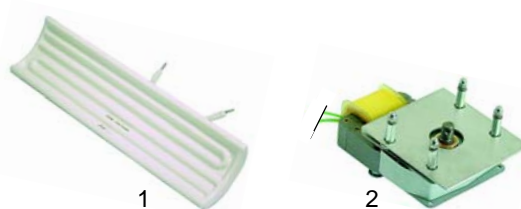


Item	Order	Description	Model	OEM
1	415103	650W/230V		9187
1	415104	1000W/230V	5025	9184
2	500492	motor complete		9135




Item	Order	Description	Model	OEM
1	300007	4-position switch		9022
2	110191	knob	5025	9029
3	110521	symbol		9035/0-3

 Salamander

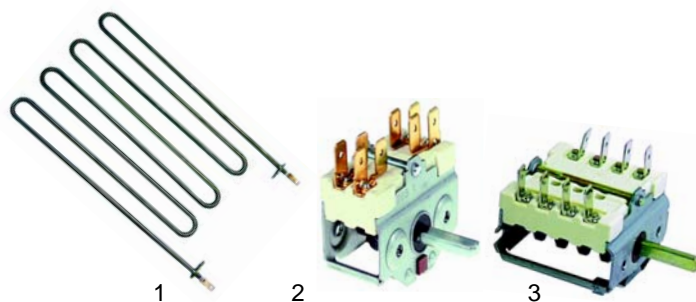

Item	Order	Description	Model	OEM
1	415645	2250W/230V		9019
2	300074	switch, 2-pole	102, 103	9020
3	300017	switch, 4-pole		9021

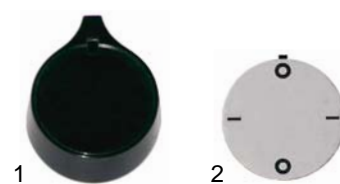 


Item	Order	Description	Model	OEM
1	110191	knob		9029
2	111880	symbol	102, 103	9035/0-I

Small appliances and single devices




Item	Order	Description	Model	OEM
1	359718	bulb + housing, KD		9063
2	359610	lamp, 15W	103	9064
3	359709	lens nipple		9058
4	359079	signal lamp	102, 103	9060

 Fry tops

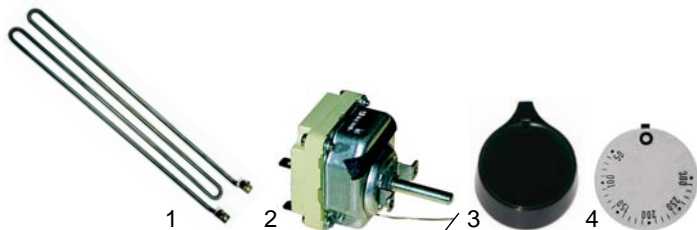


Item	Order	Description	Model	OEM
1	415633	1500W/230V		9005
2	375038	thermostat, 3-pole	3301, 3302, 3202, 3315, 3316, 3216	9044
3	110191	knob		9029
4	110520	symbol		9035/300

 Chargrills

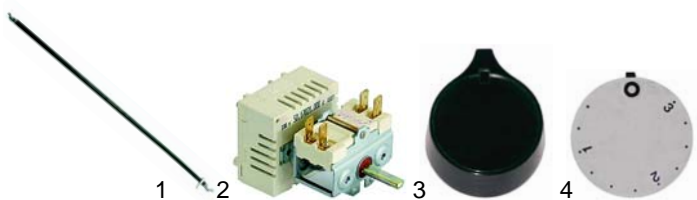


Item	Order	Description	Model	OEM
1	415644	400W/230V		9013
2	345635	energy regulator	3331, 3332, 3232, 3334, 3234, 3134	9028
3	110191	knob		9029
4	111881	symbol		9035/1-10

 Cooking stoves

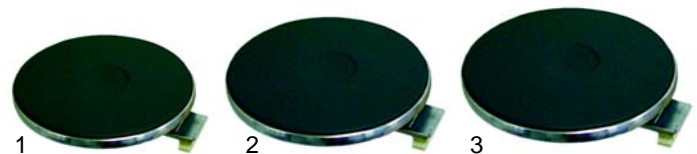


Item	Order	Description	Model	OEM
1	490016	2000W/230V, 180mm	360/1310, 36D/1320, 36D/1120	9016
2	490020	2600W/230V, 220mm		9017
3	490061	2500W/230V, 300mm	EPN-300L	9030

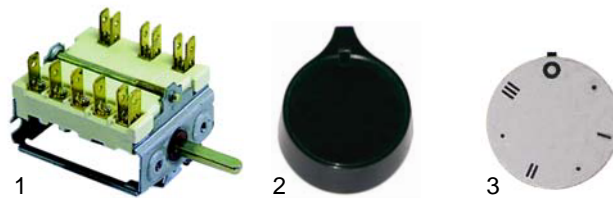 


Item	Order	Description	Model	OEM
1	300004	7-position switch	36D/1310, 36D/1320, 36D/1120, EPN-300L	9023
2	110191	knob		9029
3	110522	symbol		9035/1-6

 Bains-marie

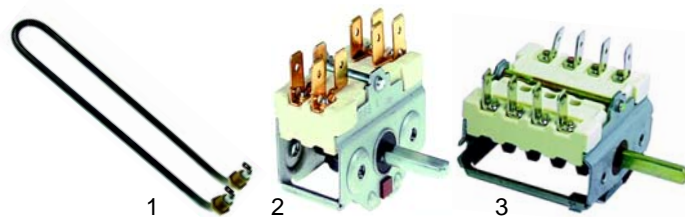

Item	Order	Description	Model	OEM
1	415428	1500W/230V	4301, 4302, 4303, 4102, 4106, 4107, 4108, 4202, 4206, 4207, 4208, 4306, 4307, 4308	9007
2	300074	switch, 2-pole		9020
3	300017	switch, 4-pole		9021

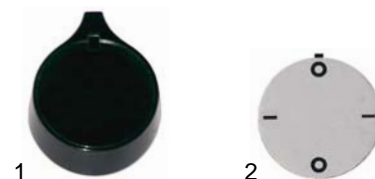 

Item	Order	Description	Model	OEM
1	110191	knob	4301, 4302, 4303, 4102, 4106, 4107, 4108, 4202, 4206, 4207, 4208, 4306, 4307, 4308	9029
2	111880	symbol, 0-I		9035/0-1



Item	Order	Description	Model	OEM
1	359079	signal lamp/complete	4301, 4302, 4303, 4102, 4106, 4107, 4108, 4202, 4206, 4207, 4208, 4306, 4307, 4308	9060
2	375001	thermostat, 1-pole		9040
3	375143	thermostat, 3-pole		9041




Item	Order	Description	Model	OEM
1	110191	knob	4301, 4302, 4303, 4102, 4106, 4107, 4108, 4202, 4206, 4207, 4208, 4306, 4307, 4308	9029
2	110517	symbol, 110 C		9035/110

Fryers



Item	Order	Description	Model	OEM
1	415628	3000W/230 V	2297, 2299	9002
2	415629	4500W/400 V	2298, 2303, 2305, 2203, 2103, 2300	9003
3	415630	6000W/400 V	2302, 2304, 2305, 2202	9004

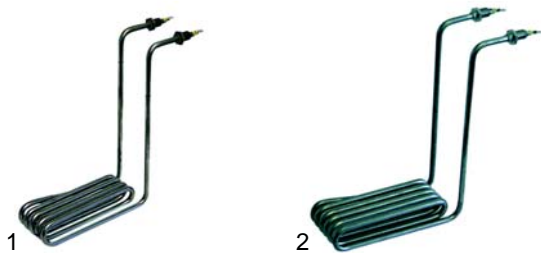 

Item	Order	Description	Model	OEM
1	415626	2500W/400 V	2307, 2207	9000
2	415627	3500W/400 V		9001



Item	Order	Description	Model	OEM
1	300017	switch, 4-pole		9021
2	110191	knob		9029
3	111880	symbol 0/I		9035/0-1
4	359079	signal lamp		9060



Item	Order	Description	Model	OEM
1	375022	thermostat, 180		9042
2	110191	knob		9029
3	110518	symbol, 180		9035/180
4	375704	safety thermostat		9047

Fryer baskets



Item	Order	Description	Model	OEM
1	970245	200x220x120mm	2297/98/99	8101
2	970246	110x240x130mm	2300, 2307, 2207	8104
3	970247	195x240x130mm	2307, 2207	8111



Item	Order	Description	Model	OEM
1	970248	210x300x130mm	2302, 2202, 2304	8112
2	970250	150x225x120mm		8106
3	970254	170x300x130mm	2305	8114



Item	Order	Description	Model	OEM
1	970256	340x310x130mm	2303, 2203, 2103,	8103
2	970257	150x270x120mm	2103, 2305	8107

GASTROPARTS.COM



© 2020 Gastroparts Sp. J. All rights reserved.