



**GASTROPARTS**

# Roka

**[EN]** Cooking

**[DE]** Kochtechnik

**[ES]** Cocción

**[FR]** Cuisson

**[IT]** Cottura

**[PL]** Obróbka termiczna

**[RU]** Термическая обработка

✉ [gastroparts@gastroparts.com](mailto:gastroparts@gastroparts.com)

☎ tel. +48 56 657 00 66

📘 [fb.com/gastroparts.global](https://fb.com/gastroparts.global)

 
**GASTROPARTS.COM**



## Open tops (electric)



Item	Order	Description	Model	OEM
1	490016	2000W/230V	4804	8900371
2	490020	2600W/230V		8900370

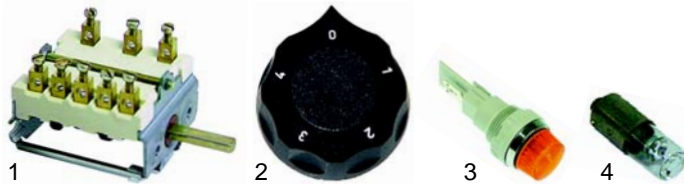


Item	Order	Description	Model	OEM
1	300025	switch (7-tacts)	4804	8900220
2	110111	knob		-
3	359854	signal lamp		8900426
4	359606	glow lamp		-

## Fry tops (electric)



 Item	Order	Description	Model	OEM
1	418235	1600W/230V	1805	8900322
2	418234	1200W/230V	1807	8900323
3	359854	signal lamp	universal	-
4	359606	glow lamp		-

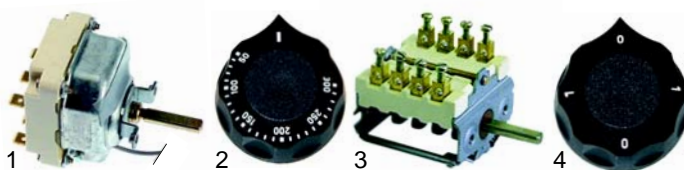

Item	Order	Description	Model	OEM
1	375693	thermostat	1805, 1807	8900211
2	110114	knob, 300 C		-
3	300021	switch		8900302
4	110113	knob		-

## Chargrills (electric)



Item	Order	Description	Model	OEM
1	415676	400W/230V	1505, 1507, 1509, 1511	8900326
2	211071	shelf		8900580
3	380213	contactor		8900310

 


Item	Order	Description	Model	OEM
1	380015	energy regulator	1505, 1507,	8900215
2	110117	knob		-
3	359855	signal lamp/green	1509,	8900425
4	359854	signal lamp/yellow	1511	8900426
5	359606	glow lamp		

## Bratt pans (electric)




Item	Order	Description	Model	OEM
1	418234	1200W/230V	2404, 2414	8900323
2	359855	signal lamp		8900425
3	359606	glow lamp		

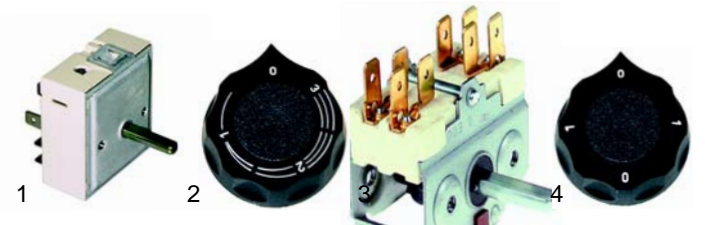


Item	Order	Description	Model	OEM
1	380015	energy regulator	2404, 2414	8900215
2	110117	knob		-
3	300074	switch		8900301
4	110113	knob		

## Bains-marie

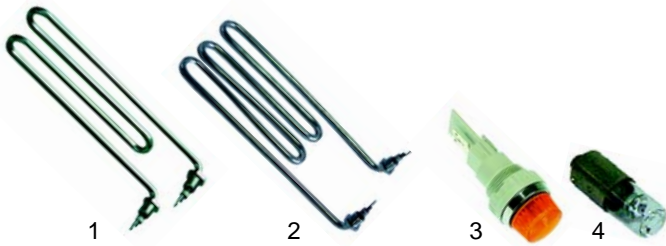 


Item	Order	Description	Model	OEM
1	415675	2000W/230V	2704 (old)	8900341
2	415375	3000W/230V	2707 (old)	8900342
3	359854	signal lamp	universal	8900425
4	359606	glow lamp		-


## Fryers (electric)

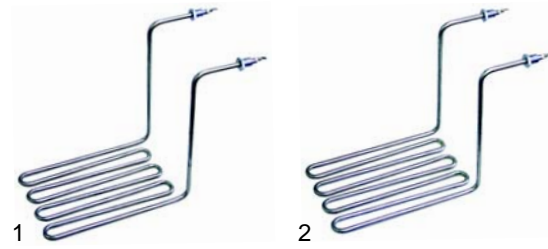 


Item	Order	Description	Model	OEM
1	415365	3300W/230V (outer)	old devices	-
2	415366	3300W/230V (inner)		-

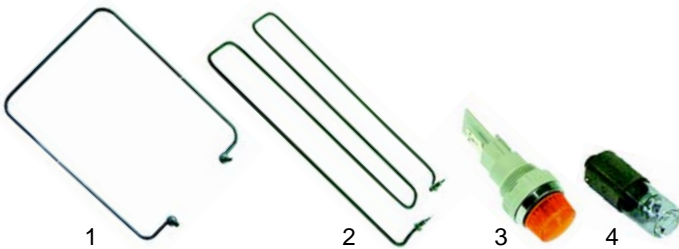 


Item	Order	Description	Model	OEM
1	415669	2000W/230V	2704 (new)	8900324
2	415672	3000W/230V	2707 (new)	8900325
3	359854	signal lamp	universal	8900425
4	359606	glow lamp		-

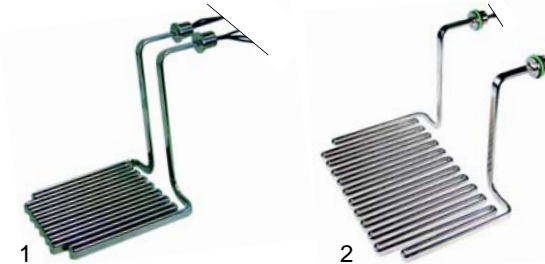 

Item	Order	Description	Model	OEM
1	415792	6000W/400V	1004, 1006	8900350
2	418237	9900W/400V	1005	8900351

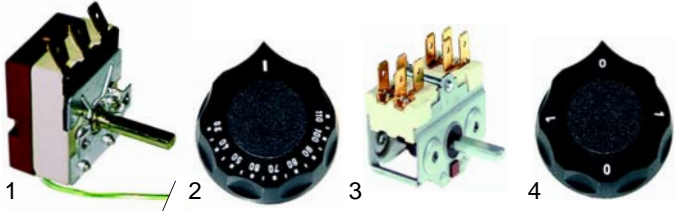 


Item	Order	Description	Model	OEM
1	375007	thermostat		8900202
2	110116	knob	2704,	-
3	300074	switch	2707	8900301
4	110113	knob		-

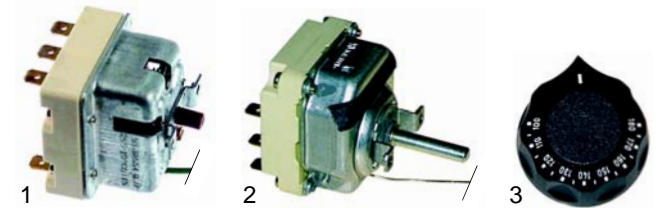 

Item	Order	Description	Model	OEM
1	375694	safety thermostat	1004,	8900253
2	375512	thermostat	1005,	8900210
3	110115	knob	1006	-


## Chip scuttle tops

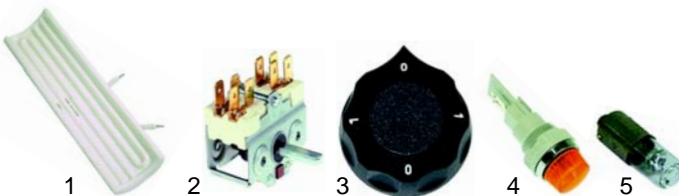 

Item	Order	Description	Model	OEM
1	415103	650W/230V		8900319
2	300074	switch		8900301
3	110113	knob	3204	-
4	359854	signal lamp		8900425
5	359606	glow lamp		-




Item	Order	Description	Model	OEM
1	300021	switch		8900302
2	110113	knob	1004,	-
3	359854	signal lamp	1005,	8900425
4	359606	glow lamp	1006	-

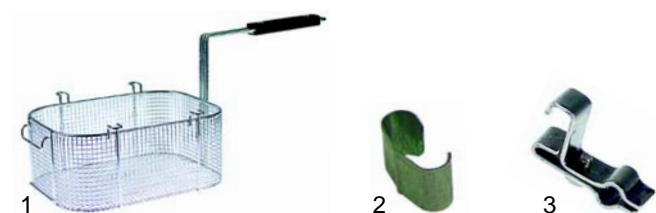 


Item	Order	Description	Model	OEM
1	970441	fryer basket		8900104
2	550004	capillary pipe clamp		8900541
3	550043	sensor clamp		8999998

## Salamander (electric)

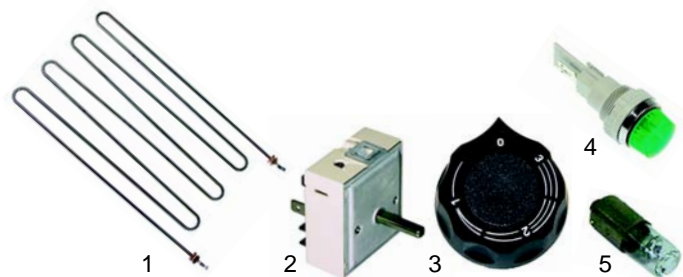 


Item	Order	Description	Model	OEM
1	418236	2600W/230V		3900328
2	380015	energy regulator		8900215
3	110117	knob	6397	
4	359855	signal lamp/green		8900425
5	359606	glow lamp		8900425

## Hot cupboards

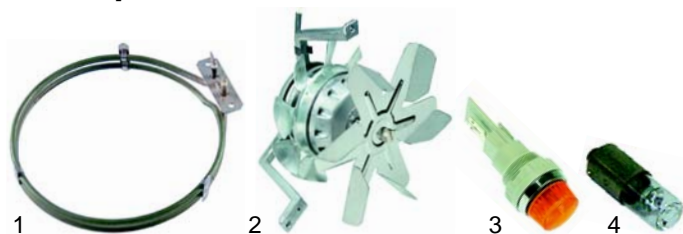 


Item	Order	Description	Model	OEM
1	418240	1300W/230V		8900327
2	601151	motor/complete		8900360
3	359854	signal lamp		8900426
5	359606	glow lamp		-

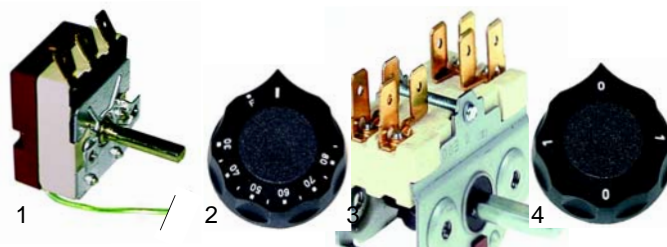 

Item	Order	Description	Model	OEM
1	375005	thermostat		8900203
2	110109	knob		-
3	300074	switch		8900301
4	110113	knob		-

## Food warmers

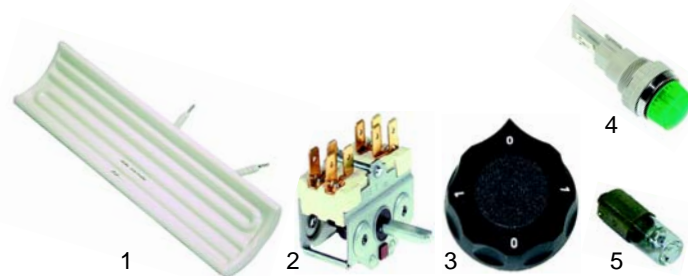 

Item	Order	Description	Model	OEM
1	415102	400W/230V		8900380
2	300074	switch		8900301
3	110113	knob		
4	359855	signal lamp/green		8900425
5	359606	glow lamp		-



**GASTROPARTS.COM**



© 2020 Gastroparts Sp. J. All rights reserved.