





**HOBART**



**BCE10KI**  
Electric Kettle

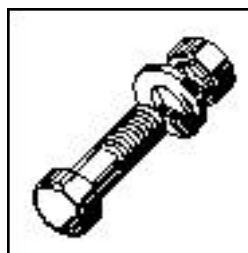

 **Spare Parts**

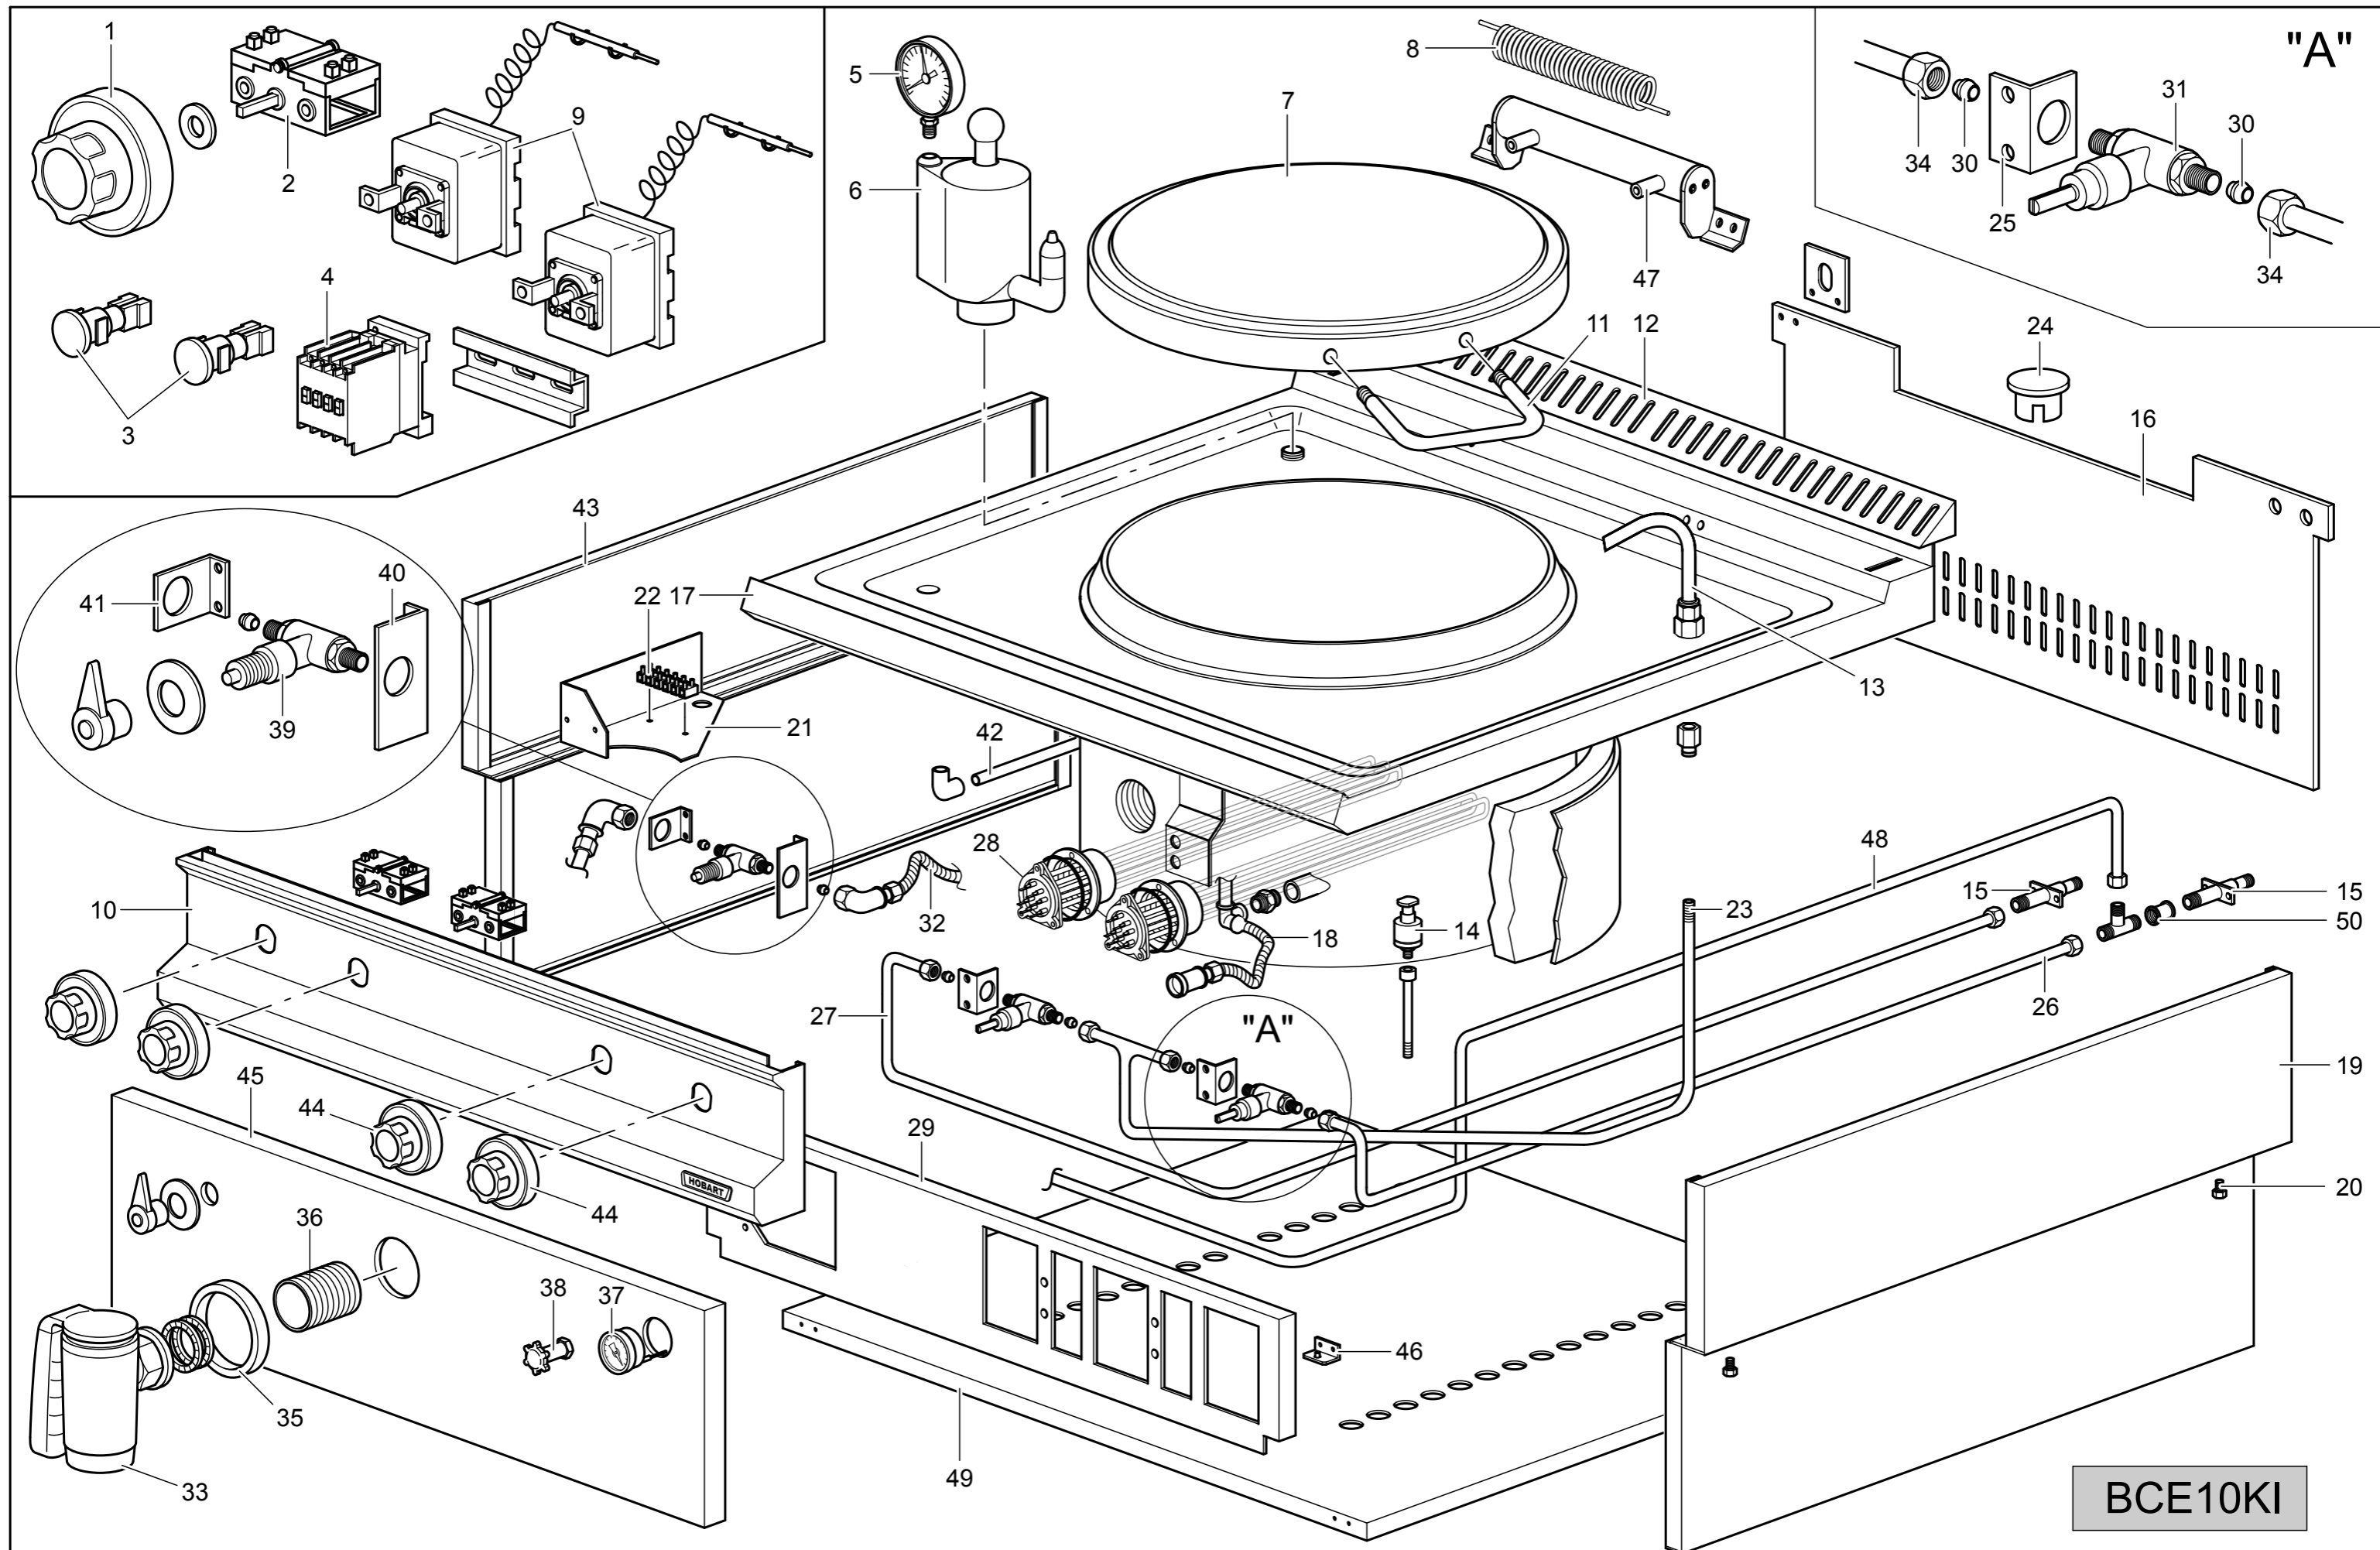

**HOBART**

BCE10KI  
TAV. 940

Key N°	Part N°	Description
1	161227	(R) COMMUTATOR KNOB
	163075	(R) RING
2	RTCP900036	(R) COMMUATOR
3	RTCU900290	(R) GREEN WARNING LIGHT
4	RTFOC00466	(R) RELAY
5	RTCP900036	MANOMETER
6	RTCP800064	SAFETY VALVE
7	160925	COVER
8	RTCP800026	HINGE SPRING
9	RTCP900074	(R) T.L.E100I/T138
10	163200	CONTROL PANEL
11	160676	COVER HANDLE
12	163221	CHIMMEY GRILL
13	RTCP800024	WATER DISTRIBUTOR
14	RTCP800143	(R) PRESSURE SWITCH
15	GACP900023	WATER CONNECTION
16	160435	FRONT CROSSBAR
17	165346	BOWL
18	RTCP800163	PIPE FLEXIBLE
19	160433	SIDE PANEL RIGHT
20	RTCU700324	FOOT
21	164651	TERMINAL BLOCK BRACKET
22	RTBF900045	TERMINAL BOARD
23	160940	WATER FEEDING PIPE
24	163603	PLUG
25	160652	CREW
26	163027	COLD WATER FEEDING PIPE
27	163026	HOT WATER FEEDING PIPE
28	RTCP800008	ELEMENT
29	160436	BACK CROSSBAR
30	RTCU900012	BICONE D.10
31	RTCP700003	WATER TAP
32	PACP800010	PIPE FLEXIBLE
33	RTCP900004	DISCHARGE TAP
34	RTCU900013	CAP D.10
35	RTCP900018	BOSS
36	160927	NIPLES
37	161827	THERMOMETER
38	RTCP800065	LEVEL COCK
39	RTCP700003	WATER TAP
40	PACU701041	CREW
41	PACU701040	CREW
42	160941	WATER DISCHARGE PIPE
43	160434	SIDE PANEL LEFT

(R) = - Recommended spare parts

Key N°	Part N°	Description
44	163114	(R) SAFETY VALVE KNOB
	163085	(R) RING
	163114	(R) SAFETY VALVE KNOB
	163079	(R) RING
45	161004	EXTERNAL FACE
46	160028	BRACKET FOR FIXING CONTROL PANEL
47	160932	COMPLETE HINGE
48	165421	FEEDING PIPE
49	160413	LOWER PLANE
50	RTCU700629	THREADED BUSH 3/8"

(R) = - Recommended spare parts