 





**HOBART**



**BME10KI**  
Electric Kettle

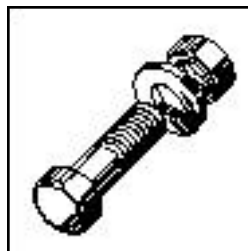

 **Spare Parts**

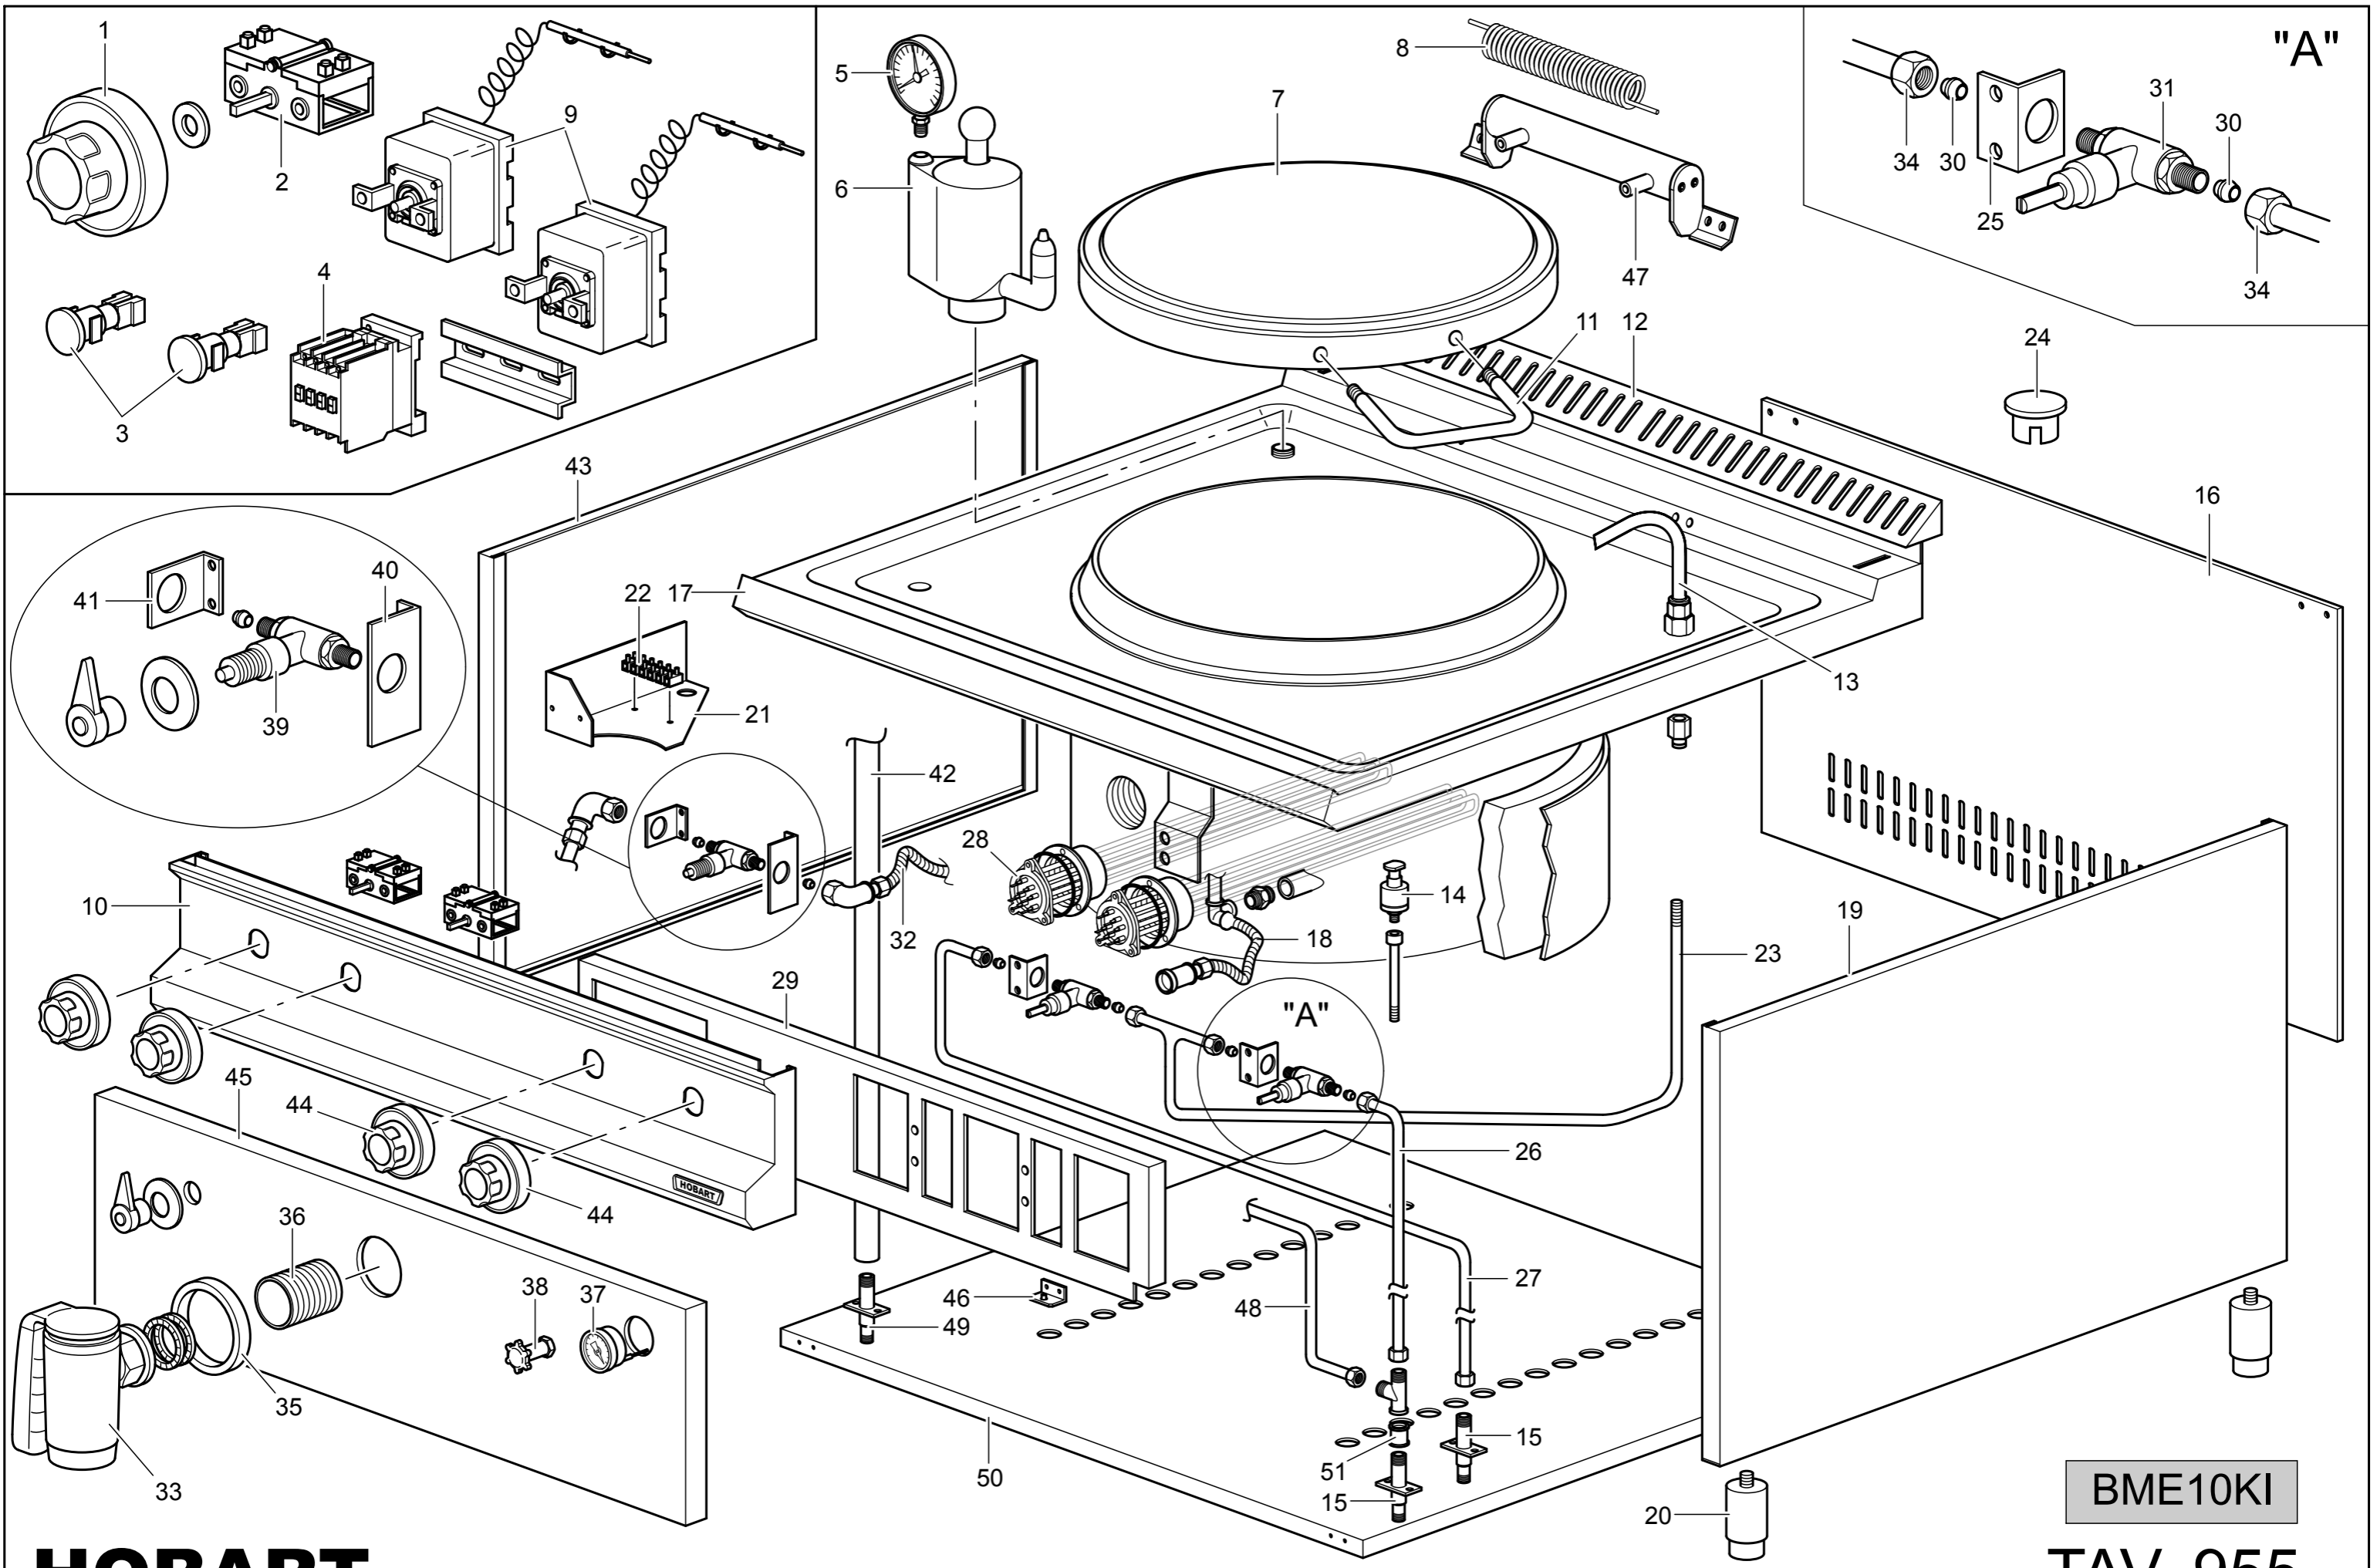

**HOBART**

BME10KI

TAV. 955

Key N°	Part N°	Description
1	161227	(R) COMMUTATOR KNOB
	163075	(R) RING
2	RTCP900036	(R) COMMUATOR
3	RTCU900290	(R) GREEN WARNING LIGHT
4	RTFOC00466	(R) RELAY
5	RTCP900063	MANOMETER
6	RTCP800064	SAFETY VALVE
7	160925	COVER
8	RTCP800026	HINGE SPRING
9	RTCP900074	(R) T.L./T138
10	163200	CONTROL PANEL
11	160676	COVER HANDLE
12	163221	CHIMMEY GRILL
13	RTCP800024	WATER DISTRIBUTOR
14	RTCP800143	(R) PRESSURE SWITCH
15	GACP900023	WATER CONNECTION
16	162680	STAINLESS STEEL BACK PANEL
17	165346	BOWL
18	RTCP800163	PIPE FLEXIBLE
19	162676	SIDE PANEL RIGHT
20	162267	FOOT
21	164651	TERMINAL BLOCK BRACKET
22	RTBF900045	TERMINAL BOARD
23	160940	WATER FEEDING PIPE
24	163603	PLUG
25	160652	SCREW
26	164807	COLD WATER FEEDING PIPE
27	164806	HOT WATER FEEDING PIPE
28	RTCP800008	ELEMENT
29	160436	BACK CROSSBAR
30	RTCU900012	BICONE D.10
31	RTCP700003	WATER TAP
32	PACP800010	PIPE FLEXIBLE
33	RTCP900004	DISCHARGE TAP
34	RTCU900013	CAP D.10
35	RTCP900018	BOSS
36	160927	NIPLES
37	161827	THERMOMETER
38	RTCP800065	LEVEL COCK
39	RTCU600075	WATER TAP
40	PACU701041	SCREW
41	PACU701040	SCREW
42	MPGOM27T00	RUBBER PIPE
43	162677	SIDE PANEL LEFT

(R) = - Recommended spare parts

Key N°	Part N°		Description
44	163114	(R)	SAFETY VALVE KNOB
	163085	(R)	RING
	163114	(R)	SAFETY VALVE KNOB
	163079	(R)	RING
45	165002		EXTERNAL FACE
46	160028		BRACKET FOR FIXING CONTROL PANEL
47	160932		COMPLETE HINGE
48	165421		FEEDING PIPE
49	164809		WATER DISCHARGE CONNECTION
50	160413		LOWER PLANE
51	RTCU700629		THREADED BUSH 3/8"

(R) = - Recommended spare parts