




HOBART




BCG15KI
Gas Kettle

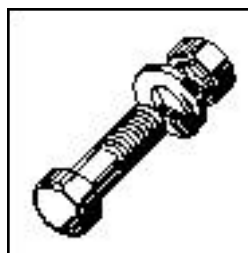

Spare Parts


"A"

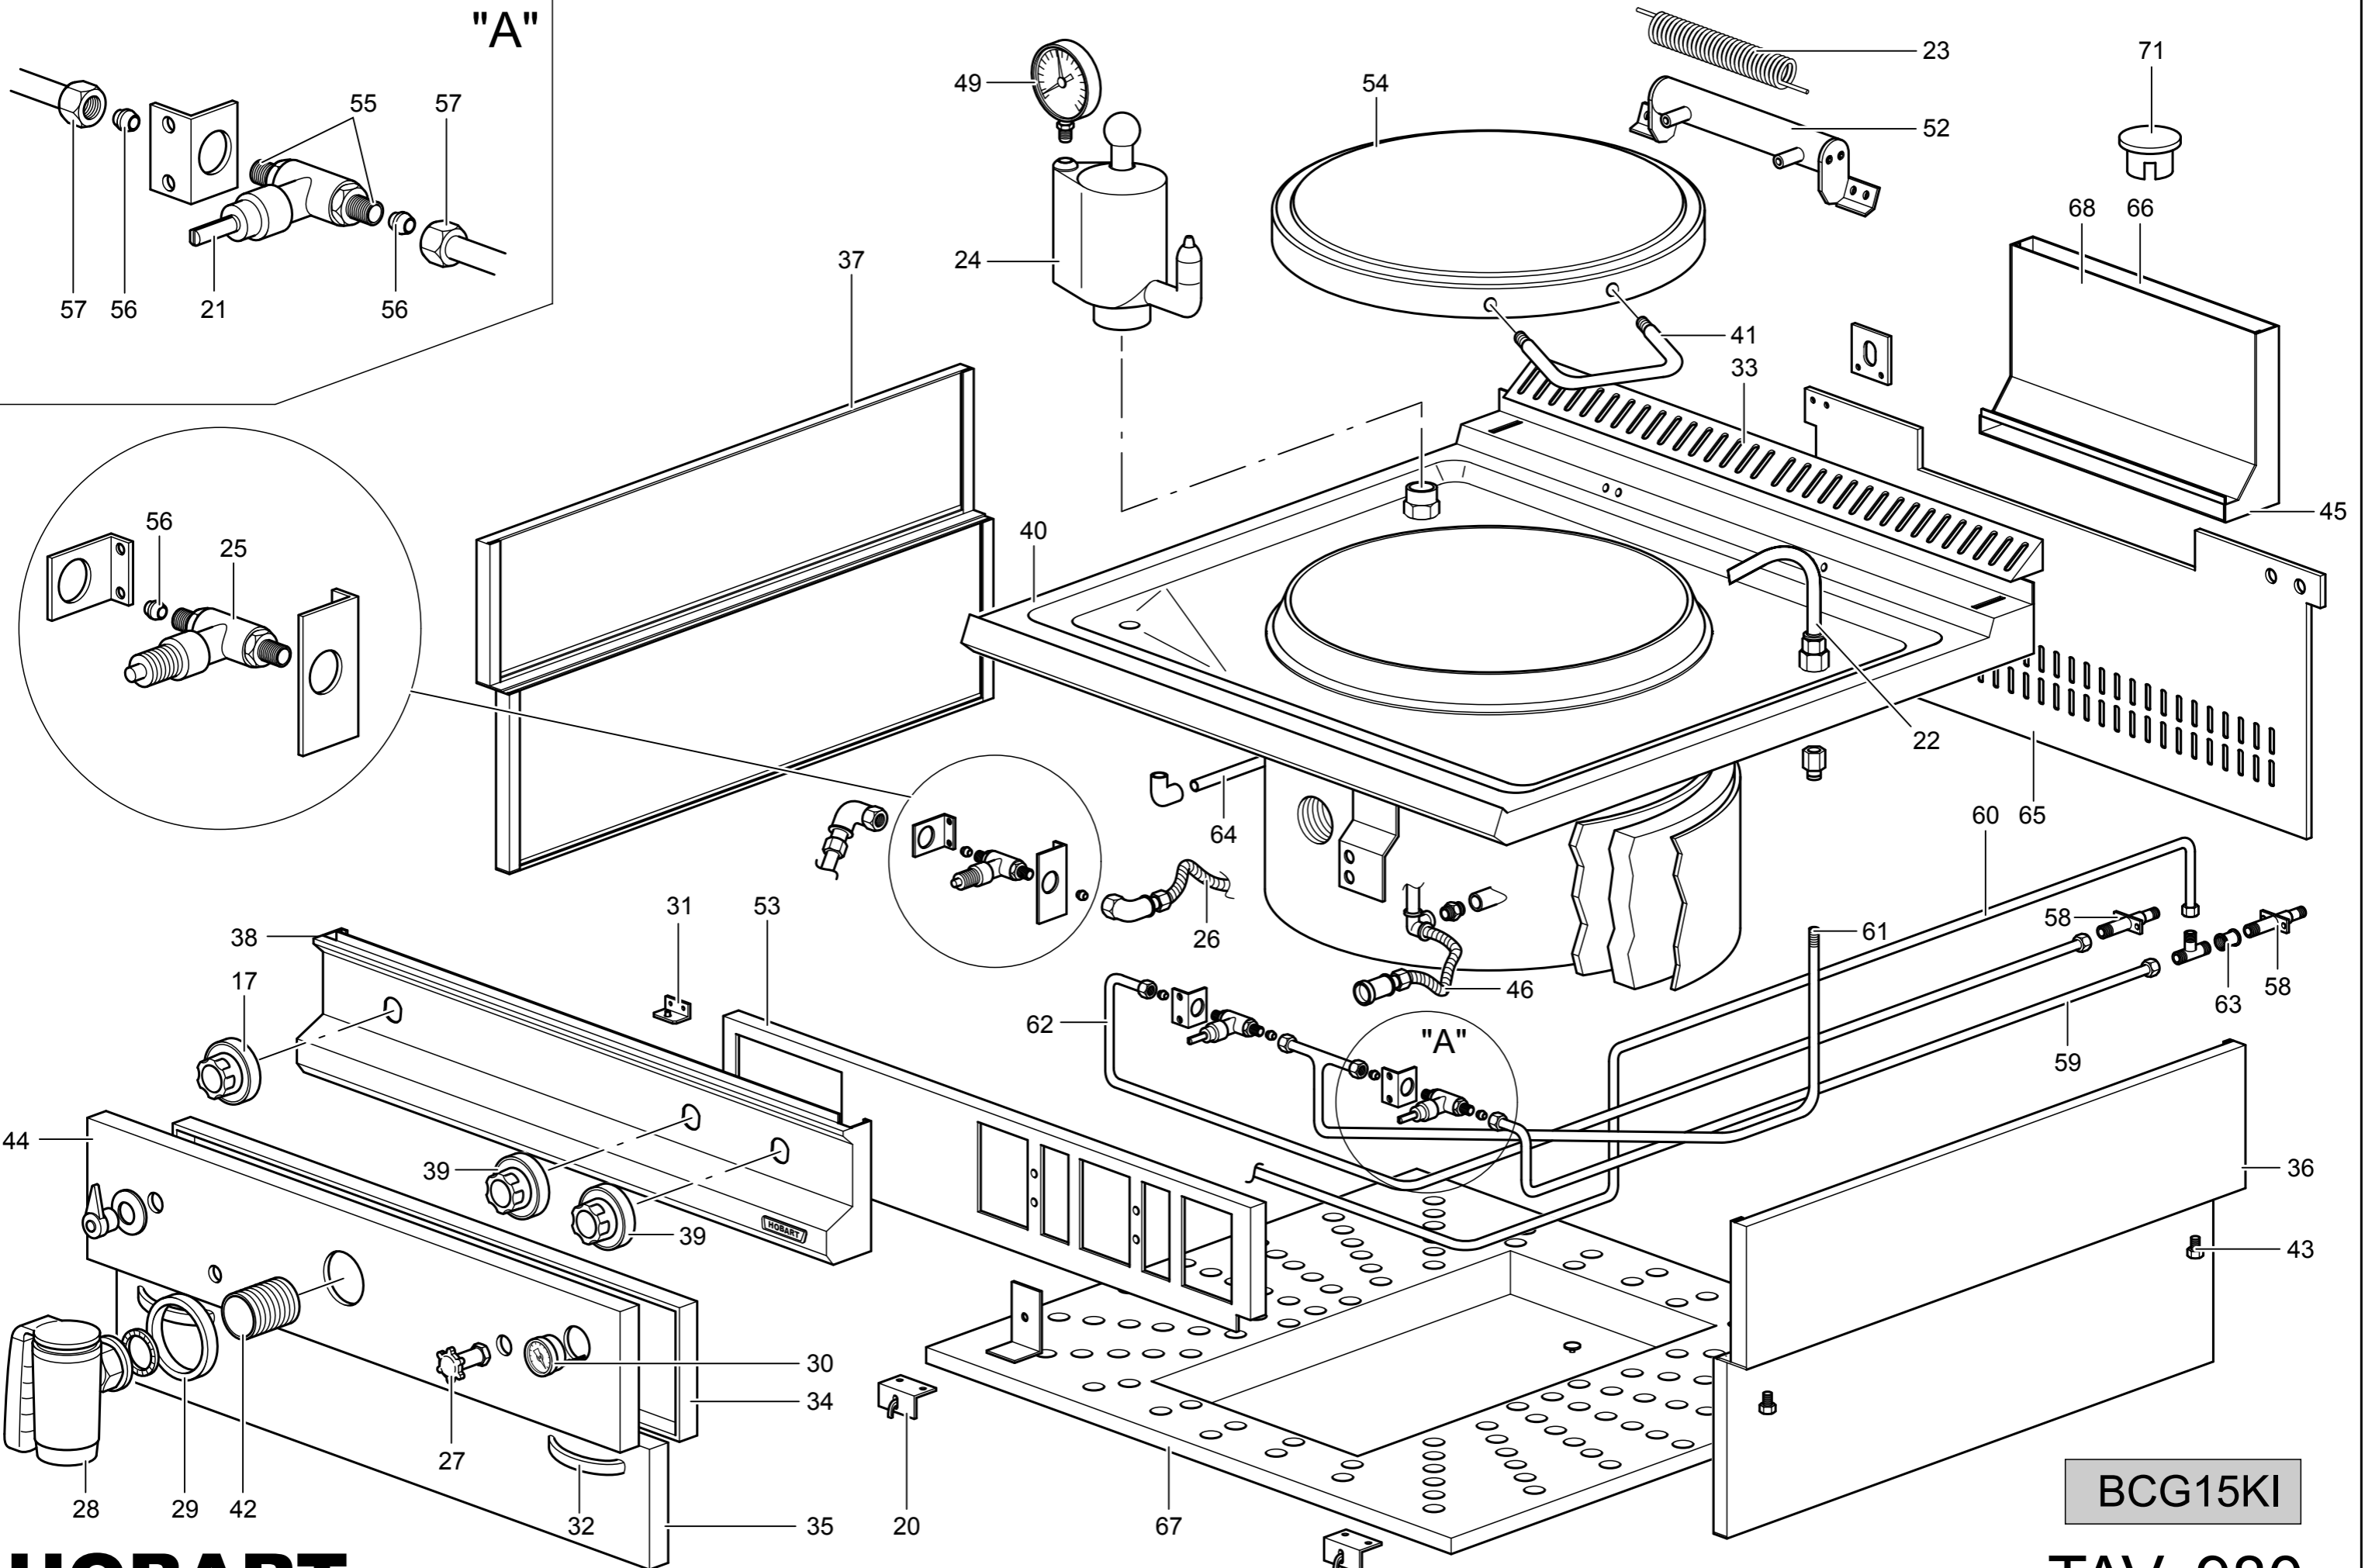

HOBART

BCG15KI

TAV. 980

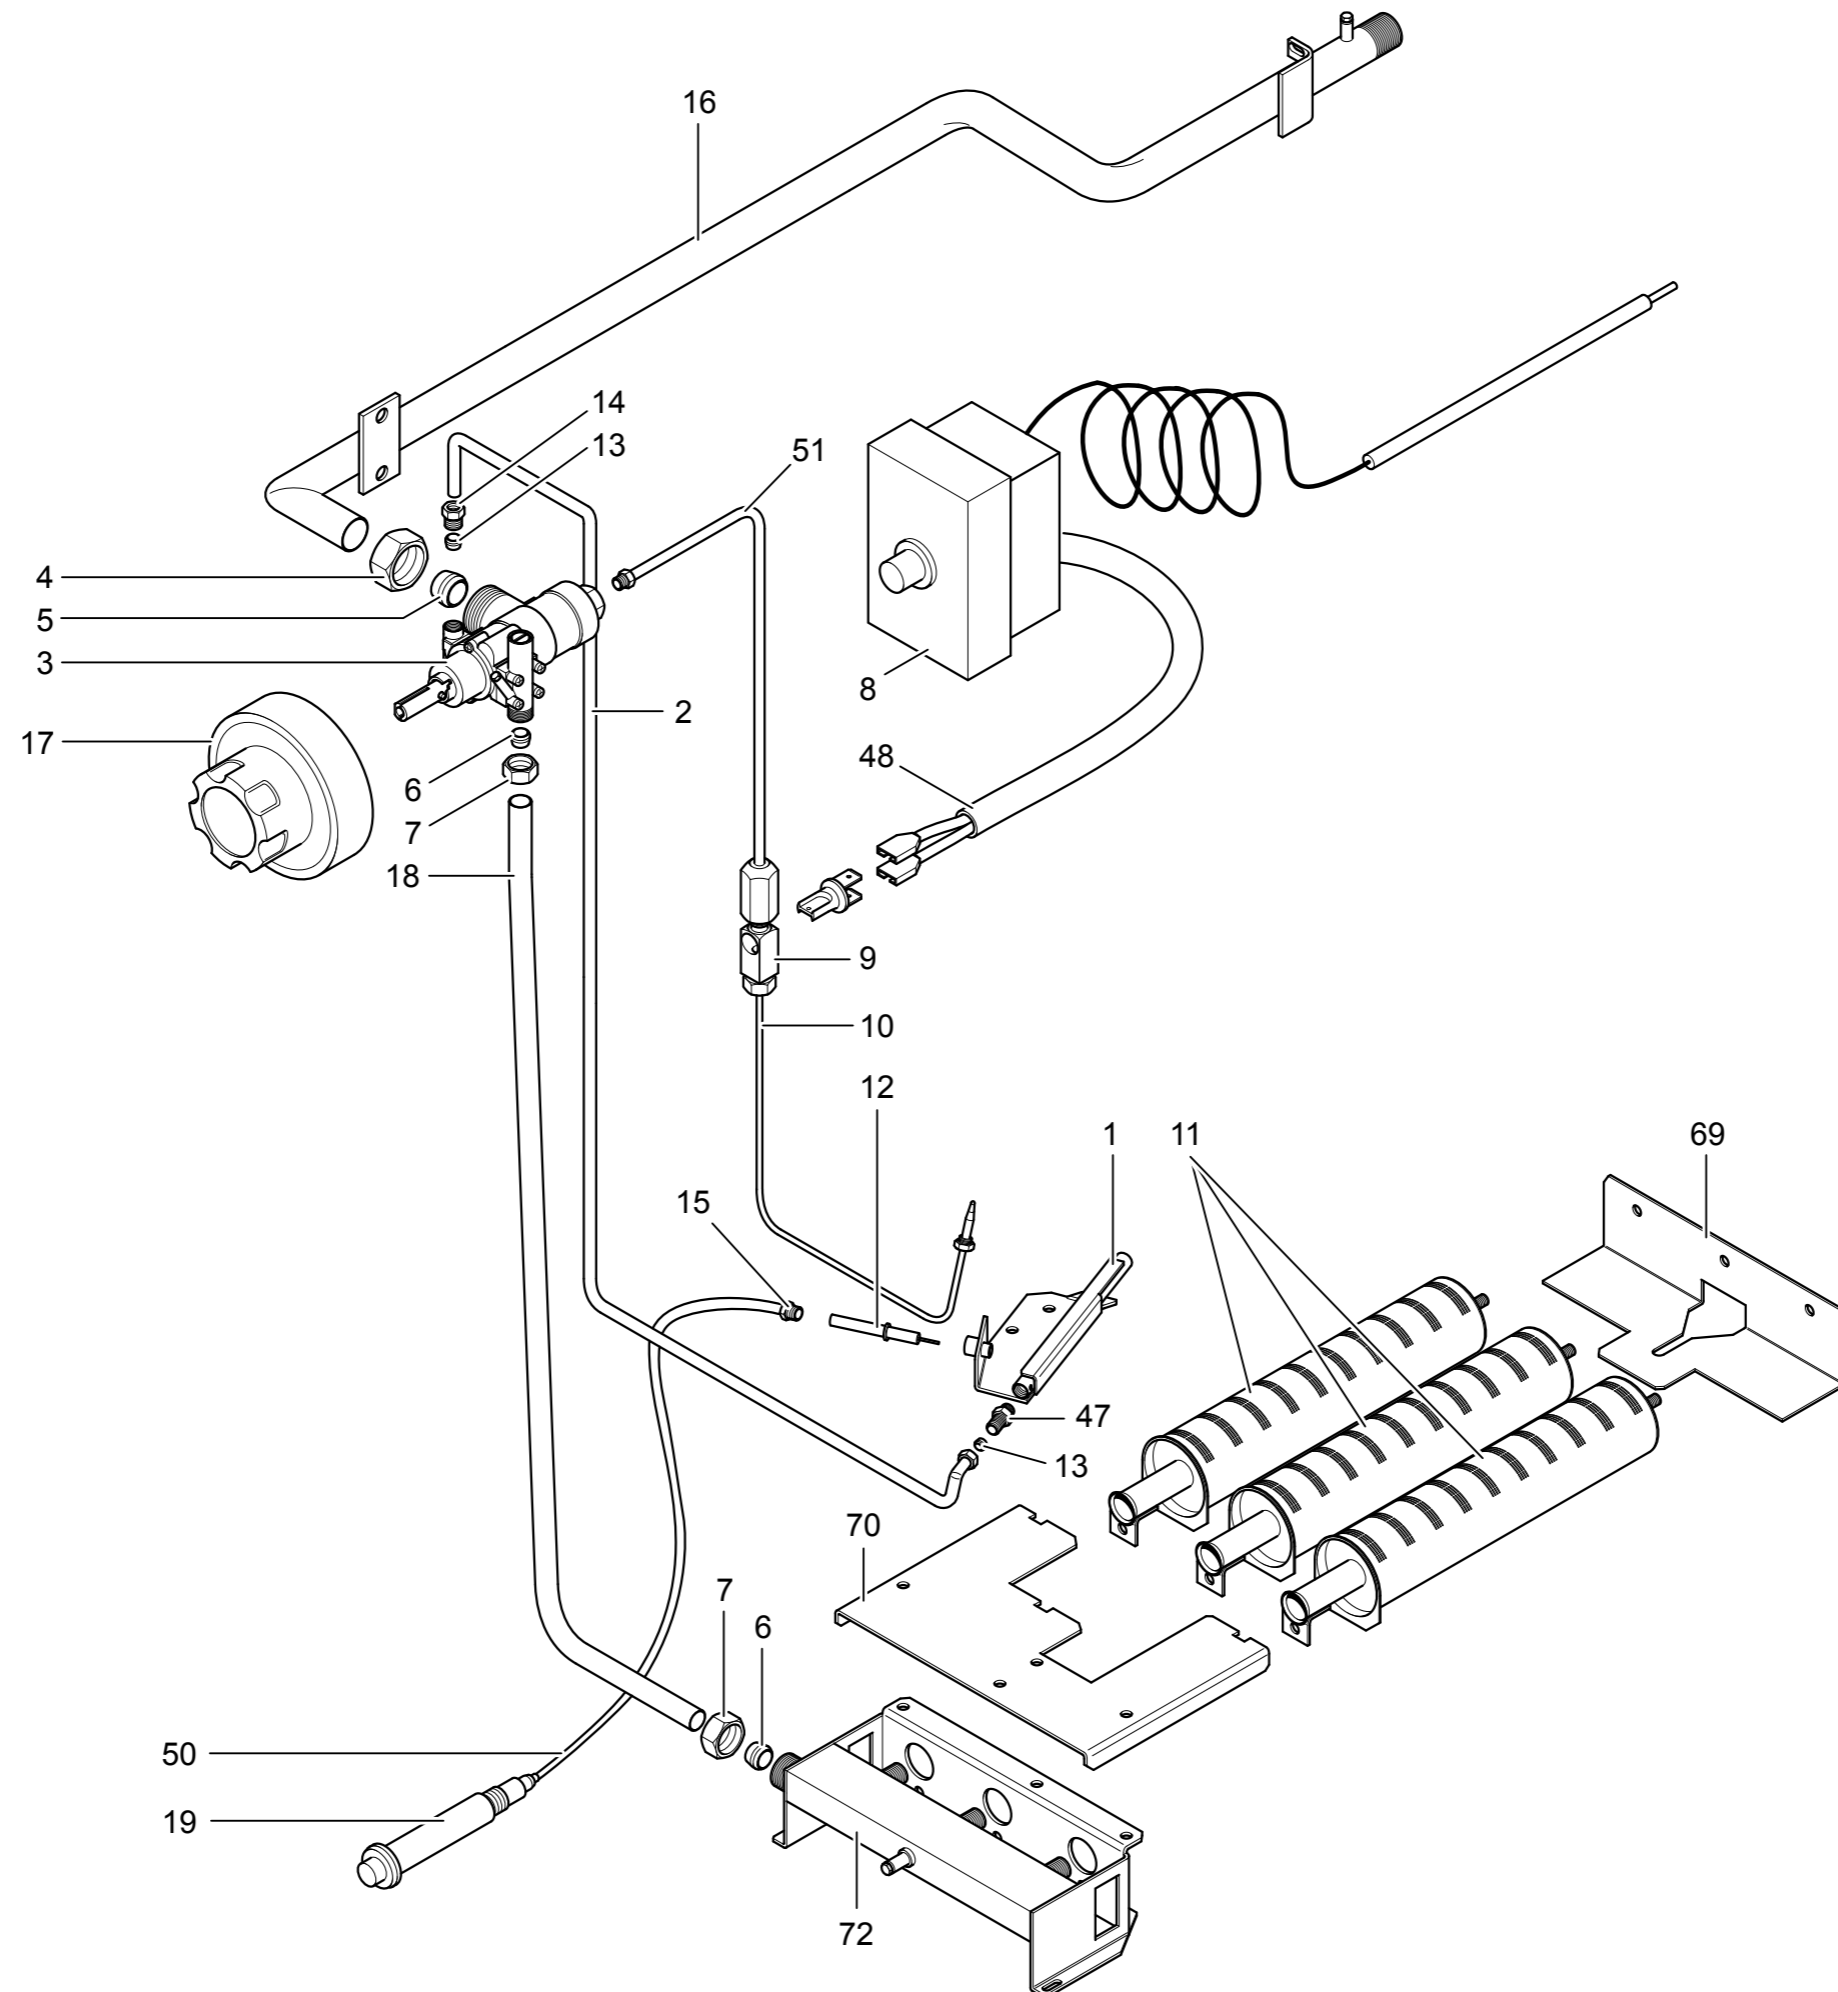

BCG15KI

Key N°	Part N°		Description
1	GACP800065	(R)	PILOT
2	PACP800212		PILOT PIPE
3	RTCP800019	(R)	TAP
4	RTCP800021		NUT FOR TAP D.20
5	RTCP800020		DOUBLE CONE D.20
6	RTCP800023		DOUBLE CONE D.16
7	RTCP800022		NUT FOR TAP D.16
8	RTCP800067	(R)	LIMIT THERMOSTAT
9	RTCP800073		THERMOCOUPLE FITTING
10	RTCU700374	(R)	THERMOCOUPLE
11	RTCU800335		CENTRAL BURNER
12	RTCU900010	(R)	ROUND SPARK
13	RTCU900018		DOUBLE CONE D.6
14	RTCU800339		NUT D.6
15	RTCU900215		FITTING FOR PILOT SPARK PLUG
16	160452		RAMP
17	162481+163082	(R)	TAP KNOB+RING
18	164997		BURNER FEEDING PIPE
19	RTCU700020	(R)	PIEZO IGNITION + NUT
20	RTBF900013		DOOR HINGE
21	RTCU600075		ROBINET DE L'EAU
22	RTCP800024		WATER DISTRIBUTOR
23	RTCP800026		HINGE SPRING
24	RTCP800064		SAFETY VALVE
25	RTCP700003		WATER TAP
26	RTCP800163		PIPE FLEXIBLE
27	RTCP800065		LEVEL COCK
28	RTCP900004		WATER DISCHARGE TAP
29	RTCP900018		BOSS
30	161827		THERMOMETER
31	160028		BRACKET TO FIX THE CONTROL PANEL
32	160270		COVER
33	163221		WORK PLANE GRATE
34	160431		COUNTER DOOR
35	160432		DOOR
36	160741		RIGHT SIDE
37	160740		LEFT SIDE
38	163177		CONTROL PANEL
39	163114+163079	(R)	WATER TAP KNOB+RING
39	163114+163085	(R)	WATER TAP KNOB+RING
40	164561		BOWL

(R) = - Recommended spare parts

Key N°	Part N°	Description
41	160676	COVER HANDLE
42	160927	NIPLES
43	RTCU700324	FOOT
44	160983	EXTERNAL FACE
45	160949	BOTTOM
46	PACP800010	PIPE FLEXIBLE
47	VEDI MANUALE UGELLI	
48	RTCP800165	WIRING HARNESS
49	RTCP900063	MANOMETER
50	RTBF700038	(R) LIGHTING CABLE
51	RTCP800131	PROLONGE THERMOCOUPLE
52	160932	COMPLETE HINGE
53	160436	BACK CROSS BAR
54	160925	COVER
55	RTCU900103	NIPLES 3/8"
56	RTCU900012	DOUBLE CONE D.10
57	RTCU900013	NUT D.10
58	GACP900023	WATER CONNECTION
59	163027	COLD WATER FEEDING PIPE
60	165636	FEEDING PIPE
61	160940	WATER FEEDING PIPE
62	163026	HOT WATER FEEDING PIPE
63	RTCU700629	THREADED BUSH 3/8"
64	160941	WATER DISCHARGE PIPE
65	160890	FRONT CROSSBAR
66	160929	REAR WALL
67	160950	LOWER PLANE
68	160928	FLUE FRONT WALL
69	160457	BRACKET TO FIX BURNER
70	160458	BURNER PROTECTION
71	163603	PLUG
72	160946	INJECTOR SUPPORT

(R) = - Recommended spare parts