





HOBART



BTGDG - BTGDGC
BTGDRG - BTGDRGC
BTGDGRG - BTGDGRGC
Gas Griddles

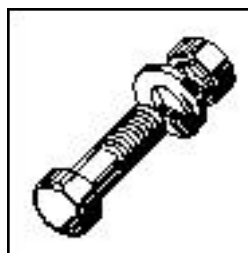

Spare Parts

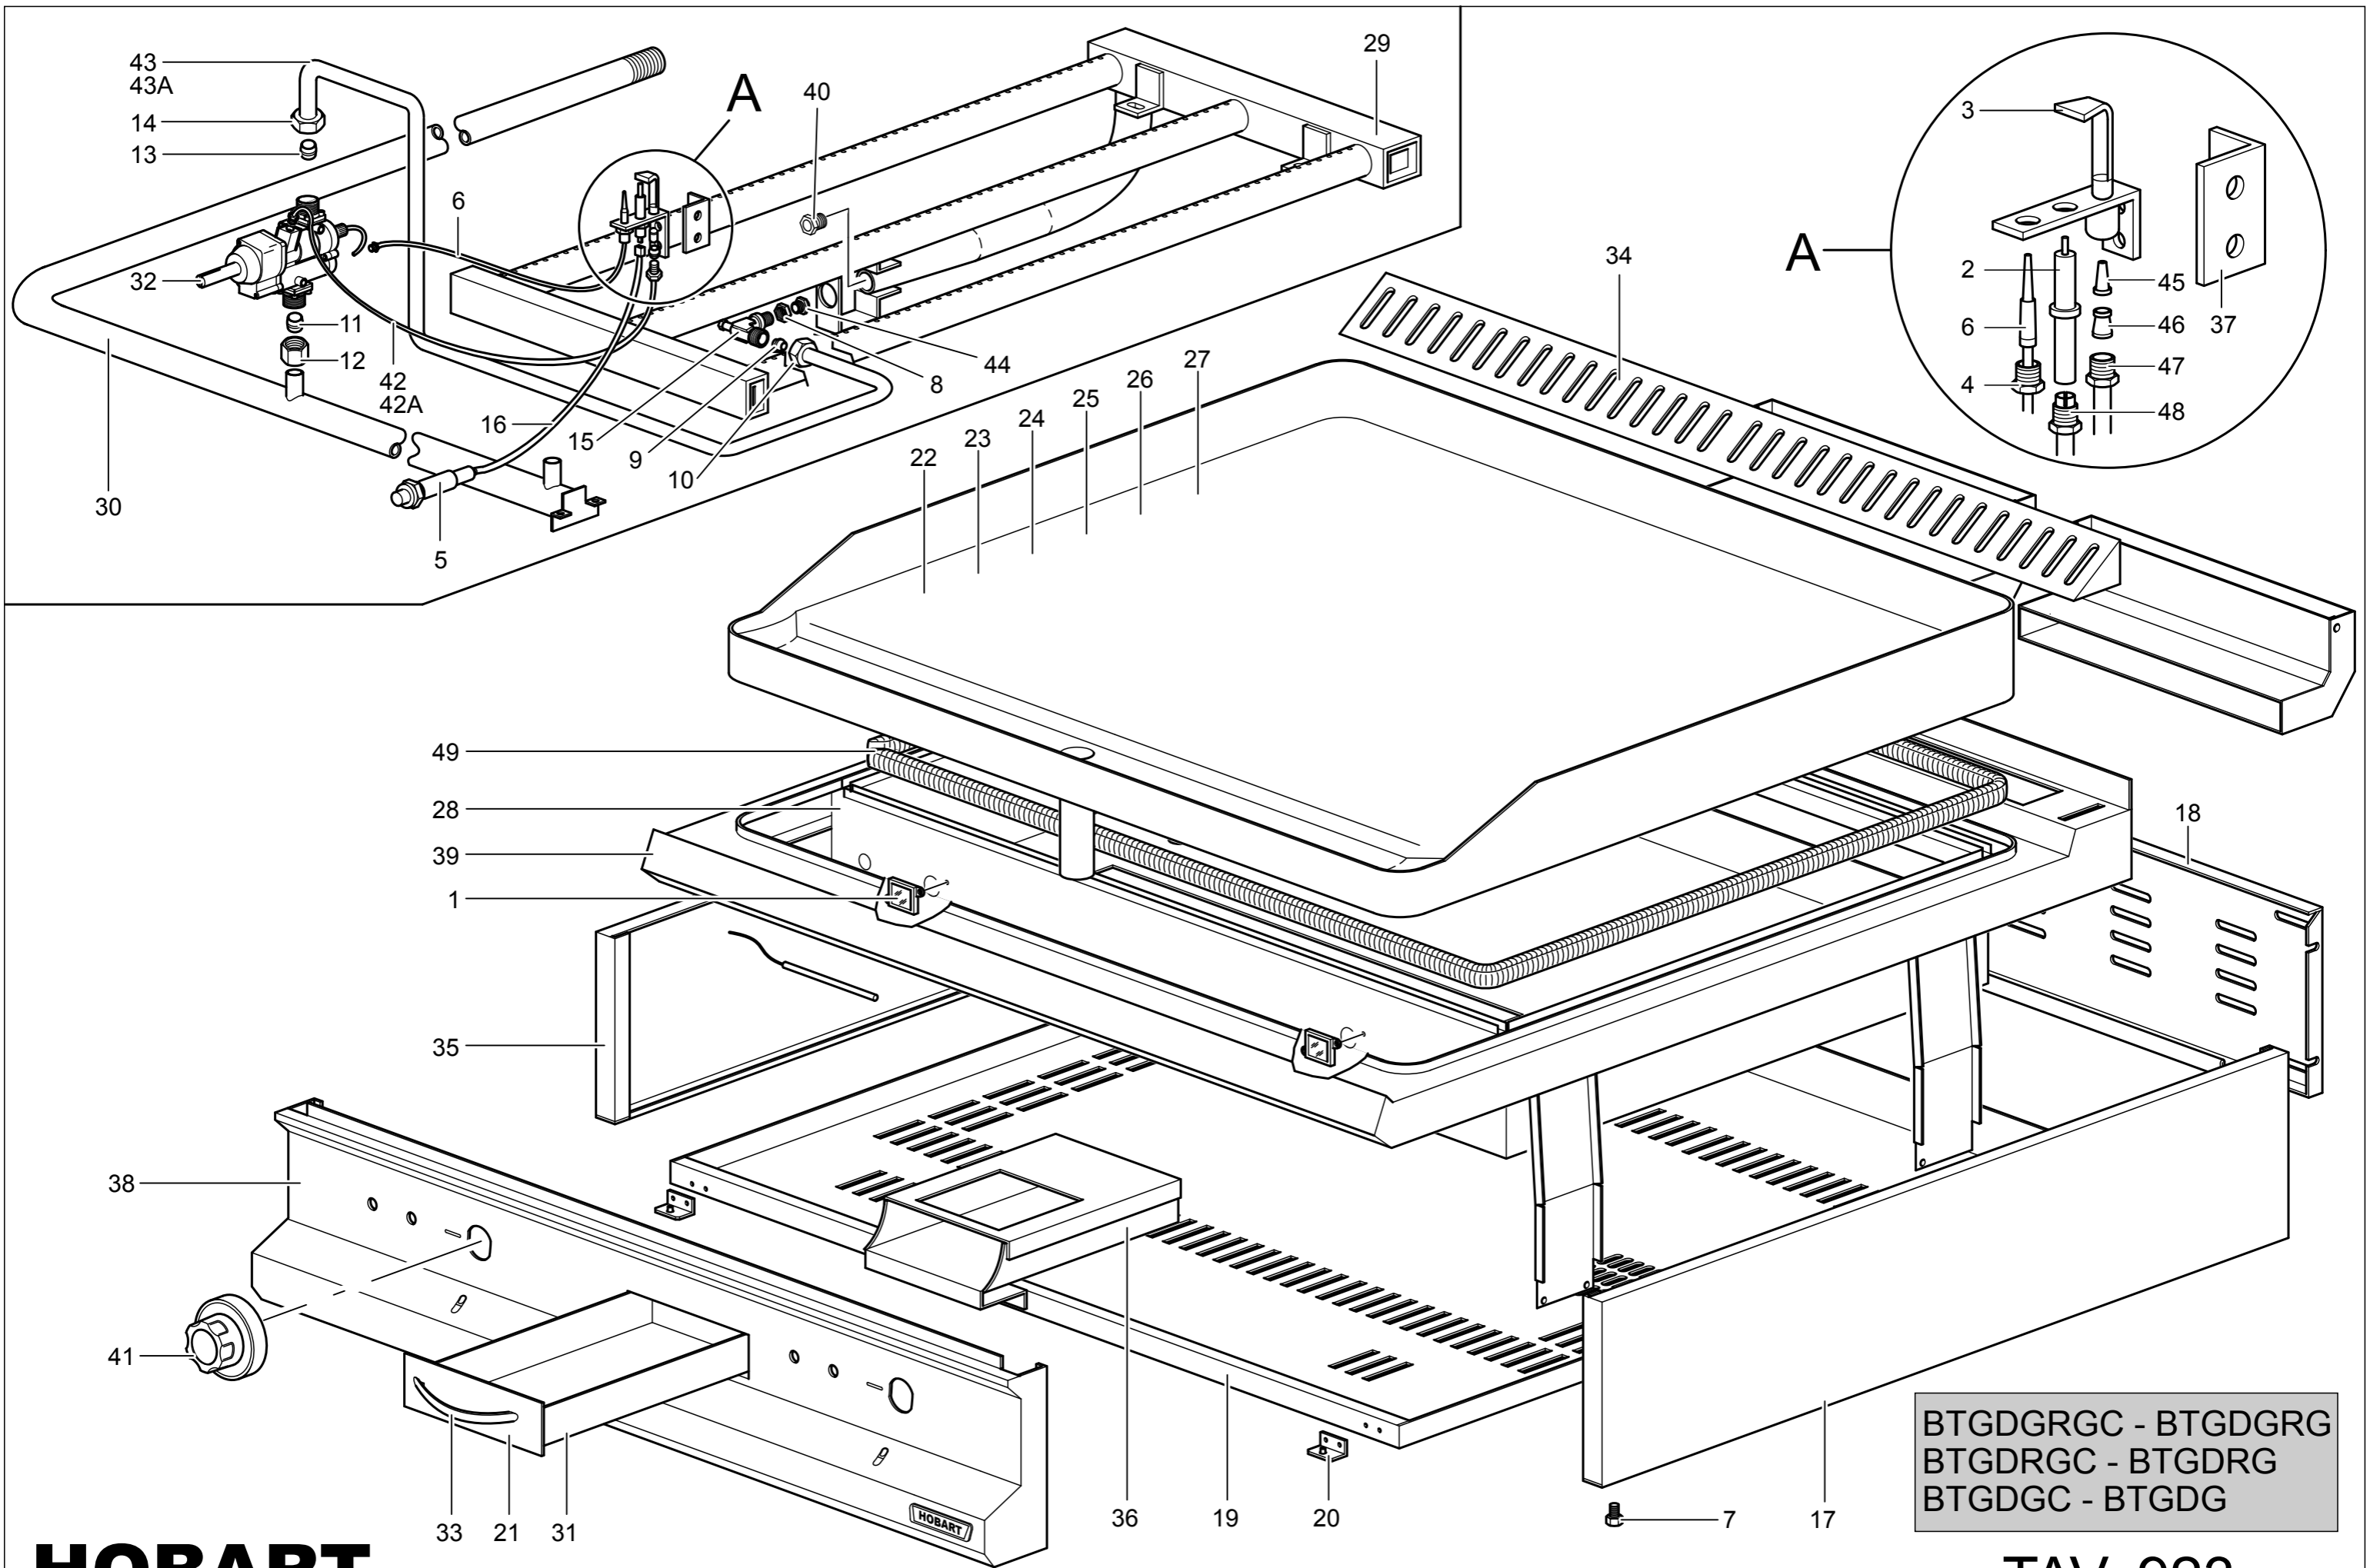

HOBART

TAV. 923

Key N°	Part N°	Description
1	RTBF900054	VIEWER
2	RTCP800033	(R) SPARK PLUG
3	RTCP800034	(R) PILOT
4	RTCP800038	NUT FOR THERMOELEMENT
5	RTCU700020	(R) PIEZO LIGHTING
6	RTCU700296	(R) THERMOCOUPLE
7	RTCU700324	FOOT
8	RTCU900005	C/NUT INJECTOR SUPPORT
9	RTCU900012	BICONE D.10
10	RTCU900013	NUT D.10
11	RTCU900014	BICONE D.12
12	RTCU900015	NUT D.12
13	RTCU900016	BICONE D.10
14	RTCU900017	NUT D.10
15	RTCU900337	INJECTOR SUPPORT
16	RTCU900384	(R) LIGHTING CABLE
17	160021	RIGHT SIDE
18	160023	BACK PANEL
19	160024	BOTTOM TOP
20	160028	BRACKET TO FIX CONTROL PANEL
21	160097	OIL TRAY PANEL
22	160153	FLAT COOKING PLANE
23	160367	PLAN OF COOKING SMOOTH RIBBED CHROME
24	160362	PLAN OF COOKING SMOOTH AND RIBBED
25	160366	PLAN OF COOKING RAYÉE CHROMÉE
26	160360	GROOVED COOKING PLANE
27	160365	SMOOTH COOKING PLATE CHROMÉE
28	160155	COMBUSTION CHAMBER
29	160165	BURNER
30	160183	COLLECTOR
31	160188	OIL TRAY
32	160225	(R) GAS THERMOSTAT
33	160270	HANDLE
34	163221	CHIMNEY GRILL
35	160319	LEFT SIDE
36	160333	OIL TANK SLIDE WAY
37	160337	BRACKET TO SUPPORT PILOT
38	163198	CONTROL PANEL
39	163260	INOX PLANE
40	160522	AIR REGULATOR

(R) = - Recommended spare parts



**BTGDG - BTGDGC - BTGDRG
BTGDRGC - BTGDGRG - BTGDGRGC**

Key N°	Part N°		Description
41	162481+163086	(R)	THERMOSTAT KNOB+RING
42	160568		LEFT PILOT PIPE
42A	160569		RIGHT PILOT PIPE
43	160570		LEFT BURNER FEEDING PIPE
43A	160571		RIGHT BURNER FEEDING PIPE
44	VEDI MANUALE UGELLI		INIECTOR Ø 2.05 K
45	VEDI MANUALE UGELLI		INIECTOR
46	RTC800183		BICONE D.6
47	RTC800182		NUT D.6
48	RTC900215		FITTING FOR PILOT SPARK PLUG
49	163292		JOINT
50	160158		FLUE FRONT WALL
51	160157		FLUE REAR WALL

(R) = - Recommended spare parts