





**BTGSRG**  
**BTGSG**  
**BTGSRGC**  
**BTGSGL**  
Gas Griddle

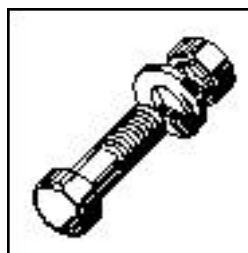

**Spare Parts**

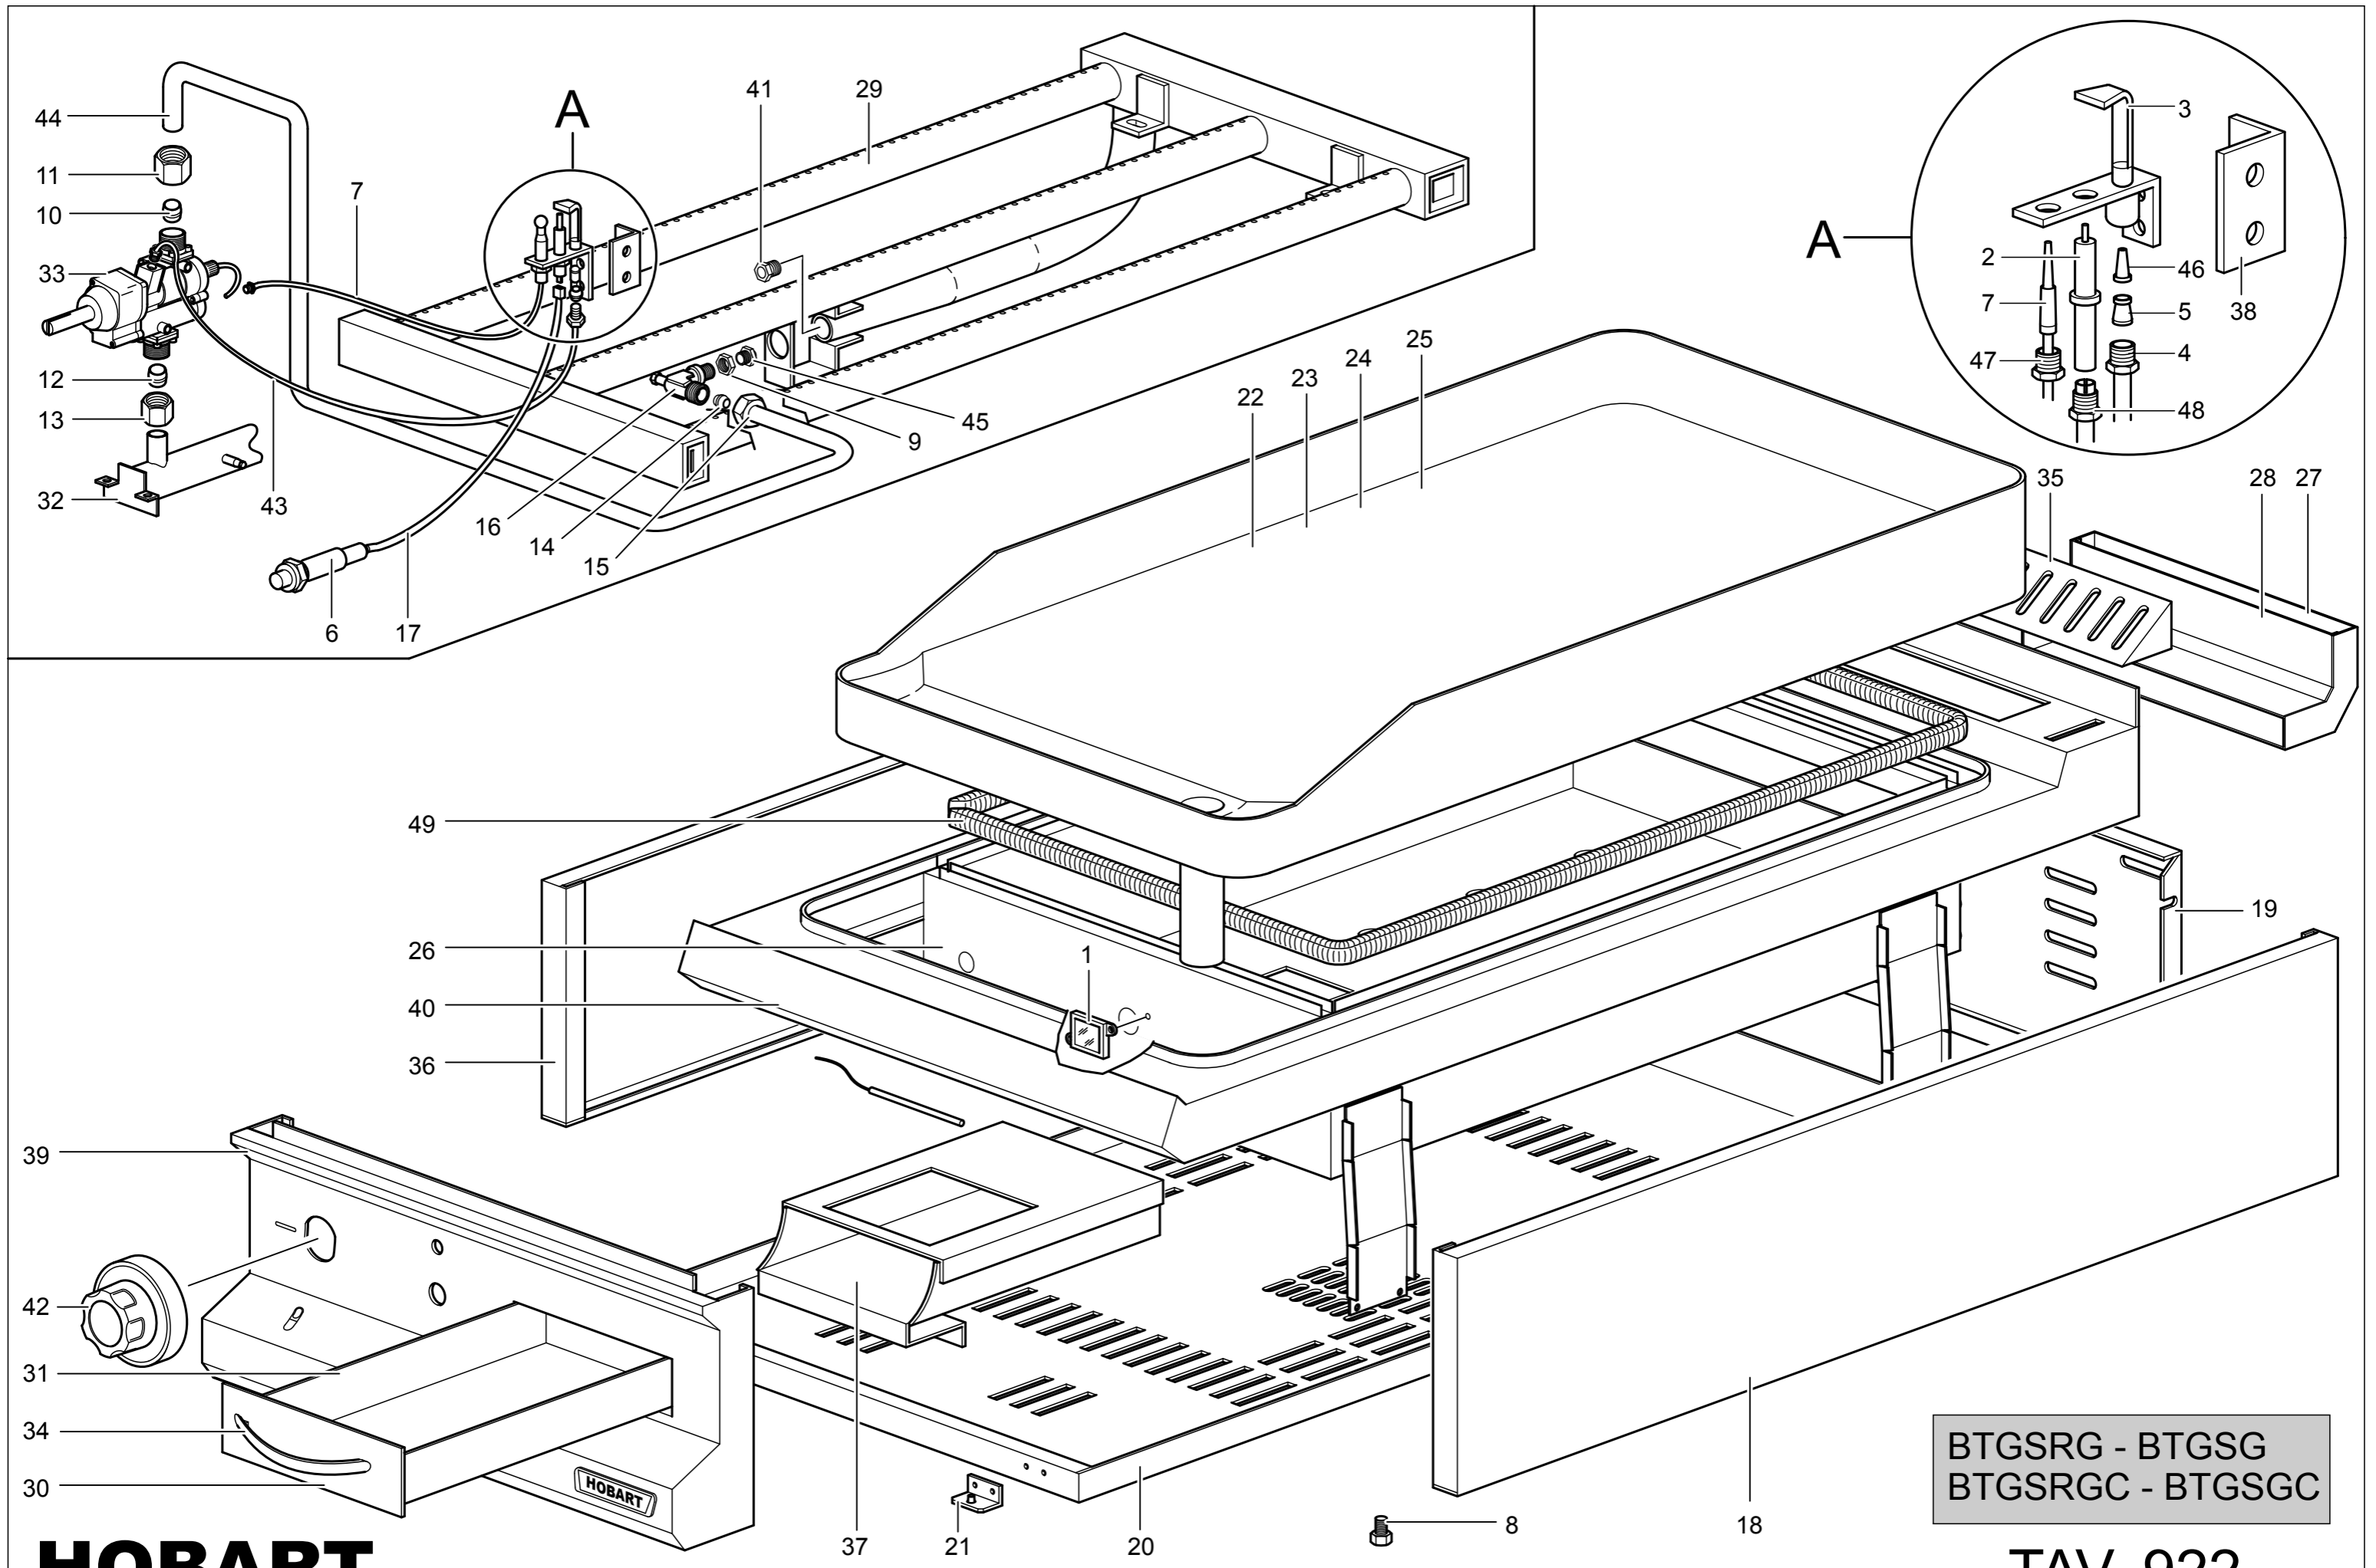

BTGSRG - BTGSG  
 BTGSRGC - BTGSGC

**HOBART**

TAV. 922

Key N°	Part N°		Description
1	RTBF900054		VIEWER
2	RTCP800033	(R)	SPARK PLUG
3	RTCP800034	(R)	PILOT
4	RTCU800182		NUT D.6
5	RTCU800183		BICONE D.6
6	RTCU700020	(R)	PIEZO LIGHTING
7	RTCU700296	(R)	THERMOCOUPLE
8	RTCU700324		FOOT
9	RTCU900005		C/NUT
10	RTCU900016		BICONE D.10
11	RTCU900017		NUT D.10
12	RTCU900014		BICONE D.12
13	RTCU900015		NUT D.12
14	RTCU900012		BICONE D.10
15	RTCU900013		NUT D.10
16	RTCU900337		INJECTOR SUPPORT
17	RTCU900384	(R)	LIGHTING CABLE
18	16002		RIGHT SIDE
19	160022		INOX BACK PANEL
20	160025		BOTTOM TOP
21	160028		BRACKET TO FIX CONTROL PANEL
22	160152		FLAT COOKING PLANE
23	160364		RIFLED FRY-PLATE
24	160358		RIFLED FRY-PLATE
25	160363		FLAT COOKING PLANE
26	160156		COMBUSTION CHAMBER
27	160157		REAR WALL
28	160158		FRONT WALL
29	160165		BURNER
30	163124		OIL TRAY PANEL
31	163122		OIL TRAY
32	160221		COLLECTOR GBM49
33	160225	(R)	GAS THERMOSTAT
34	160270		HANDLE
35	163222		CHIMNEY GRILL
36	160319		LEFT SIDE
37	160333		OIL TANK SLIDE WAY
38	160337		BRACKET TO SUPPORT PILOT
39	163180		CONTROL PANEL
40	163851		INOX PLANE
41	160522		AIR REGULATOR
42	162481+163086	(R)	THERMOSTAT KNOB+RING

(R) = - Recommended spare parts



**BTGSRG - BTGSG**  
**BTGSRGC - BTGSGL**

Key N°	Part N°	Description
43	160566	PILOT PIPE
44	160567	DISTRIBUTOR FEEDING PIPE
45	VEDI MANUALE UGELLI	INIECTOR
46	VEDI MANUALE UGELLI	PILOT INJECTOR
47	RTCP800038	NUT FOR THERMOELEMENT
48	RTCU900215	FITTING FOR PILOT SPARK PLUG
49	163291	JOINT

(R) = - Recommended spare parts