





**BTGSRG**  
**BTGSG**  
**BTGSRGC**  
**BTGSGL**  
Gas Griddle

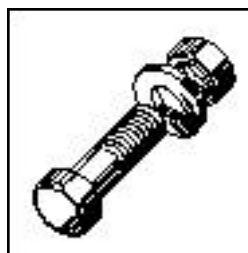

**Spare Parts**

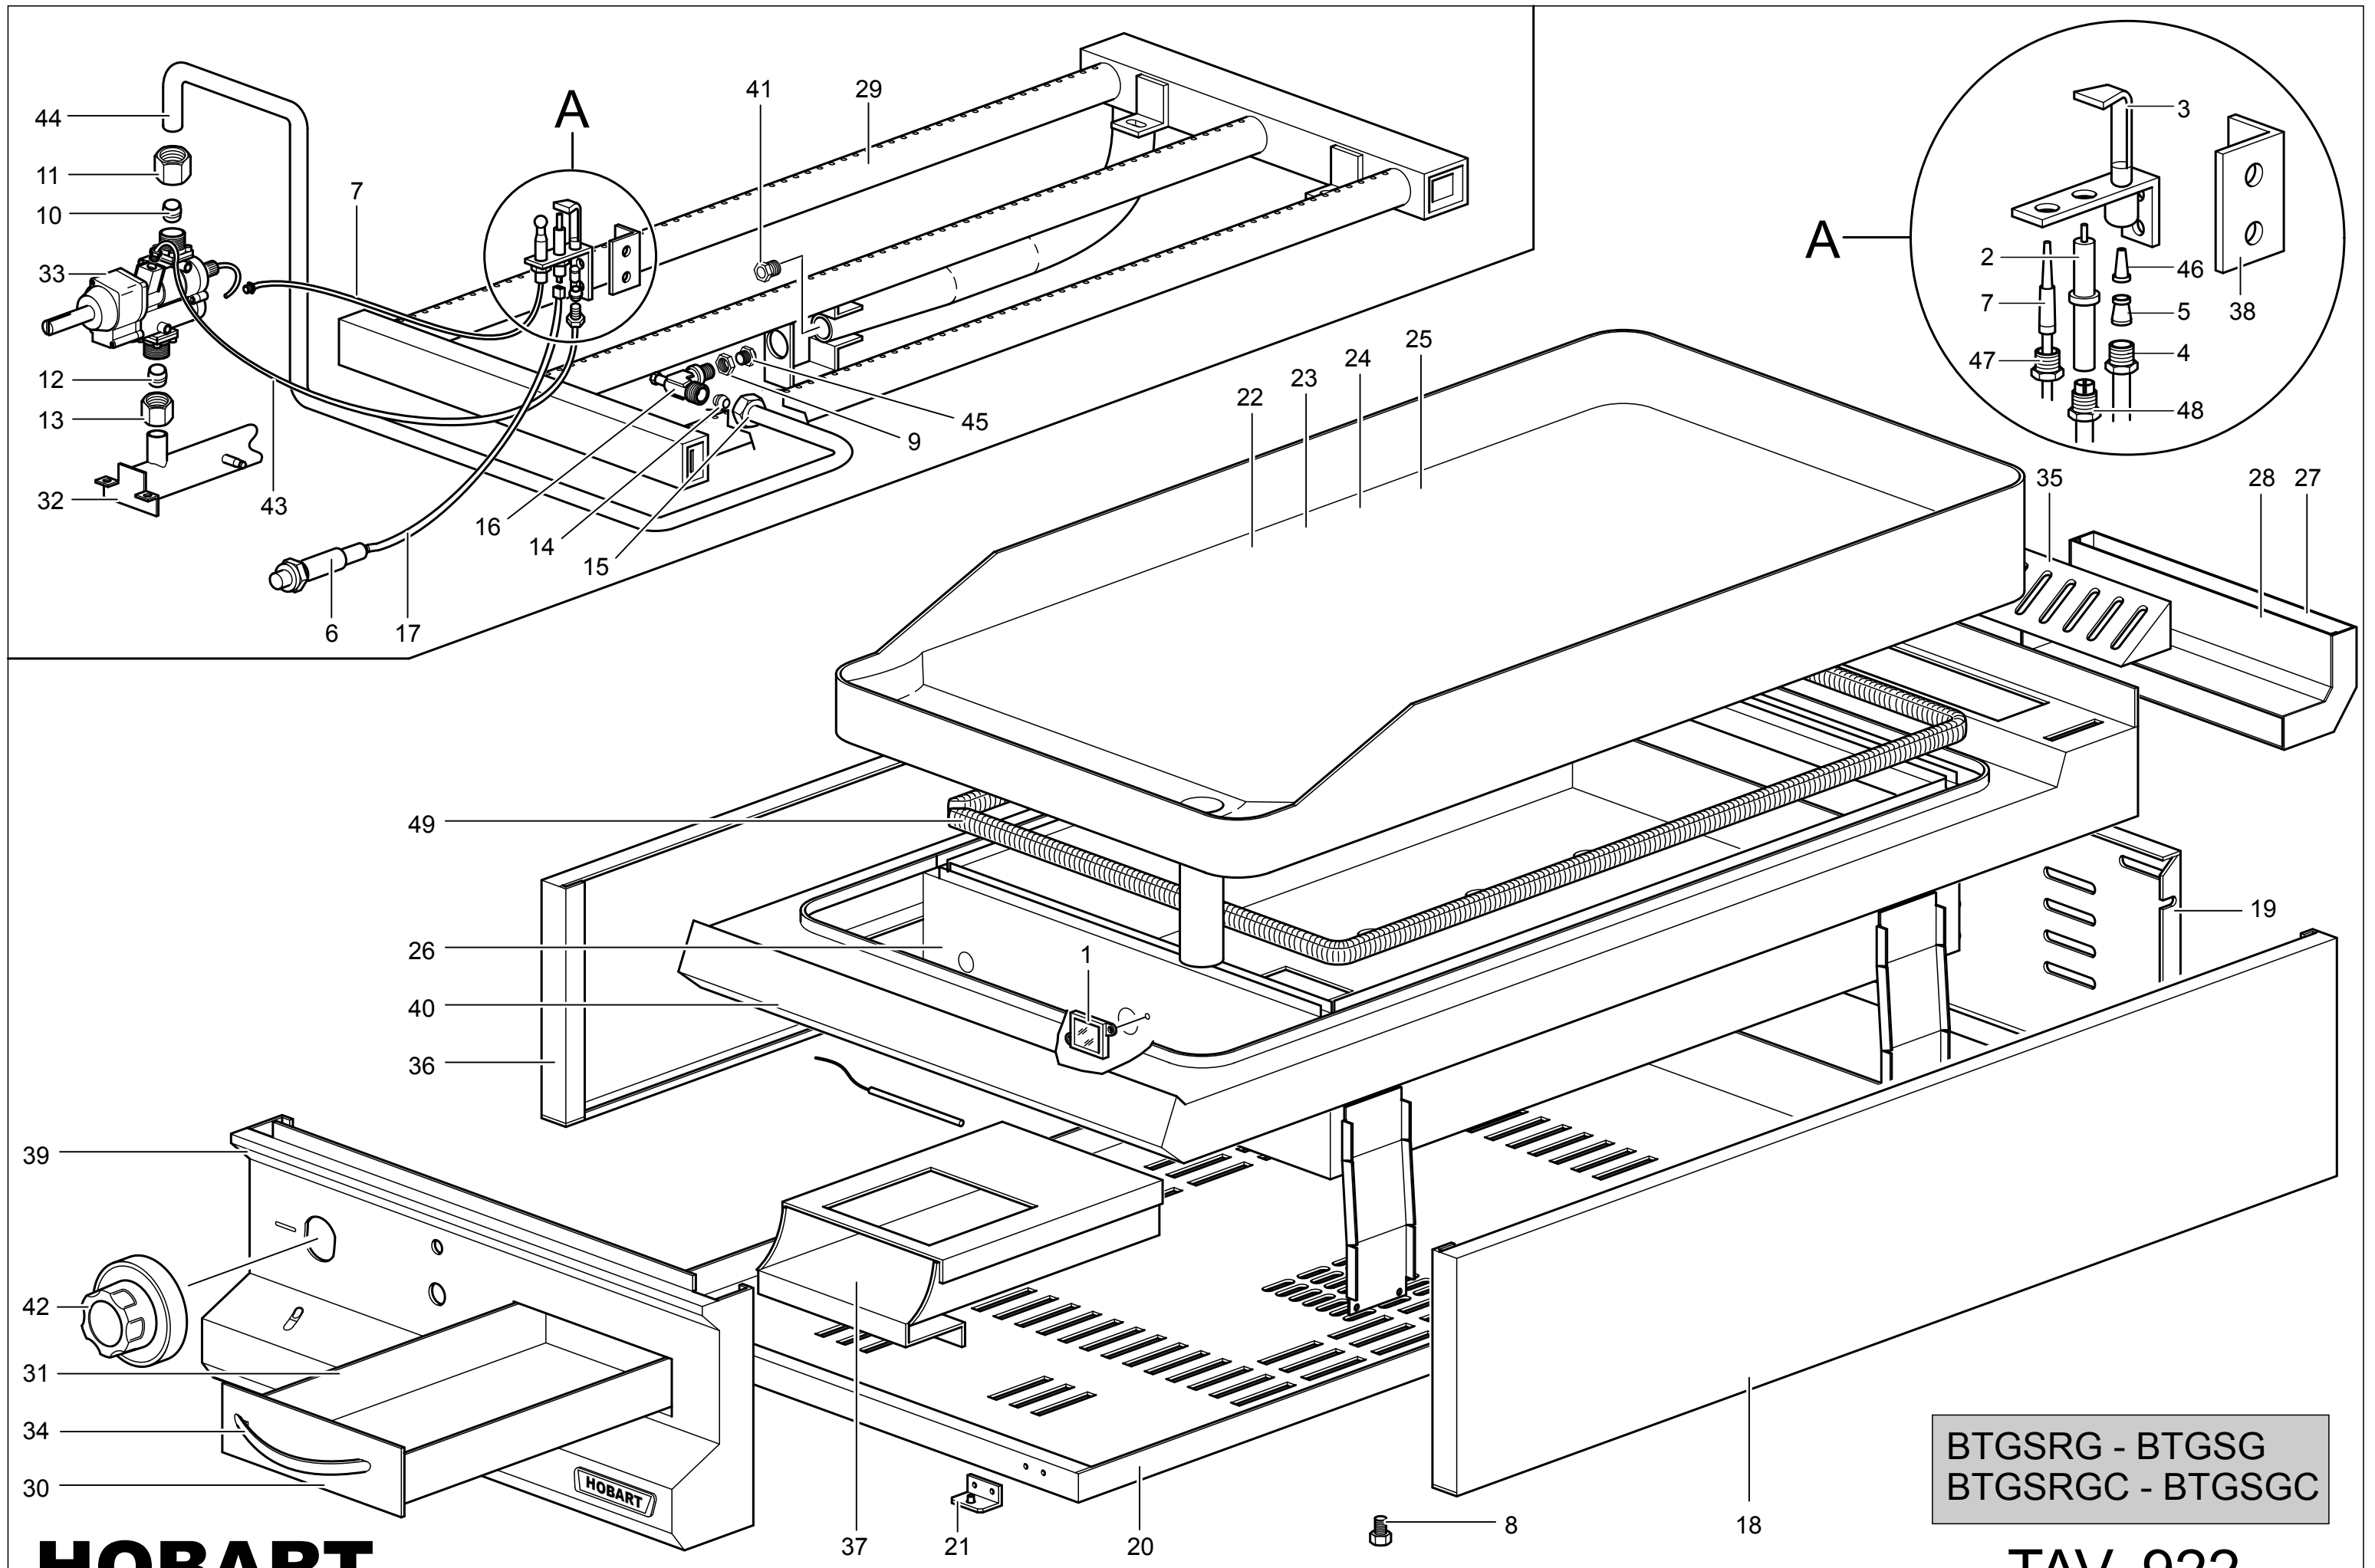

**HOBART**

BTGSRG - BTGSG  
BTGSRGC - BTGSGC

TAV. 922

Key N°	Part N°	Description
1	RTBF900054	VIEWER
2	RTCP800033	(R) SPARK PLUG
3	RTCP800034	(R) PILOT
4	RTCU800182	NUT D.6
5	RTCU800183	BICONE D.6
6	RTCU700020	(R) PIEZO LIGHTING
7	RTCU700296	(R) THERMOCOUPLE
8	RTCU700324	FOOT
9	RTCU900005	C/NUT
10	RTCU900016	BICONE D.10
11	RTCU900017	NUT D.10
12	RTCU900014	BICONE D.12
13	RTCU900015	NUT D.12
14	RTCU900012	BICONE D.10
15	RTCU900013	NUT D.10
16	RTCU900337	INJECTOR SUPPORT
17	RTCU900384	(R) LIGHTING CABLE
18	16002	RIGHT SIDE
19	160022	INOX BACK PANEL
20	160025	BOTTOM TOP
21	160028	BRACKET TO FIX CONTROL PANEL
22	160152	FLAT COOKING PLANE
23	160364	RIFLED FRY-PLATE
24	160358	RIFLED FRY-PLATE
25	160363	FLAT COOKING PLANE
26	160156	COMBUSTION CHAMBER
27	160157	REAR WALL
28	160158	FRONT WALL
29	160165	BURNER
30	163124	OIL TRAY PANEL
31	163122	OIL TRAY
32	160221	COLLECTOR GBM49
33	160225	(R) GAS THERMOSTAT
34	160270	HANDLE
35	163222	CHIMNEY GRILL
36	160319	LEFT SIDE
37	160333	OIL TANK SLIDE WAY
38	160337	BRACKET TO SUPPORT PILOT
39	163180	CONTROL PANEL
40	163851	INOX PLANE
41	160522	AIR REGULATOR
42	162481+163086	(R) THERMOSTAT KNOB+RING

(R) = - Recommended spare parts



**BTGSRG - BTGSG**  
**BTGSRGC - BTGSGL**

Key N°	Part N°	Description
43	160566	PILOT PIPE
44	160567	DISTRIBUTOR FEEDING PIPE
45	VEDI MANUALE UGELLI	INIECTOR
46	VEDI MANUALE UGELLI	PILOT INJECTOR
47	RTCP800038	NUT FOR THERMOELEMENT
48	RTCU900215	FITTING FOR PILOT SPARK PLUG
49	163291	JOINT

(R) = - Recommended spare parts