





HOBART



BCGDPC
Gas Pasta Cooker

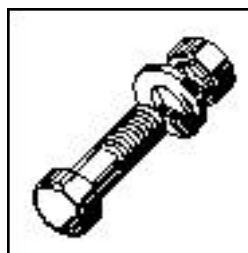

 Spare Parts

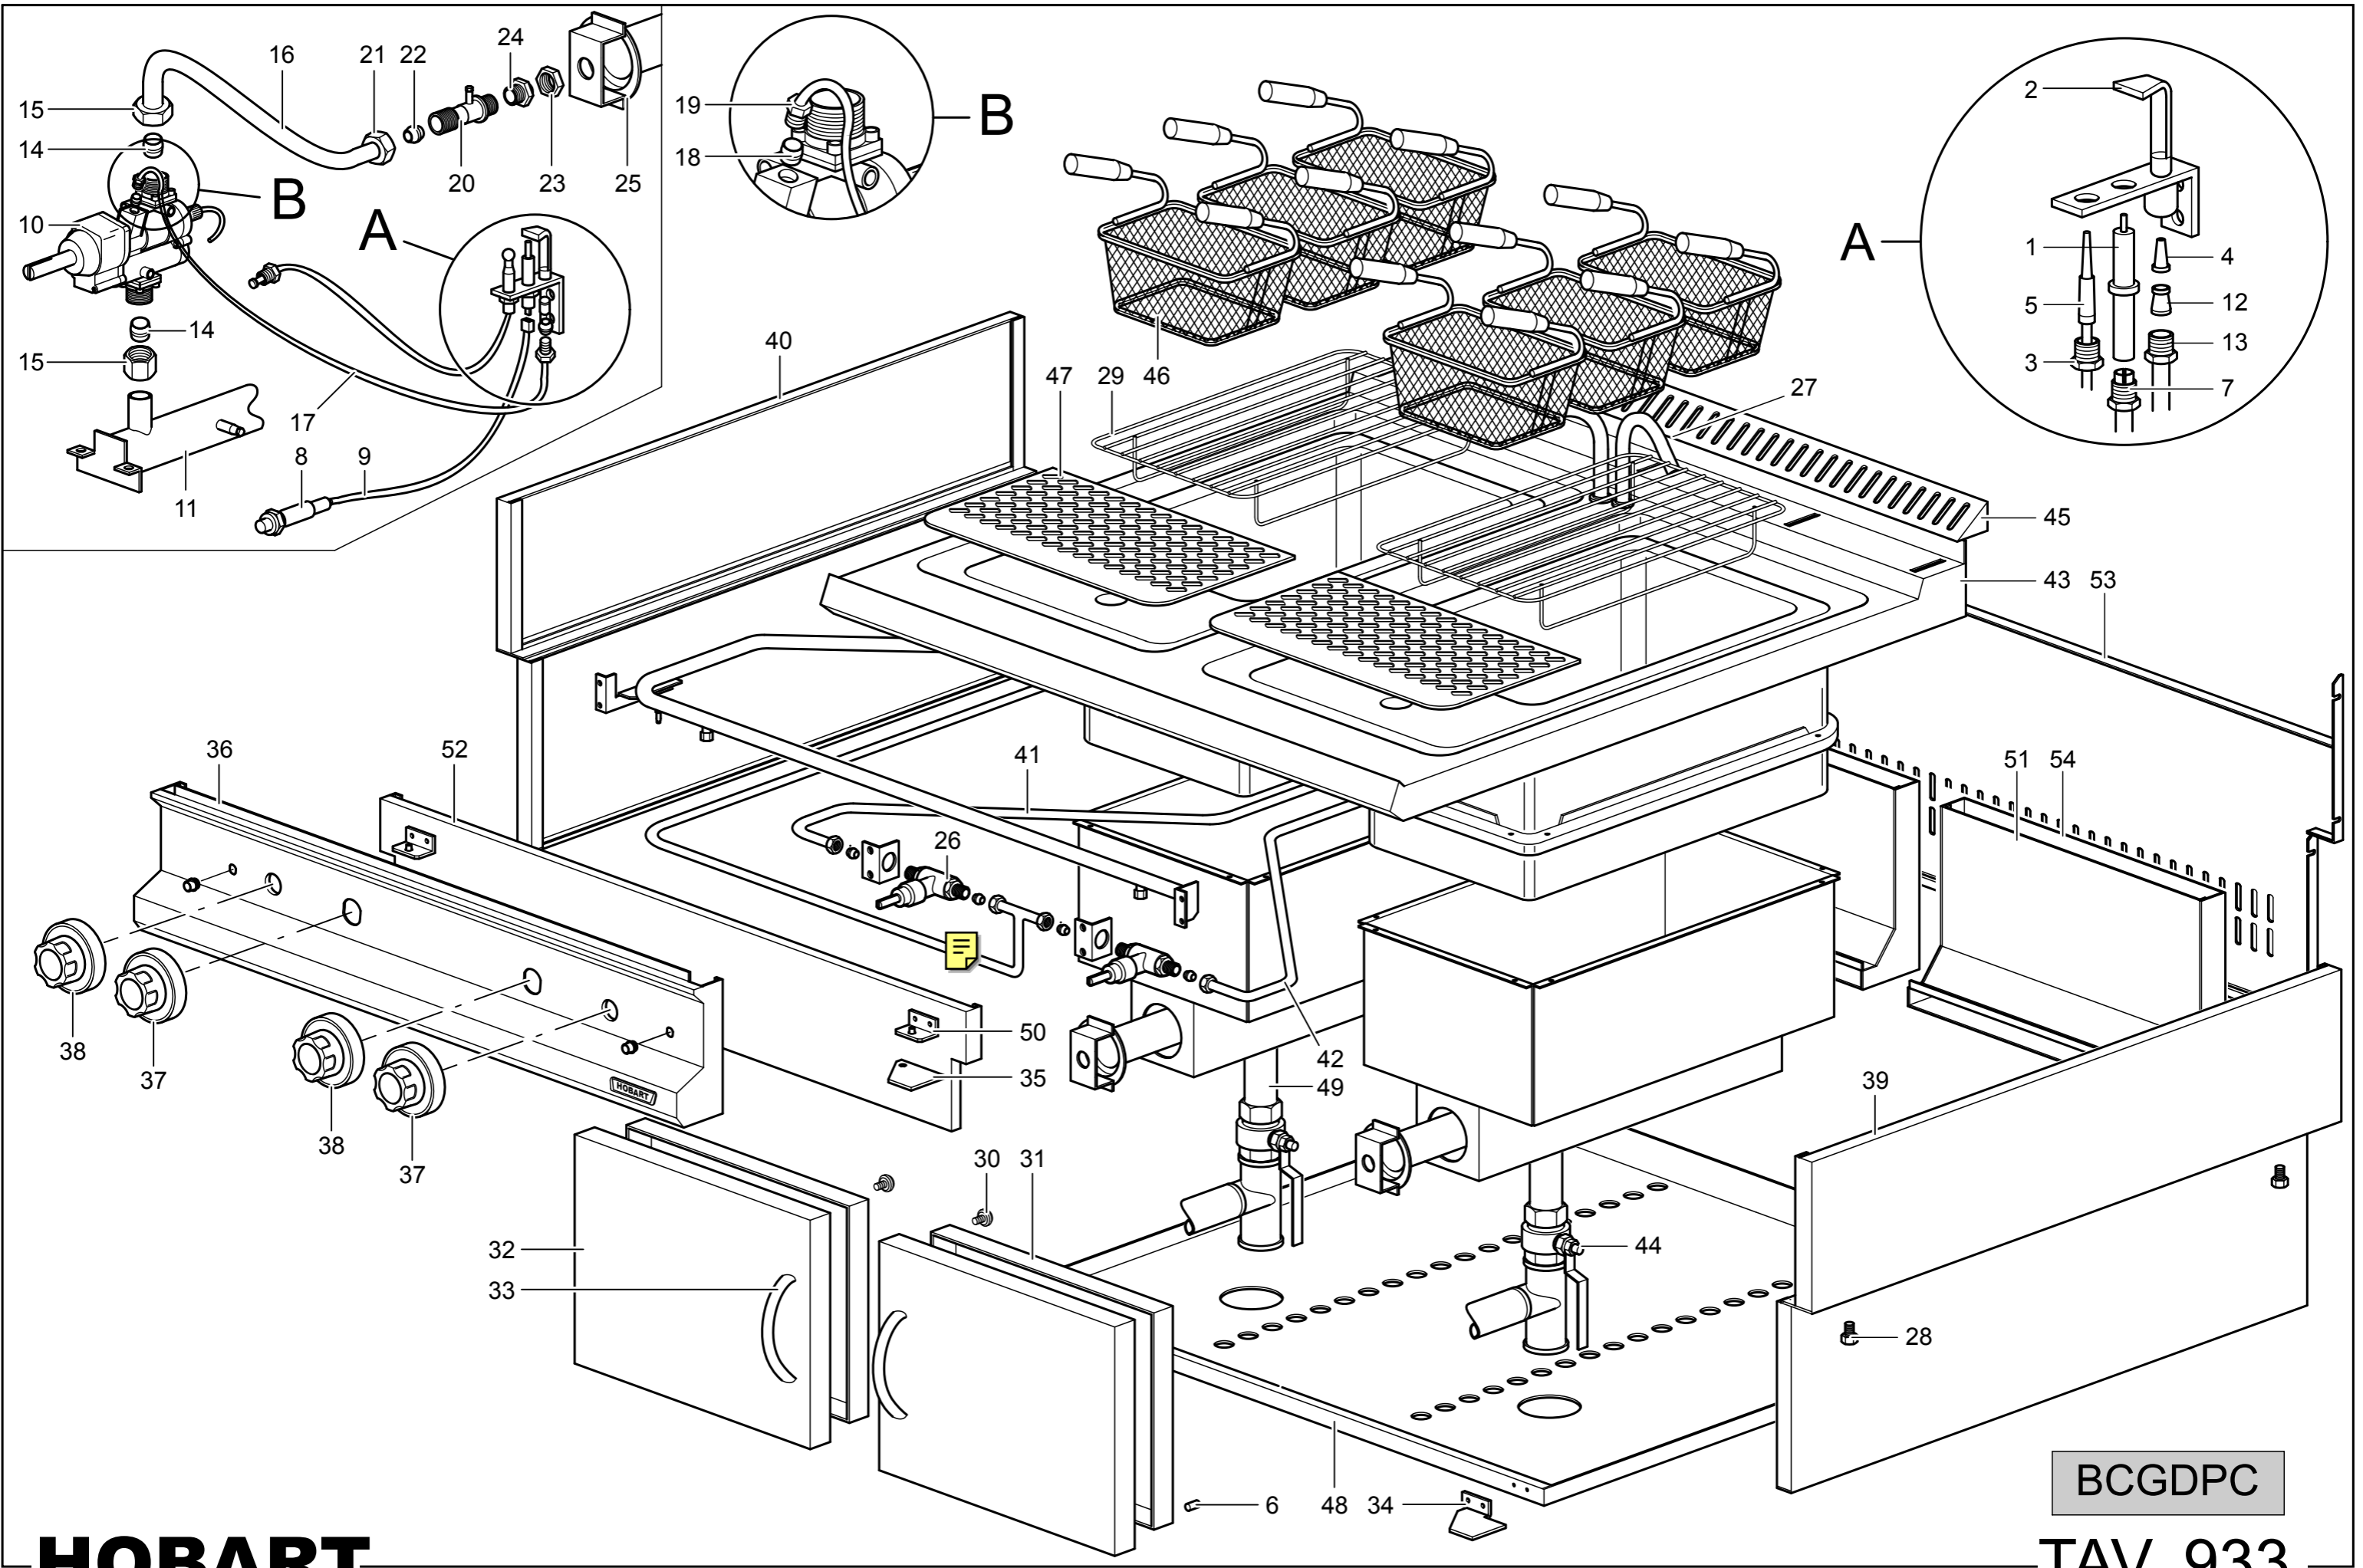

HOBART

BCGDPC

TAV. 933

Key N°	Part N°		Description
1	RTCP800033	(R)	ROUND SPARK
2	RTCP800034	(R)	PILOT
3	RTCP800038		NUT FOR THERMOELEMENT
4	VEDI MANUALE UGELLI		PILOT INJECTOR
5	RTCU900474	(R)	THERMOCOUPLE 75
6	RTBF80021		DOOR RUBBER CAP
7	RTCU900215		FITTING FOR PILOT SPARK PLUG
8	RTCU700020	(R)	PIEZO LIGHTING + NUT
9	RTCU800144	(R)	LIGHTING CABLE
10	RTCU900011	(R)	TAP
11	160116		COLLECTOR
12	RTCU800183		DOUBLE CONE D.6
13	RTCU800182		NUT D.6
14	RTCU900014		BICONE Ø 12 TO FIX TAP
15	RTCU900015		NUT Ø12 TO FIX TAP
16	PACU800742		BURNER DISTRIBUTION PIPE
17	PACU800744		RIGHT PILOT PIPE
18	RTCU900018		DOUBLE CONE D.6
19	RTCU900019		NUT D.6
20	RTCU800180		INJECTOR SUPPORT D.12
21	RTCU800181		NUT D.12 INJECTOR SUPPORT
22	RTCU800195		DOUBLE CONE D.12 INJECTOR SUPPORT
23	RTCU900005		SUPPORT LOCK NUT
25	RTCU700285		BURNER 14KW
24	VEDI MANUALE UGELLI		INJECTOR
26	RTCP700003		WATER TAP
27	RTBF800041		WATER DISTRIBUTOR
28	RTCU700324		FOOT
29	RTCU800343		GRATE FOR BASKET
30	RTTAV00093		MAGNET
31	160095		COUNTER DOOR
32	160096		DOOR
33	160270		COVER
34	164963		LEFT HINGE
35	164962		RIGHT HINGE
36	163207		CONTROL PANEL
37	163114+163079	(R)	COLD WATER TAP KNOB+RING
38	162481+163082	(R)	SAFETY VALVE KNOB+RING
39	160433		RIGHT SIDE
40	160434		LEFT SIDE

(R) = - Recommended spare parts

Key N°	Part N°	Description
41	160133	LEFT WATER FEEDING PIPE
42	160114	RIGHT WATER FEEDING PIPE
43	164650	BOWL
44	160596	WATER DISCHARGE TAP
45	163221	WORK PLANE GRATE
46	A800001260	BASKET 1/3 16X29X21,5
47	GACU800181	BASKET SUPPORT PANEL
48	160122	LOWER PLANE INOX
49	MPGOM27T00	RUBBER PIPE
50	160028	BRACKET TO FIX THE CONTROL PANEL
51	160105	FLUE FRONT WALL
52	160108	FRONT CROSSBAR
53	160110	BACK CROSSBAR
54	160104	FLUE REAR WALL

(R) = - Recommended spare parts