GASTROPARTS

zmywarki / dishwashers

# ZANUSSI

www.gastroparts.com
gastroparts@gastroparts.com
tel. +48 56 657 00 68
/gastroparts.global
/gastroparts.global

Wash and rinse systems

**Page 4**

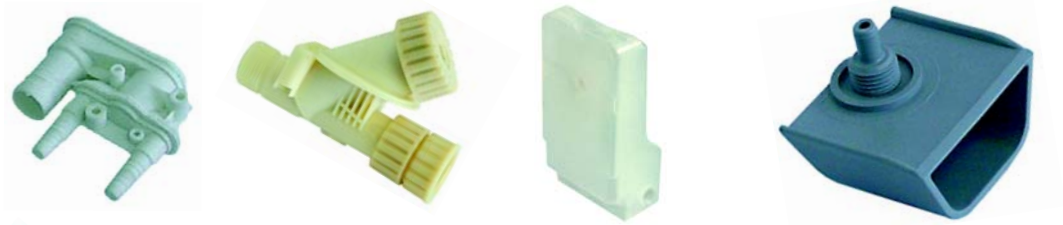

Various and air traps

**Page 6**

Drain and filter systems

**Page 8**

Door and hood components

**Page 11**

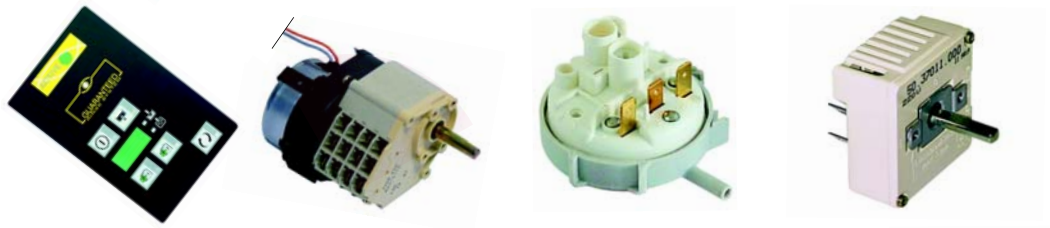

Electrical components

**Page 13**

Dosing pumps

**Page 19**

Heating elements and boilers

**Page 19**

Pumps and components

**Page 21**

## Wash and rinse systems

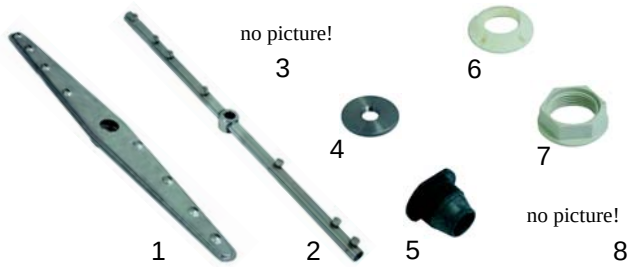


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504500 | wash arm | LB1 LB2, Z1, Z2, GW1, GW2 W51, W52 | 049044 |
| 2 | 504501 | rinse arm | | 049049 |
| 3 | 504502 | rinse arm spindle | | 049046 |
| 4 | 504503 | lock nut | | 049047 |
| 5 | 504504 | wash arm bush | | 049042 |
| 6 | 504505 | wash arm nut | | 049043 |
| 7 | 504506 | nut/ wash arm support | | 049039 |
| 8 | 504507 | gasket | | 049038 |

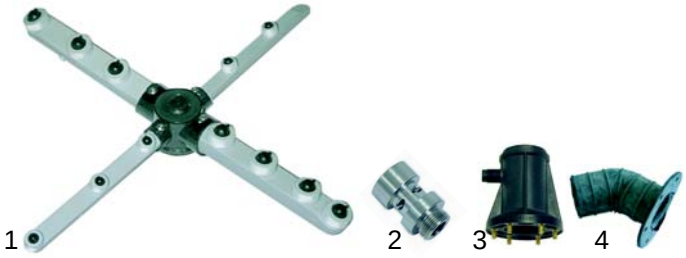


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510119 | wash arm, compl. | LTB11, LTB12, LTB22 | 069576 |
| 2 | 510108 | rinse arm spindle | | 069445 |
| 3 | 510031 | wash arm support | | 069443 |
| 4 | 518036 | gasket (outlet hose) | | 046878 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510010 | wash arm cross | LTB11, LTB12, LTB22 | 69452 |
| 2 | 518382 | wash arm/ right | | |
| 3 | 518385 | wash arm/ left | | |
| 4 | 518384 | rinse arm/ right | | |
| 5 | 518383 | rinse arm/ left | | |
| 6 | 518004 | wash jet | | 069449 |
| 7 | 510131 | union nut/ wash jet | | 069448 |
| 8 | 510139 | rinse jet | | 069451 |
| 9 | 510130 | union nut/ rinse jet | | 069450 |

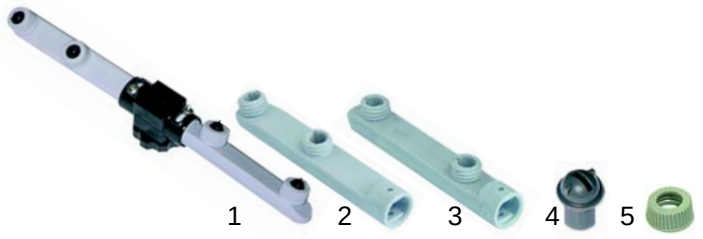


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510118 | rinse arm, compl. | LTB11, LTB12, LTB22 | 069577 |
| 2 | 518328 | rinse arm/ right | | |
| 3 | 518329 | rinse arm/ left | | |
| 4 | 510139 | rinse jet | | 069451 |
| 5 | 510130 | union nut (rinse arm) | | 069450 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510135 | wash jet holder/ fixed arm | LTB11, LTB12, LTB22 | 069640 |
| 2 | 510147 | wash jet | | 069641 |
| 3 | 518482 | union nut, wash jet | | 069642 |
| 4 | 510112 | lock screw | | 069440 |
| 5 | 518279 | cover | | 069444 |

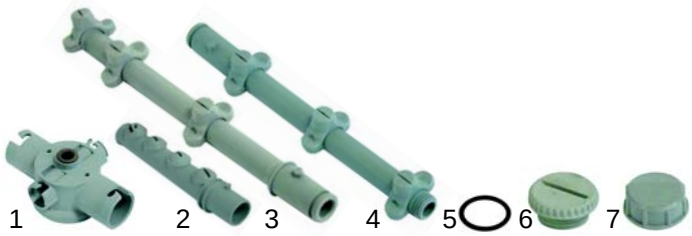


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504508 | wash arm cross | LS5, LS32, LS33 | 049293 |
| 2 | 504509 | wash arm | | 049295 |
| 3 | 504510 | rinse arm | | 049297 |
| 4 | 504511 | rinse arm | | 049298 |
| 5 | 504512 | O-ring (rinse arm) | | 047473 |
| 6 | 504513 | end cap (wash arm) | | 049296 |
| 7 | 504514 | end cap (rinse arm) | | 049299 |

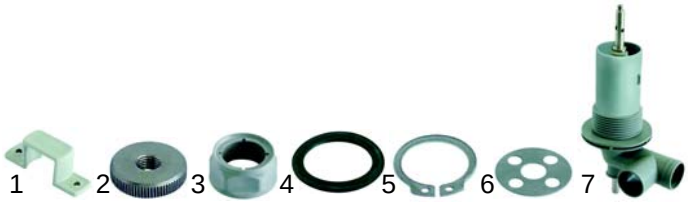


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504515 | protection (lock nut) | LS5, LS32, LS33 | 049294 |
| 2 | 504516 | lock nut | | 047282 |
| 3 | 504517 | nut (wash arm support) | | 048330 |
| 4 | 504537 | gasket | | 048236 |
| 5 | 504519 | circlip | | 048979 |
| 6 | 504520 | throttle disc | | 048820 |
| 7 | 504521 | wash arm support/ lower | | 049290 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504515 | protection (lock nut) | LS5, LS32, LS33 | 049294 |
| 2 | 504516 | lock nut | | 047282 |
| 3 | 504522 | rinse arm spindle | | 049292 |
| 4 | 504512 | O-ring | | 047473 |
| 5 | 504523 | nut (wash arm support) | | 048824 |
| 6 | 504524 | gasket | | 048823 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504525 | wash arm | LS6, LS7D, LS7, LS8D, LS8, LS62, LS63 | 048821, 048336 |
| 2 | 504526 | rinse arm | | 048716, 048542 |
| 3 | 504527 | rinse arm spindle | | 048290 |
| 4 | 504528 | lock nut | | 048632 |
| 5 | 504529 | wash arm bearing | | 048401 |

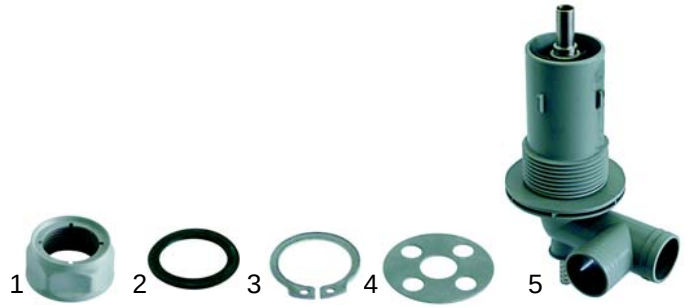


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504517 | nut (wash arm support) | LS6, LS7D, LS7, LS8D, LS8, LS62, LS63 | 048330 |
| 2 | 504537 | gasket | | 048236 |
| 3 | 504519 | circlip | | 048979 |
| 4 | 504520 | throttle disc | | 048820 |
| 4 | 504530 | throttle disc (L58/ old) | | 048645, 048931 |
| 5 | 504531 | wash arm support/ lower | | 048819, 048329 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504523 | nut (wash arm support) | LS6 | 048824 |
| 2 | 504524 | gasket | | 048823 |
| 3 | 504532 | rinse arm | LS7D, LS7, LS8D, LS8 | 048333 |
| 4 | 504533 | gasket | | 046366 |
| 5 | 504534 | wash arm support/ upper | | 046368 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504535 | wash arm | LS10, LS12, LS14 | 048247 |
| 2 | 504526 | rinse arm | | 048716 |
| 3 | 504527 | rinse arm spindle | | 048290 |
| 4 | 504528 | lock nut | | 048632 |
| 5 | 504529 | wash arm bearing | | 048401 |

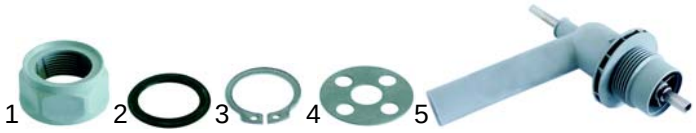


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504536 | nut (wash arm support) | LS10, LS12, LS14 | 048237 |
| 2 | 504537 | gasket | | 048236 |
| 3 | 504519 | circlip | | 048979 |
| 4 | 504530 | throttle disc | | 048931 |
| 5 | 504539 | wash arm support/ lower | | 048235 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504540 | wash arm | LS360, LS365 | 068660 |
| 2 | 504541 | rinse arm | LS360, LS365, LS540, LS720, LS860 | 046371 |
| 3 | 504516 | lock nut | | 047282 |
| 4 | 504543 | rinse jet | | 046272 |
| 5 | 504544 | O-ring | | 067898 |
| 6 | 504545 | rinse jet holder | | 046273 |
| 7 | 504546 | end cap | | 046266 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504547 | lock nut (wash arm) | LS360, LS365, LS540, LS720, LS860 | 047283 |
| 2 | 504548 | bush (wash arm) | | 045771 |
| 3 | 504549 | rinse arm spindle | | 046363 |
| 4 | 504550 | wash arm bearing | | 046362 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504551 | wash arm support/ lower | LS360, LS365, LS540, LS720, LS860 | 046373 |
| 2 | 504552 | O-ring | | 027301 |
| 3 | 504534 | wash arm support/ upper | LS360, LS365, LS540, LS720 | 046368 |
| 4 | 504554 | wash arm support/ upper | LS860 | 046547 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504555 | nut | LS540, LS720, LS860, LS1086 | 047891 |
| 2 | 504556 | O-ring | | 047929 |
| 3 | 504557 | junction | LS540 | 047893 |
| 4 | 504558 | junction | LS720, LS860, LS1080 | 047907 |
| 5 | 504559 | gasket | | 047928 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504560 | wash pipe | LS360, LS365 | 046400 |
| 2 | 504561 | gasket | | 067768 |
| 3 | n. l. a. | wash pipe | LS540 | 046374 |
| 3 | 504563 | wash pipe | LS720, LS860, LS1080 | 046544 |
| 4 | 504564 | O-ring | | 065506 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504565 | wash arm cross | LS510, LS520, LS521 | 047990 |
| 2 | 504566 | wash arm | | 047470 |
| 3 | 504567 | rinse arm/ short | | 048142 |
| 4 | n. l. a. | rinse arm/ long | | 047889 |
| 5 | 504512 | O-ring (rinse arm) | | 047473 |
| 6 | 504570 | end cap (rinse arm) | | 047475 |
| 7 | 504571 | end cap (wash arm) | | 047471 |
| 8 | 504572 | rinse jet | | 047927 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504542 | protection (lock nut) | LS510, LS520, LS521 | 047991 |
| 2 | 504516 | lock nut | | 047282 |
| 3 | 504573 | rinse arm spindle | | 047464 |
| 4 | 504574 | O-ring | | 046376 |
| 5 | 504575 | throttle disc | | 046361 |

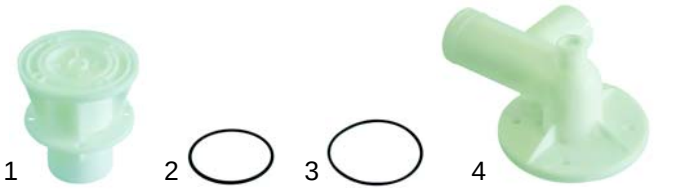


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504576 | cover | LS510, LS520, LS521 | 048145 |
| 2 | 504577 | O-ring/ inner | | 047462 |
| 3 | 504578 | O-ring/ outer | | 045462 |
| 4 | 504579 | wash arm support | | 047461 |

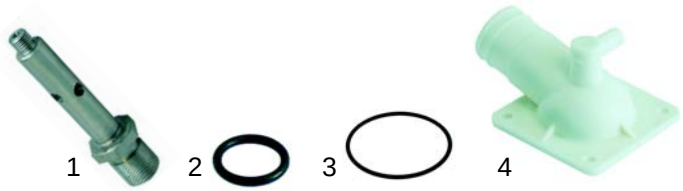


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504573 | rinse arm spindle | LS510, LS520, LS521 | 047464 |
| 2 | 504574 | O-ring | | 046376 |
| 3 | 504580 | gasket | | 046366 |
| 4 | 504534 | wash arm support/ upper | | 046368 |

## Various

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504582 | X-piece | | 049073 |
| 2 | 504583 | Y-piece | | 048195 |
| 3 | 504584 | Y-piece | | 049289 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504585 | guard filter | | 048746 |
| 2 | 504586 | guard filter | | 048834 |
| 3 | 504587 | non-return valve | | 048414 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 516101 | back flow restrictor | | 049332 |
| 2 | 510789 | back flow restrictor | | 048191 |

## Softeners

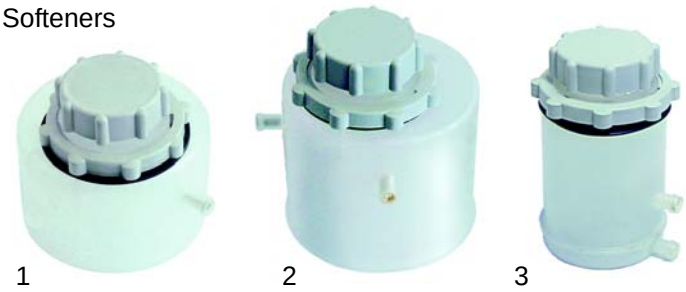


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504045 | salt container, compl. | LB1, LB2 | 049075 |
| 2 | 510929 | salt container, compl. | LTB12, LTB22 | 069575, 069471 |
| 3 | 510032 | salt container, compl. | | 069680 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510015 | cap | LTB12, LTB22 | 069467 |
| 2 | 510072 | gasket | | 049245, 069468 |
| 3 | 510018 | nut | | 069469 |
| 4 | 510071 | gasket | | 049244, 069470 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510109 | cap | LTB11 | 069472 |
| 2 | 510071 | gasket | | 069470 |
| 3 | 510110 | nut | | 069552 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 505102 | softener | LB1, LB2 | 049074 |
| 2 | 530000 | softener | LTB11, LTB12 | 069476 |

## Detergent components

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504690 | rinse aid container | LB1, LB2 | 049024 |
| 2 | 504691 | hose connector | | 049026 |
| 3 | 504692 | gasket | | 049201, 067292 |
| 4 | 504693 | filter | | 049022 |
| 5 | 504694 | spring | | 049023 |
| 6 | 504695 | flap | | 049021 |

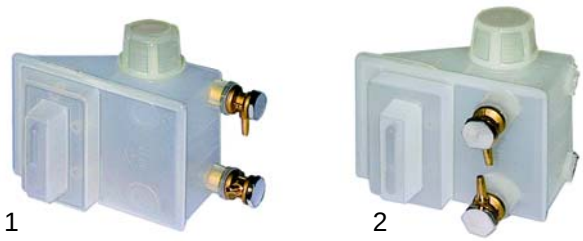


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510100 | container, compl./ connection on the side | LTB11, LTB12, LTB22 | 069521 |
| 2 | 510099 | container, compl./ connection in the front | | 069547 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510077 | O-ring | LTB11, LTB12, LTB22 | 069644 |
| 2 | 510105 | connection fitting | | 069646 |
| 3 | 510016 | banjo bolt | | 069645 |
| 4 | 510014 | gasket | | 069525 |

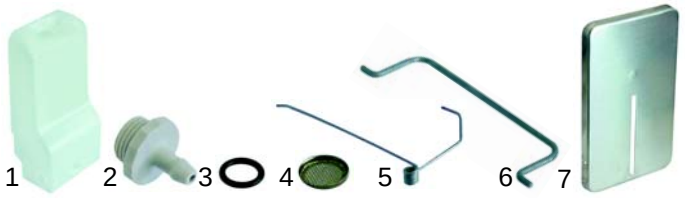


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504696 | container | LS5, LS32, LS33 | 049975 |
| 2 | 504691 | hose connector | | 049026 |
| 3 | 504692 | gasket | | 049201, 067292 |
| 4 | 504693 | filter | | 049022 |
| 5 | 504697 | spring | | 048279 |
| 6 | 504694 | spring | | 049023 |
| 7 | 504698 | flap | | 048363 |

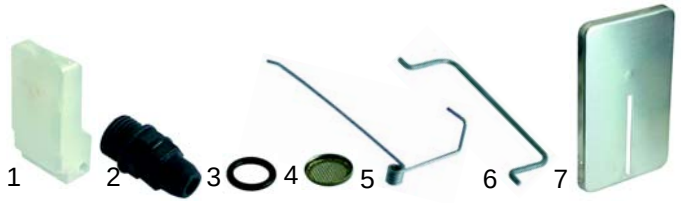


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504690 | container | LS6 | 049024 |
| 2 | 504699 | hose connector | | 049941 |
| 3 | 504692 | gasket | | 067292, 049292 |
| 4 | 504693 | filter | | 049022 |
| 5 | 504697 | spring | | 048279 |
| 6 | 504694 | spring | | 049023 |
| 7 | 504698 | flap | | 048363 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504700 | container | LS7 | 068630 |
| 2 | 504701 | cap | | 068644 |
| 3 | 504702 | suction tube | | 068650 |
| 4 | 504703 | gasket | | 048434 |
| 5 | 504704 | pin | | 068627 |
| 6 | 504705 | spring | | 068645 |
| 7 | 504706 | flap | | 048465 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504707 | container | LS32, LS33, LS61, LS62, LS63, LS64, LS510, LS520, LS521 | 047549 |
| 2 | 504708 | cap | | 047551 |
| 3 | 504709 | panel | | 047547 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504710 | nut | LS32, LS33, LS61, LS62, LS63, LS64, LS510, LS520, LS521 | 047550 |
| 2 | 504711 | gasket | | 030186 |
| 3 | 504712 | funnel | | 047548 |
| 4 | 504713 | suction tube | | 047552 |

## Air traps

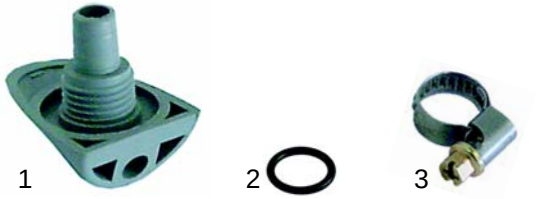


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504617 | air trap (drain pump) | LB1, LB2, LS5, LS6, LS7, LS8, LS10, LS12, LS14, LS33, LS63, LS64 | 048853 |
| 2 | 504618 | gasket | | 068642 |
| 3 | 504619 | hose clamp | | 046946 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510103 | air trap, compl. | LTB11, LTB12, LTB22 | 069515 |
| 2 | 510077 | O-ring | | 069644 |
| 3 | 510105 | connection for pump | | 069670 |
| 4 | 510017 | union nut | | 0A6065 |
| 5 | 510016 | banjo bolt | | 069646 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504620 | air trap | LS5, LS6, LS7, LS8, LS10, LS12, LS14, LS32, LS33, LS61 - LS64 | 048308 |
| 2 | 504618 | gasket | | 068642 |
| 3 | 504621 | nut | | 049268 |
| 4 | 504622 | air trap | LS10 (old), LS12 (old), LS360, LS365, LS510, LS520, LS521 | 046631 |
| 5 | 504623 | O-ring | | 068573 |
| 6 | 504624 | air trap | LS540, LS720, LS860, LS1080 | 045459 |
| 7 | 504623 | shaft seal | | 068573 |

## Drain and filter systems

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504588 | drain plug | LB1, LB2 | 049914 |
| 2 | 504589 | drain plug, drain pump | | 049915 |
| 3 | 504590 | O-ring | | 049036 |

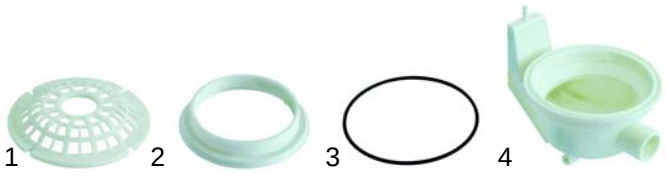


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504591 | filter | LB1, LB2 | 049032 |
| 2 | 504592 | nut | | 049034 |
| 3 | 504593 | O-ring | | 049033 |
| 4 | 504594 | drain unit with air trap | | 049035 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510038 | drain plug | LTB11, LTB12, LTB22 | 069526 |
| 2 | 518490 | drain plug (drain pump) | | |
| 3 | 518491 | O-ring | | 069527 |
| 4 | 510045 | sump/filter compl. | | 069574 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510040 | outer filter | LTB11, LTB12, LTB22 | 069528 |
| 2 | 510041 | inner filter | | 069529 |

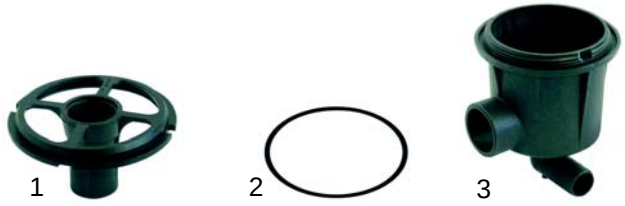


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 518199 | filter location | LTB11, LTB12, LTB22 | 069530 |
| 2 | 510009 | O-ring | | 069531 |
| 3 | 518201 | inlet body | | 069532 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510770 | drain plug | LS5, LS6, LS7, LS8, LS32, LS33, LS62, LS63 | 048323 |
| 2 | 510771 | drain plug (drain pump) | | 048842 |
| 3 | 510769 | gasket | | 046799 |

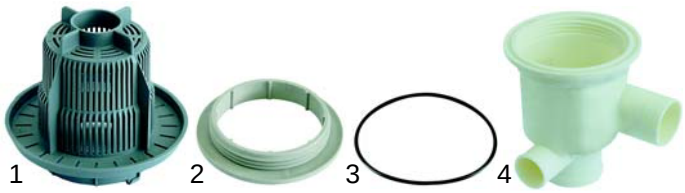


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504595 | filter | LS5, LS6, LS7, LS8, LS32, LS33, LS62, LS63 | 048324 |
| 2 | 504596 | nut | | 048326 |
| 3 | 504597 | gasket | | 048327 |
| 4 | 504598 | sump | | 048325 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504599 | drain plug | LS10, LS12, LS14 | 048250 |
| 2 | 504600 | gasket | | 048229 |
| 3 | 504601 | inlet body | | 049600 |

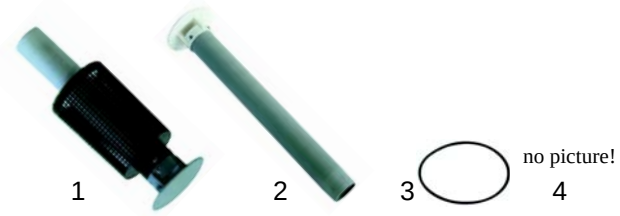


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510433 | drain plug + filter | LS360 | 068713 |
| 2 | n. l. a. | drain plug | LS365 | 046635 |
| 3 | 504578 | O-ring | LS360, LS365 | 045462 |
| 4 | 504604 | inlet body | | 046396, 046395 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510434 | drain plug + filter | LS540, LS720, LS860, LS1080 | 045476 |
| 2 | 504578 | O-ring | | 045462 |
| 3 | 504605 | inlet body | LS540, LS720 | 045458 |
| 4 | 504606 | inlet body | LS860, LS1080 | 046525 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510768 | drain plug | LS510, LS520 | 047460 |
| 2 | 504607 | drain plug | LS521 | 047556 |
| 3 | 510769 | O-ring | | 046799 |

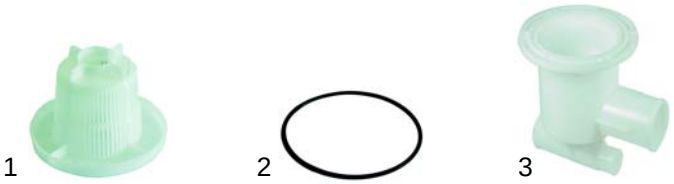


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504608 | filter | LS510, LS520, LS521 | 047456 |
| 2 | 504609 | O-ring | | 047458 |
| 3 | 504610 | inlet body | | 047457 |

## Flat filters

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504611 | flat filter | LB1, LB2 | 049051 |
| 2 | 504612 | flat filter | LS6 | 049908 |
| 3 | 504613 | flat filter | LS10, LS12, LS14 | 048252 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504614 | flat filter | LS7, LS8, LS32, LS33, LS61 - 64 | 048332 |
| 2 | 504615 | flat filter | LS510, LS520, LS521 | 047544 |

| | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504616 | drain seating | LS10, LS12, LS14 | 049633 |

## Hoses

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504625 | inlet hose | LB1, LB2 | 049041 |
| 2 | 518217 | inlet hose | LTB11, LTB12, LTB22 | 069537 |
| 3 | 518216 | outlet hose | | 046878 |

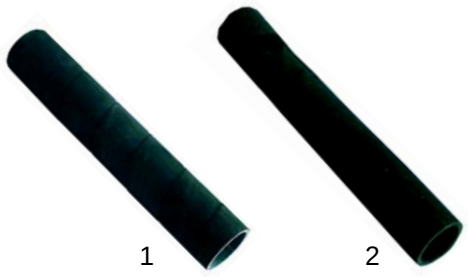


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504626 | inlet hose | LS5, LS6, LS7, LS8, LS32, LS33, LS61 - LS64 | 045768 |
| 2 | 504627 | outlet hose | | 046257 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504628 | inlet hose | LS360, LS365, LS510, LS520, LS521 | 045457 |
| 2 | 504629 | outlet hose | LS360, LS365, LS510, LS520, LS521 | 046398 |
| 3 | 504627 | outlet hose | | 046257 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504628 | inlet hose | LS10, LS12, LS14 | 048242 |
| 2 | 504629 | outlet hose | | 045456 |
| 3 | 504626 | inlet hose | | 045768 |
| 4 | 504630 | outlet hose (old) | | 048241 |

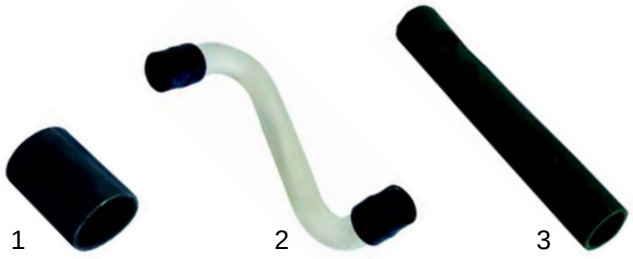


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504631 | inlet hose | LS540, LS541, LS720, LS721 | 045456 |
| 2 | 504632 | outlet hose | | 046372 |
| 3 | 504627 | outlet hose | | 046257 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504633 | inlet hose | LS860, LS861, LS1080 | 046565 |
| 2 | 504634 | outlet hose | | 046542 |
| 3 | 504635 | outlet hose | | 046546 |

## Door components

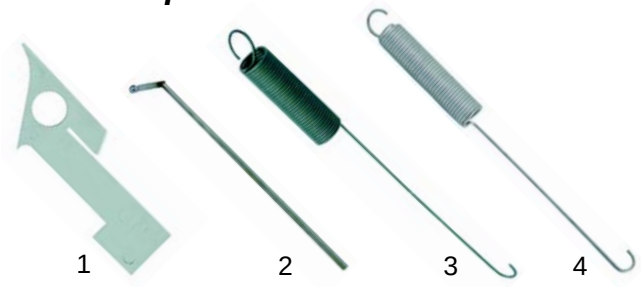


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504636 | plastic plate | LB1, LB2 | 049246 |
| 2 | 504637 | spring jack | | 049030 |
| 3 | 504638 | spring | LB1 | 049200 |
| 4 | 504639 | spring | LB2 | 049086 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 518546 | hinge/ right | LTB11, LTB12, LTB22 | 069513 |
| 2 | 518547 | hinge/ left | | |
| 3 | 518256 | hinge clamp/ right | | 069514 |
| 4 | 518257 | hinge clamp/ left | | |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504641 | hinge/ left | | 049280 |
| 2 | 504640 | hinge/ right | | 049279 |
| 3 | 504642 | hinge pin | | 049281 |
| 4 | 504643 | door stay | | 049282 |
| 5 | 504644 | end stop | | 049286 |
| 6 | 504645 | rod guide | | 049285 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504646 | hinge lever/ right | LS6, LS61, LS62, LS63, LS64 | 048813 |
| 2 | 504647 | hinge lever/ left | | 048814 |
| 3 | 504648 | bush | | 048812 |
| 4 | 504649 | spring | | 048815 |

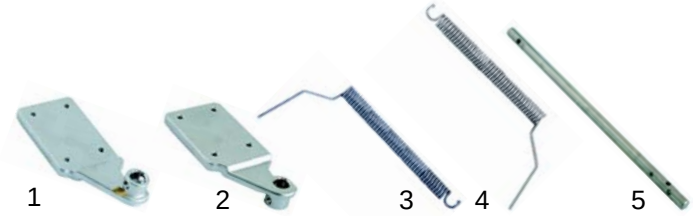


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504650 | hinge/ right | LS7 | 048583 |
| 2 | 504651 | hinge/ left | | 048582 |
| 3 | 504652 | spring right | | 046269 |
| 4 | 504653 | spring left | | 046268 |
| 5 | 504654 | spring linkage | | 048581 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504655 | hinge/ right | LS360, LS365, LS540, LS541 | 046292 |
| 2 | 504656 | hinge/ left | | 046291 |
| 3 | 504652 | spring right | | 046269 |
| 4 | 504653 | spring left | | 046268 |
| 5 | 504654 | spring linkage | | 048581, 046267 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504657 | hinge | LS510, LS520, LS521 | 048161 |
| 2 | 504658 | hinge screw | | 047478 |
| 3 | 504659 | catch housing | | 047491 |
| 4 | 504660 | spring | | 047492 |
| 5 | 504661 | door catch | | 047493 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510068 | catch | LTB11, LTB12, LTB22 | 069435 |
| 2 | 510069 | door catch | | 069436 |
| 3 | 504662 | catch | LS5, LS32, LS33 | 049271 |
| 4 | 504663 | door catch | | 049536 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504664 | door frame | LS360, LS365 | 046392 |
| 2 | 504665 | door frame | LS510, LS520, LS521 | 047483 |
| 3 | 504666 | door frame | LS540 | 046270 |

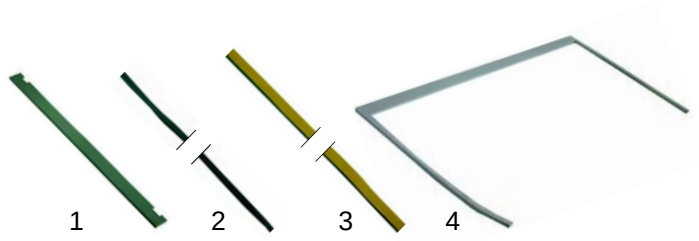


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504667 | door seal/ upper | LB1, LB2 | 049017 |
| 2 | 504668 | door seal/ lower | | 049016 |
| 3 | 504669 | door seal/ upper | LS5, LS32, LS33 | 046583 |
| 4 | 504670 | door seal/ upper | LS6 | 049932 |

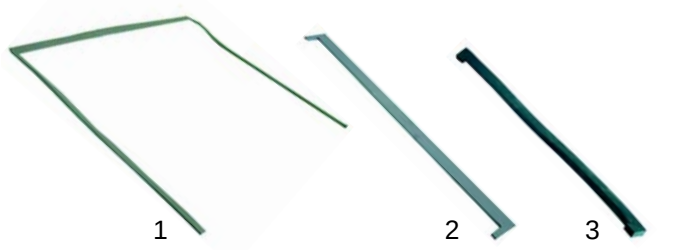


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504671 | door seal/ upper | LS7 | 049248 |
| 2 | 504672 | door seal/ upper | LS61 - LS64 | 048306 |
| 3 | 504673 | door seal/ upper | LS360, LS365 | 046394 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504674 | door seal/ right | LS510, LS520, LS521 | 047454 |
| 2 | 504675 | door seal/ left | | 047455 |

## Hood components

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504676 | handle support | LS720, LS860, LS1080 | 046537 |
| 2 | 504677 | bush | | 046538 |
| 3 | 504678 | handle support | LS12 (old) | 049430 |
| 4 | 504679 | screw | | 048349 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504680 | handle support | LS12, LS14 | 049597 |
| 2 | 504681 | roller | | 049598 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504682 | spring | LS720 | 046615 |
| 2 | 504683 | spring | LS860, LS1080 | 046540 |
| 3 | 504684 | spring | LS8 | 048655 |

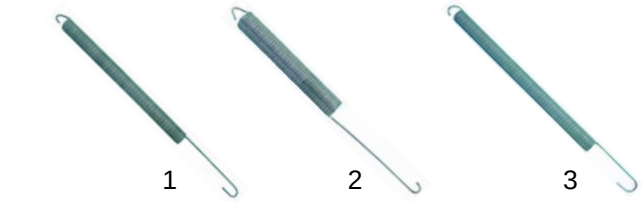


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504685 | spring | LS10, LS12, LS14 | 049582 |
| 2 | 504686 | spring | LS10 (old), LS12 (old) | 048258 |
| 3 | 504687 | spring | LS14EA/ AU | 049947 |

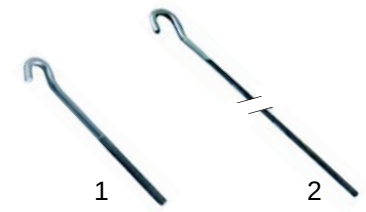


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504688 | spring compressor | LS720, LS860, LS1080, LS8, L10 (old), LS12 (old) | 075767 |
| 2 | 504689 | spring compressor | LS10, LS12, LS14 | 049583 |

## Electrical components

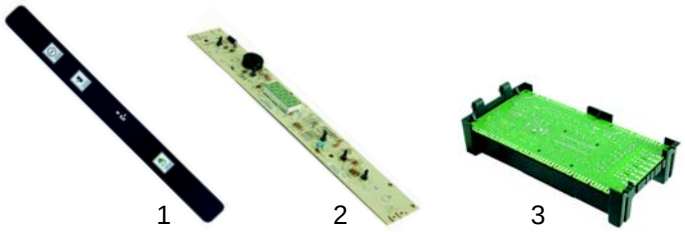


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 400915 | fascia | LS5 | 049956 |
| 2 | 400916 | display p.c.b. | | 0L0047 |
| 3 | 400917 | main p.c.b. | | 0L0046 |

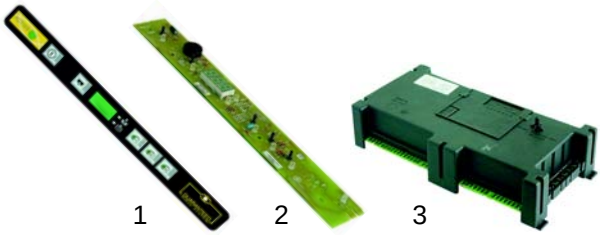


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 400918 | fascia | LS6 | 049920 |
| 2 | 400919 | display p.c.b. | | 049897 |
| 3 | 400920 | main p.c.b. | | 049910, 0L0045 |

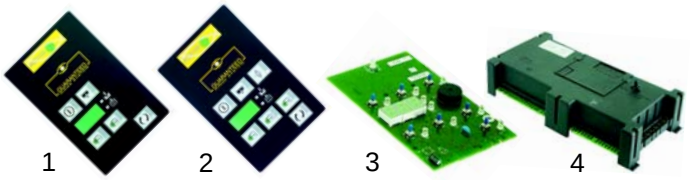


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 400921 | fascia | LS10EA | 0L0008 |
| 2 | 400922 | fascia | LS14EA | 0L0001 |
| 3 | 400923 | display p.c.b. | LS10EA, LS14EA | 049998 |
| 4 | 400920 | main p.c.b. | | 0L0045 |
| 4 | 400961 | main p.c.b. | | 0L0541 |

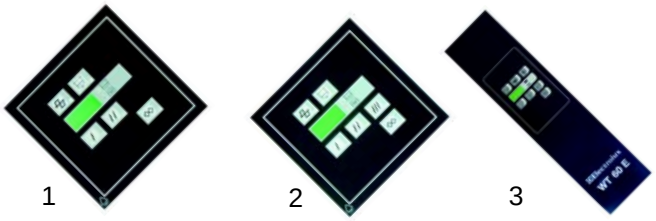


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 400924 | fascia | LS10 | 049605 |
| 2 | 400925 | fascia | LS12 | 049606 |
| 3 | 400926 | fascia | LS12AU | 049604 |

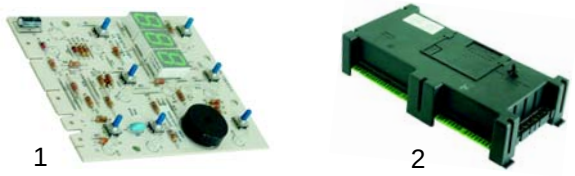


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 400927 | display p.c.b. | LS10, LS12 | 049623, 049754 |
| 2 | 400920 | main p.c.b. | | 049622, 049752, 0L0045 |

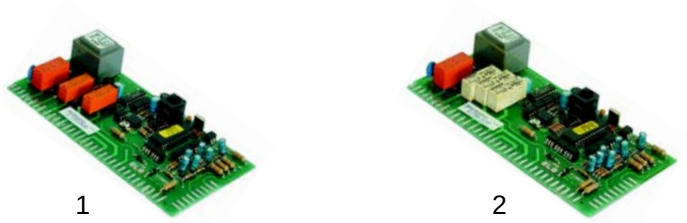


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 400928 | main p.c.b. | LS61, LS62 | 048833 |
| 2 | 400929 | main p.c.b. | LS63, LS64 | 048926 |

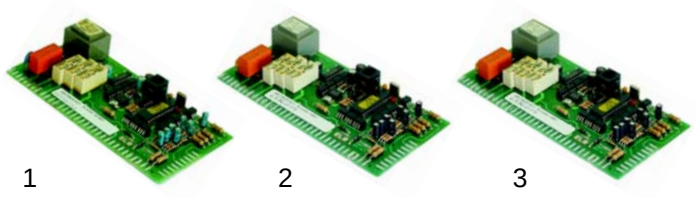


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 400930 | main p.c.b. | LS8DP | 049150 |
| 2 | 400931 | main p.c.b. | LS10DP | 049141 |
| 3 | 400932 | main p.c.b. | LS12DP | 049147 |

no picture!
2

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 360275 | timer p.c.b. | LS32 | 049411 |
| 2 | 360276 | timer p.c.b. | LS33 | 049412 |

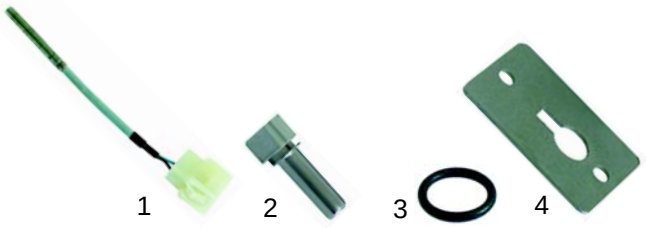


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 379901 | sensor | LS5, LS6 | 049884 |
| 2 | 379902 | sensor | LS5, LS6, LS10, LS12, LS14 | 049643 |
| 3 | 504574 | gasket | | 046376 |
| 4 | 504753 | holder | | 049580 |

### Fasciae

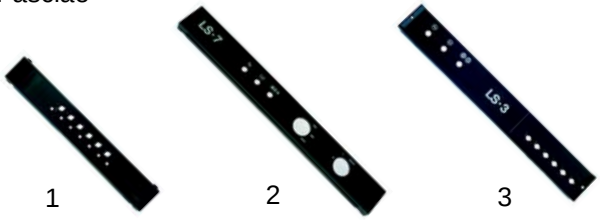


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504714 | fascia | LB1, LB2 | 049061 |
| 2 | 504715 | fascia | LS7 | 048339 |
| 3 | 504716 | fascia | LS32, LS33 | 049313 |

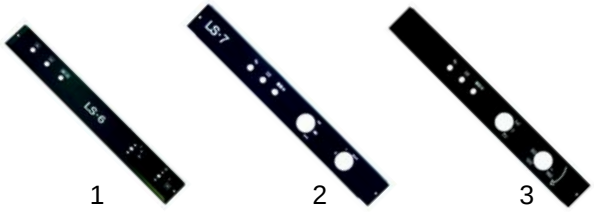


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504717 | fascia | LS61, LS62 | 048827 |
| 2 | 504718 | fascia | LS63 | 048903 |
| 3 | 504719 | fascia | LS520 | 047545<br>047633 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504720 | fascia | LS521 | 047561<br>047633 |
| 2 | 504721 | fascia | LS540, LS720 | 046345 |
| 3 | 504722 | fascia | LS860 | 046732 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504723 | fascia | LS8 | 048648 |
| 2 | 504724 | fascia | LS8DP | 049151 |
| 3 | 504725 | fascia | LS10 | 048470 |

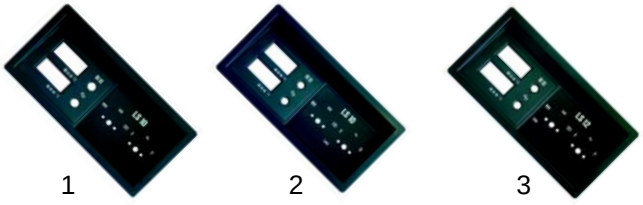


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504726 | fascia | LS10 | 048590 |
| 2 | 504727 | fascia | LS10DP | 049143 |
| 3 | 504728 | fascia | LS12 | 048473 |

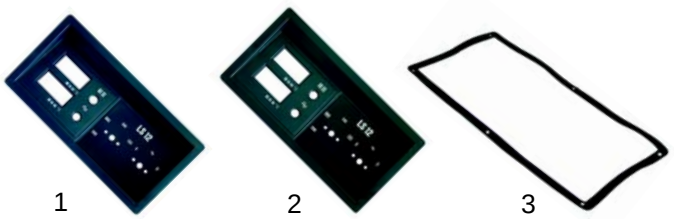


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504729 | switch panel | LS12DP | 049148 |
| 2 | 504730 | switch panel | LS12HD | 048598 |
| 3 | 504731 | gasket | universal | 048274 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 345831 | switch | LB1, LB2 | 049063 |
| 2 | 345832 | push button | | 049068 |
| 3 | 345833 | push button | | 049062 |
| 4 | 345834 | push button | | 049065 |
| 5 | 345836 | signal lamp | | 049064 |

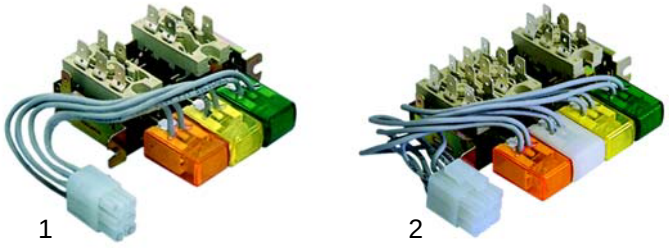


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 345005 | switch combination | LTB11 | 069412 |
| 2 | 345006 | switch combination | LTB12, LTB22 | 069413 |

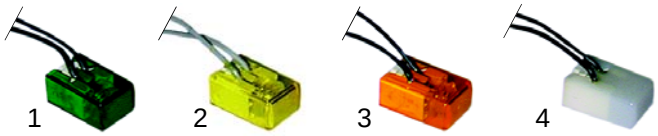


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 359001 | signal lamp | LTB11, LTB12, LTB22 | 069415 |
| 2 | 359002 | signal lamp | | 069416 |
| 3 | 359003 | signal lamp | | 069418 |
| 4 | 359006 | signal lamp | LTB12, LTB22 | 069417 |

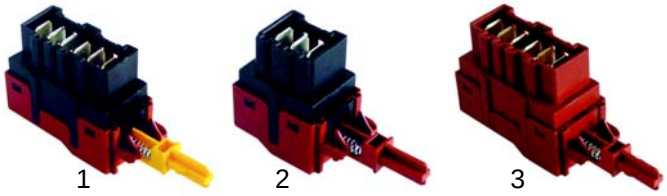


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 345824 | switch | LS32, LS33 | 049316 |
| 2 | 345825 | push button | | 049315 |
| 3 | 345826 | switch | LS33 | 049326 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 345827 | push button/ grey | LS32, LS33 | 049317 |
| 2 | 345828 | push button/ yellow | | 049318 |
| 3 | 345829 | push button | LS33 | 049325 |
| 4 | 345830 | blind cap | LS32, LS33 | 049314 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 359130 | signal element/green | | 048832 |
| 2 | 359126 | socket/green | | 075096 |

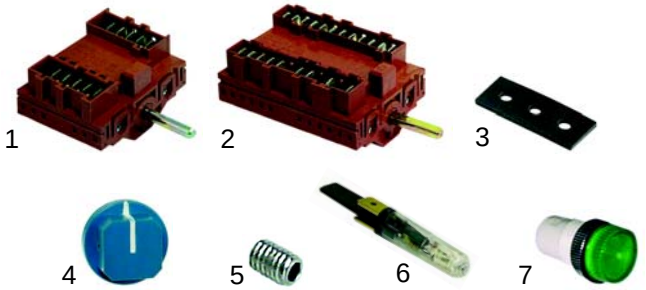


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 345169 | main switch | LS61, LS62, LS63, LS64 | 048829 |
| 2 | 345168 | program switch | | 048828 |
| 3 | 504732 | gasket | | 046360 |
| 4 | 110907 | knob | | 048830 |
| 5 | 504733 | grub screw | | 047846 |
| 6 | 359130 | signal element | | 048832 |
| 7 | 359126 | socket/ green | | 075096 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 301087 | rotary switch | LS510, LS520, LS521 | 047498 |
| 2 | 301180 | rotary switch | | 047560 |
| 3 | 504732 | gasket | | 046360 |
| 4 | 110910 | knob | | 047842 |
| 5 | 504733 | grub screw | | 047846 |

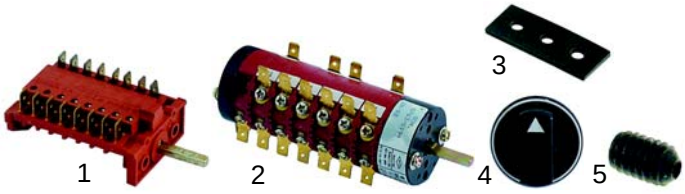


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 301181 | rotary switch | LS360 | 047360 |
| 2 | 301182 | rotary switch | LS365 | 046649 |
| 3 | 504732 | gasket | LS360, LS365 | 046360 |
| 4 | 110911 | knob | | 046356 Z |
| 5 | 504734 | grub screw | | 046258 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 359130 | signal element, 230 V | LS360, L365, LS510, LS520, LS521 | 046241 |
| 1 | 359132 | signal element/ green, 230 V | | 046076 |
| 2 | 359127 | socket/ yellow | | 075095 |
| 3 | 359126 | socket/ green | | 075096 |
| 4 | 359792 | socket/ blue | | 047750 |
| 5 | 359225 | socket/ clear | | 046289 |

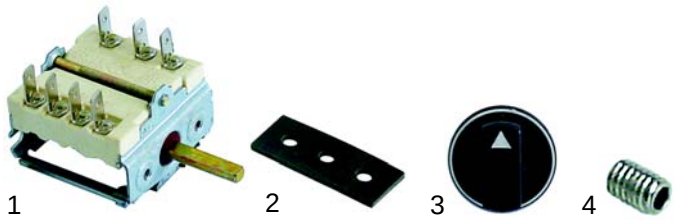


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 301183 | rotary switch | LS540, LS541, LS720, LS860, LS1080 | 046350 |
| 2 | 504732 | gasket | | 046360 |
| 3 | 110911 | knob | | 046356 |
| 4 | 504733 | grub screw | | 047846 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 359130 | signal element | LS540, LS541, LS720, LS860, LS1080 | 048832 |
| 1 | 359132 | signal element/ green, 230 V | | 046076 |
| 2 | 359225 | socket/ clear | | 046289 |
| 3 | 359126 | socket/ green | | 075096 |
| 4 | 359792 | socket/ blue | | 047750 |

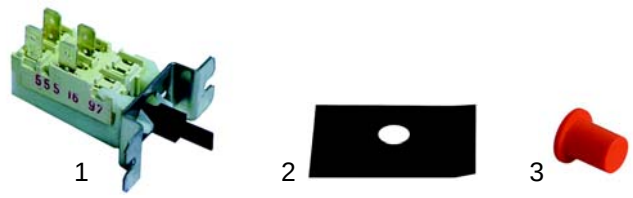


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 345021 | switch | LS540, LS541, LS720, LS860, LS1080, LS360, LS365 | 045165, 046348 |
| 2 | 504735 | gasket | | 046298 |
| 3 | 345744 | push button | | 046293 |

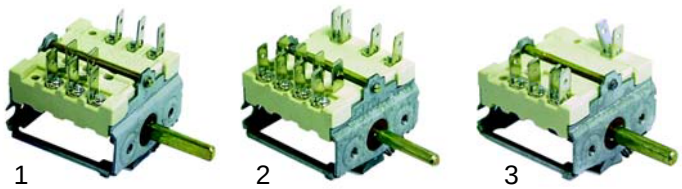


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 345171 | main switch | LS7, LS10 (to Nr 304_), LS12 (to Nr 304_) | 048271 |
| 2 | 345172 | main switch | LS8, LS10 (from Nr 305_), LS12 (from Nr 305_) | 048524 |
| 3 | 345170 | program switch | LS7, LS8, LS10 | 048270 |

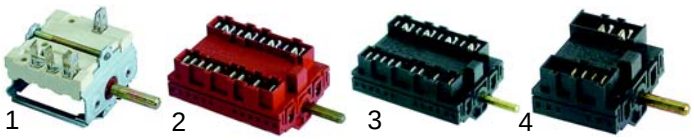


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 301184 | program switch | LS12 | 048286 |
| 2 | 301185 | main switch | LS7DP | 048828 |
| 3 | 301186 | main switch | LS8DP, LS10DP, LS12DP | 049144 |
| 4 | 301187 | program switch | LS7DP, LS8DP, LS10DP, LS12DP | 049145 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504732 | gasket | | 046360 |
| 2 | 110912 | knob | LS7 | 048340 |
| 3 | 110913 | knob | LS8, LS10, LS12 | 048402 |
| 4 | 504733 | grub screw | | 047846 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 359130 | signal element, 230 V | LS7, LS8 LS10, LS12 | 048488 |
| 1 | 359132 | signal element/green, 230 V | | 048832 |
| 2 | 359126 | socket/green | | 075096 |

## Timers

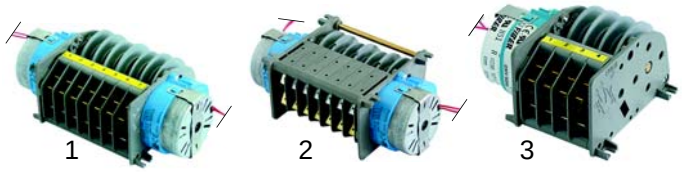


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 360279 | 120“/ 300“, 7 cams, 230 V | LB1, LB2 (to Nr 716) | 49054 |
| 2 | 360278 | 120“/ 300“, 7 cams, 230 V | LB1 (from Nr 717), LB2 (from Nr 717) | 49256 |
| 3 | 360277 | regeneration, 230 V | LB1, LB2 | 49251 |

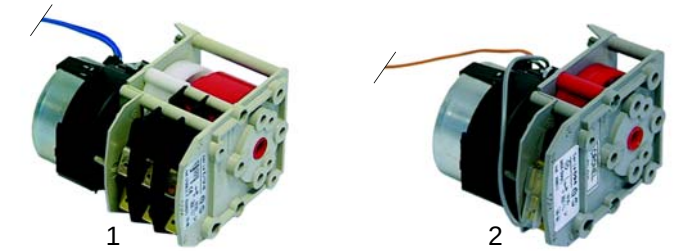


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 360024 | 120“, 230 V | LTB11, LTB12, LTB22 | 069419, 069669 |
| 2 | 360005 | 20“, 230 V (regeneration) | | 069420 |

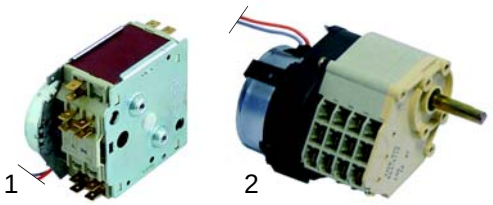


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 360283 | 230 V | LS360, LS365 | 068671 |
| 2 | 360039 | 180“, 4 cams, 230 V | LS510, LS520, LS521 | 047497, 048881 |

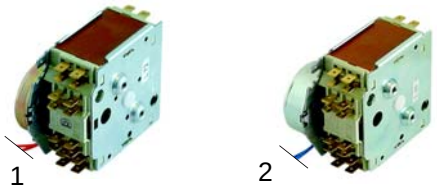


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 360280 | 230 V | LS720 | 046621 |
| 2 | 360281 | 230 V | LS860 | 046733 |

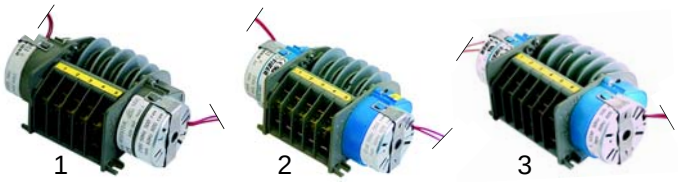


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 360071 | 5 cams, 230 V | LS7 | 48303 |
| 2 | 360073 | 5 cams, 230 V | LS8 | 48647 |
| 3 | 360074 | 6 cams, 230 V | LS10, LS12 | 48591, 48264 |

## Pressure switches

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 541177 | 110/ 55, 165/ 135 (drain pump) | LB1, LB2 | 049081 |
| 2 | 541171 | 110/ 55 | | 049058 |
| 3 | 541003 | 55/ 35 | LTB11, LTB12, LTB22 | 069434 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 541006 | 60/ 20 | LS360, LS510, LS520, LS540, LS7, LS8 | 049485, 046352, 048723 |
| 2 | 541007 | 68/ 54 | LS365 | 046648 |
| 3 | 541172 | 110/ 85 - 60/ 20 | LS521 | 048752 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 541008 | 105/ 60 | LS720, LS860, LS1080 | 046601 |
| 2 | 541173 | 2 levels | LS7DP, LS8DP, LS61, LS62, LS63, LS64 | 048826 |
| 3 | 541178 | 250/ 130 - 390 | LS10, LS12, LS12DP, LS14 (electronic control) | 049620 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 541179 | 240/ 130 | LS10, LS12 | 048267 |
| 2 | 541174 | 2 levels | LS10DP, LS12DP | 049142 |

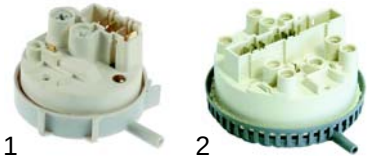


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 541175 | 60/ 20 | LS32 | 049305, 049881 |
| 2 | 541176 | 110/ 80 - 60/ 20 | LS32 (from Nr 731_), LS33 (from Nr 731_) | 049361 |

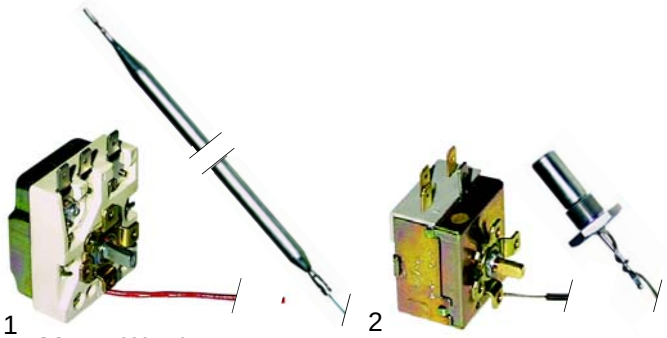


EGO 51.11999.170

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 390004 | 30 - 90 C (boiler) | LTB11, LTB12, LTB22 | 069422 |
| 2 | 390005 | 0 - 85 C (tank) | | 069423 |

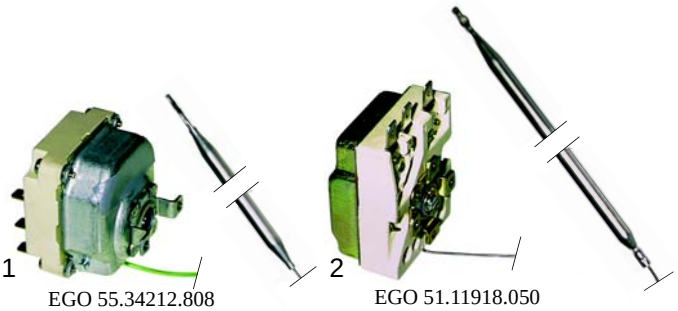


EGO 55.34212.808 EGO 51.11918.050

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 375210 | 30 - 90 C (boiler) | LB1, LB2 | 049191 |
| 2 | 390467 | 82 C fixed (boiler) | LS32, LS33 | 049255 |

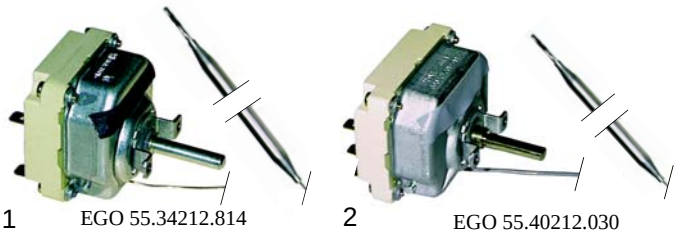


EGO 55.34212.814 EGO 55.40212.030

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 390038 | 30 - 90 C (boiler) | LS360, LS365 | 045169 |
| 2 | 375061 | 30 - 90 C (boiler) | LS360, LS365D | 46413 |

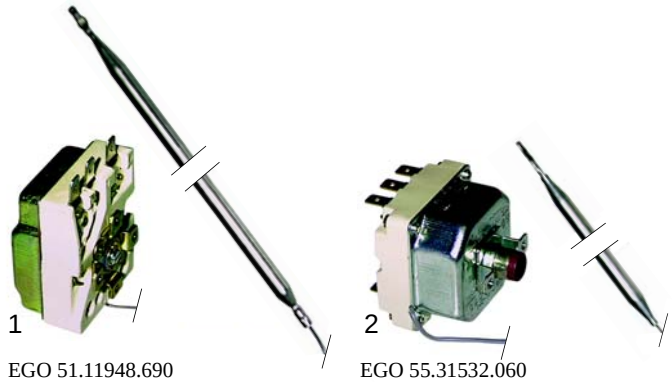


EGO 51.11948.690 EGO 55.31532.060

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 390030 | 30 - 90 C (boiler) | LS7, LS8, LS10, LS12, LS540, LS720, LS860, LS1080, LS61 - LS64 | 048266, 068012, 049243 |
| 2 | 390165 | safety thermostat, 140 C (boiler) | LS520D, LS521D, LS540, LS720, LS860, LS1080 | 051644 |

## Thermostats

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 390101 | contact thermostat | LS360, LS365, LS510, LS520, LS521, LS540, LS720, LS860, LS1080, LS7, LS8, LS10, LS12 | 045495, 048487, 047508 |
| 2 | 390466 | contact thermostat | LS510, LS520, LS521 | 048166, 048631 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 390468 | contact thermostat (tank) | LS - DP, LB1, LB2, LS32, LS33, LS61 - LS64 | 48804 |
| 2 | 390138 | safety thermostat, 112 C (boiler) | LB1, LB2, LS32, LS33, LS61 - LS64, LS7, LS8, LS10, LS12 | 048887, 048287 |
| 3 | 504736 | support plate | | 048987 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504544 | O-ring | universal | 067898 |
| 2 | 504738 | screw | | 067899 |
| 3 | 510417 | gasket | LTB11, LTB12, LTB22 | |
| 4 | 521134 | nut, M14 x 1 | | |

## Micro switches

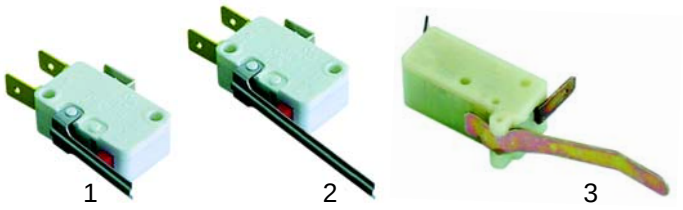


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 345257 | micro switch | LTB11, LTB12, LTB22 | 069484 |
| 2 | 345254 | micro switch | LS360, LS365, LS510, LS520, LS521, LS540 | 047485, 046286, 046379 |
| 3 | 345815 | micro switch | LS720, LS860, LS1080 | 060722 |

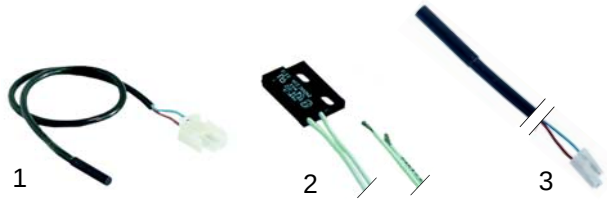


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 345816 | magnetic switch | LB1, LB2, LS8, LS10, LS12 | 048486 |
| 2 | 345117 | magnetic switch | LS7 (to 1994) | 048392 |
| 3 | 345818 | magnetic switch | LS7 (from 1994) | 048893 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 345819 | magnetic switch | LS7DP, LS8DP, LS10DP, LS12DP, LS61, LS62, LS63, LS64 | 048831 |
| 2 | 345820 | magnetic switch | LS32, LS33 | 049226 |
| 3 | 345821 | electronic control | LS5, LS6, LS10, LS12, LS14, LS10DP | 049621 |

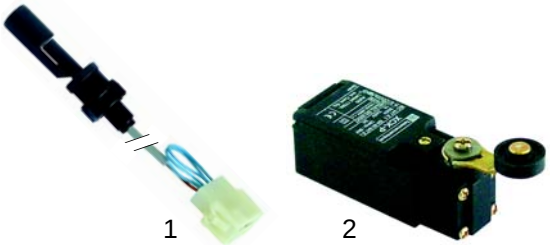


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 345822 | magnetic switch/ level regulator | LS8, LS10, LS12 | 049478 |
| 2 | 345823 | limit switch | LS720, LS860, LS1080 | 048159 |

## Solenoid valves

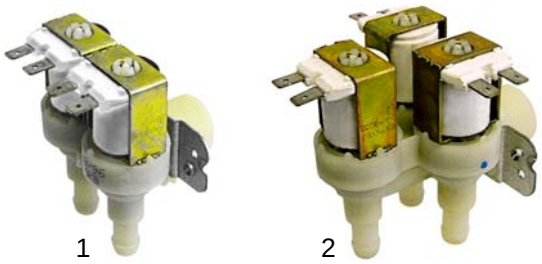


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 370019 | double, 230V | LB1, LB2 | 049056 |
| 2 | 370023 | triple, 230V | | 049077 |

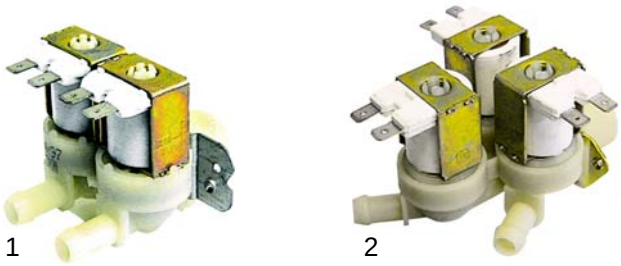


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 370021 | double, 230V | LTB11 | 069463 |
| 2 | 370025 | triple, 230V | LTB12, LTB22 | 069464 |

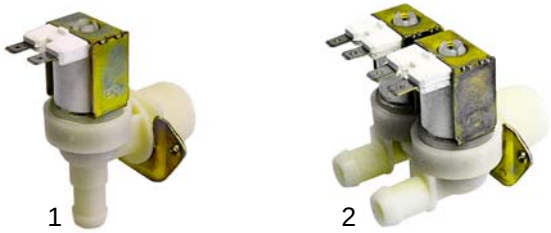


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 370016 | single, 230V | LS7, LS8, LS10, LS12, LS510, LS520, LS521, LS540, LS720, LS860, LS1080, LS5, LS61 - LS64 | 047529, 048178, 047843, 046320, 048898, 048817, 048894 |
| 2 | 370022 | double, 230V | LS_HD | 049230 |

## Relays

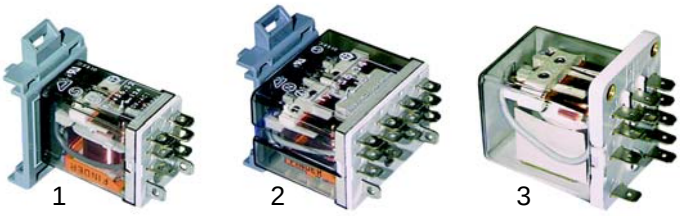


56.328230.__ | 56 348230.__ | B2 - 3230

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 380183 | 2 changeover, 12 A (AC1) | LB1, LB2, LS7, LS10 (to Nr 304_), LS12 (to Nr 304_) | 48438 |
| 2 | 380196 | 4 changeover. 12 A (AC1) | LB1, LB2, LS10 (from Nr 305_), LS12 (from Nr 305) | 48611 |
| 3 | 380131 | 3 changeover, 16 A (AC1) | LS360, LS365, LS540, LS720, LS860, LS1080 | 046380 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 380318 | 2 NO, 16A (AC1) | LS7DP, LS8DP, LS10DP, LS12DP, LS32, LS33, LS61 - LS64 | 048888 |
| 2 | 380622 | time relay, 0,05 sec - 60 h (multifunction) | LS_HD | 049235 |
| 3 | 380136 | base | | 049236 |

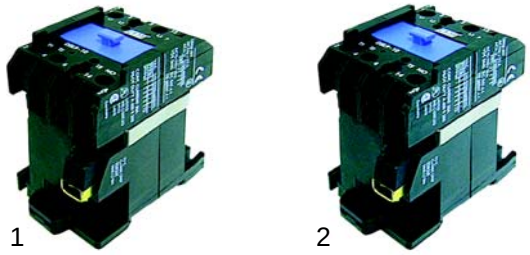


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 380203 | 3 NO/ 1 NC, 230V | LS7, LS8, LS10, LS12, LS14, LS32/4,5, LS33/4,5, LS61 - LS64 | 048403, 048825 |
| 2 | 380204 | 230V | LS540, LS720, LS860, LS1080 | 075796, 082986 |

## Dosing pumps

| Item | Order | Type | Model | OEM |
|---|---|---|---|---|
| 1 | 361370 | Glados, diaphragm | LB1, LB2, LS5, LS32, LS33, LS7 (from Nr 545_), LS8 (from Nr 545_), LS10 (from Nr 242_), LS12 (from Nr 242_) | 048715, 049484 |
| 2 | 361008 | Lang, diaphragm | LS10 (to Nr 241_), LS12 (to Nr 241_9, LS360, LS365, LS510, LS520, LS521, LS540, LS720, LS860, LS1080 | 048498, 045478 |

| Item | Order | Type | Model | OEM |
|---|---|---|---|---|
| 1 | 361004 | DB2, 230V (electrical) | LTB11, LTB12, LTB22 | 069478, 069921 |
| 2 | 361113 | solenoid coil, DB2 | | 049625 |
| 3 | 361013 | Lang, 230V (electrical) | | 048580 |

| Item | Order | Typ | Model | OEM |
|---|---|---|---|---|
| 1 | 361152 | detergent (dosing pump) | LS6, LS10, LS12, LS14 (electronic control) | 049624 |
| 2 | 361150 | rinse aid (dosing pump) 0,4 l | | |
| 2 | 361151 | rinse aid (dosing pump) 1,5 l | | 049625 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 361141 | bottle weight/filter | | 049356 |
| 2 | 361270 | chemical feed elbow | | 049557 |
| 3 | 361147 | non-return valve | | |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 361134 | hose (detergent) | | 049149 |
| 2 | 361135 | hose (rinse aid) | | 049148 |

## Heating elements

Tank heating elements

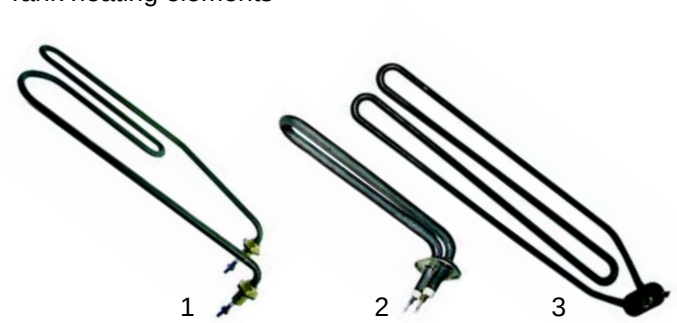


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 415010 | 2000W, 230V | LTB11, LTB12, LTB22 | 069437, 069671 |
| 2 | 415272 | 800W, 230V | LB1, LB2 | 049059 |
| 3 | 415070 | 2200W, 230V | LS6, LS7, LS8, LS10, LS12, LS32, LS33, LS61 - LS64 | 048228, 048924 |
| 3 | 416133 | 2000W, 230V | LS5 | 049954 |

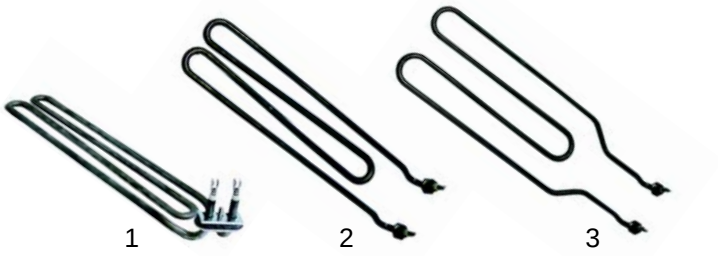


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 416132 | 3000W, 230V | LS10EA, LS14 | 048491 |
| 2 | 415072 | 2200W, 230V | LS360, LS365, LS520D, LS521D, LS720, LS860, LS1080 | 046404, 046418, 048000, 048086 |
| 3 | 415073 | 2200W, 230V | LS510, LS520, LS521, LS540 | 046284, 047507, 047848, 047506 |

## Tank heating elements/ Accessories

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510416 | gasket | universal | 069438 |
| 2 | 520231 | nut, M10 x 1 | | |
| 3 | 521132 | O-ring | | 046223 |
| 4 | 521133 | nut, M14 x 1 | | 046223 |
| 5 | 510387 | gasket | | |
| 6 | 510388 | flange | | 048483 |

## Boiler elements

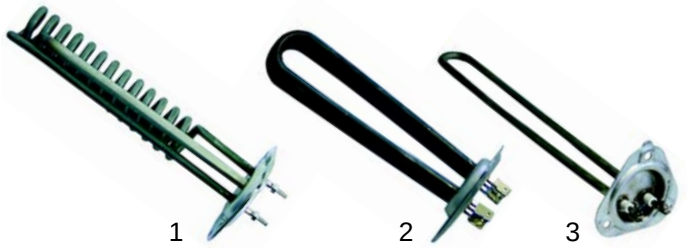


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 415002 | 3000W, 230V | LTB11, LTB12, LTB22 | 069455, 069672 |
| 2 | 415174 | 3000W, 3 phases 230V | LB1, LB2, LS62 - LS64 | 048927 |
| 3 | 416130 | 2800W, 230V | LS32, LS33 | 049371 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 416135 | 2800W, 230V | LS5 | 049980 |
| 2 | 416128 | 4500W, 3 phases 230V | LS5 | 049955 |
| 3 | 415067 | 4500W, 3 phases 230V | LS7/ 9, LS8/ 9, LS12 | 048928, 048284 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 415068 | 6000W, 3 phases 230V | LS7, LS8, LS10 | 048513, 048221 |
| 2 | 416129 | 6000W, 3 phases 230V | LS6 | 048898 |
| 3 | 416131 | 4500W, 3 phases 230V | LS32, LS33, LS540D, LS720D, LS860D | 049307, 052905, 026453 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 415066 | 4500W, 230V | LS520D, LS521D | 047847 |
| 2 | 415080 | 6000W, 230V | | |
| 3 | 416134 | 10500W, 230V | LS10EA, LS14 | 049997 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 415597 | 3000W, 3 phases 230V | LS510, LS520, LS521 | 066109, 047505 |
| 2 | 415069 | 4500W, 3 phases 230V | LS360, LS720, LS860 | 065557, 045518, 046623, 046627 |
| 3 | 415379 | 6000W, 3 phases 230V | LS1080 | 051632, 066110 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 510408 | O-ring | | 003362 |
| 2 | 520236 | flange | | 065558 |

## Boilers

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504739 | boiler | LB1, LN2 | 049053 |
| 2 | 504740 | boiler | LTB11, LTB12, LTB22 | 069453 |
| 3 | 504741 | boiler | LS360, LS365 | 046294 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504742 | boiler | LS510, LS520, LS521 | 048194 |
| 2 | 504743 | boiler | LS540 | 048197 |
| 3 | 504744 | boiler | LS720, LS860, LS1080 | 047950 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504745 | boiler | LS32, LS33 | 049336 |
| 2 | 504746 | boiler | LS61, LS6EP, LS7, LS8, LS10 | 048548, 048341 |
| 3 | 504747 | boiler | LS62, LS63, LS64, LS7/ 9, LS8/ 9, LS12 | 048484, 048727 |

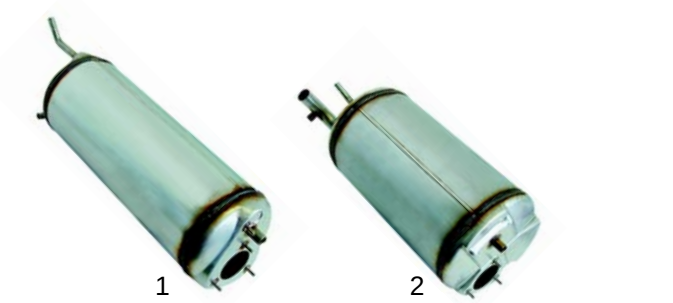


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504748 | boiler | LS5 | 049958 |
| 2 | 504749 | boiler | LS6 | 049902 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 504750 | boiler | LS10EH, LS14 | 049987 |
| 2 | 504751 | boiler | LS10, LS12 (electronic control) | 049632 |

## Pumps

### Drain pumps

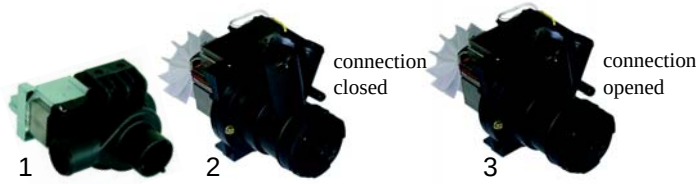


| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 500392 | 34W, 230V | LB1, LB2, LS33, LS63, LS64, LS6_DP, LS7DP, LS8DP, LS10DP, LS12DP | 048844 |
| 2 | 500207 | 90W, 230V | LS365 | 046647 |
| 3 | 500206 | 90W, 230V | LS521 | 047562 |

### Booster pumps

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 500393 | 350W, 230V | LB1, LB2, LS32, LS33, LS62HD | 048910 |
| 2 | 500394 | 280W, 230V | LS6EA, LS10/ LS12/ LS14 - (electronic control) | 049310 |
| 3 | 500395 | 350W, 230V | LS8HD, LS10HD, LS12HD | 049229 |

### Wash pumps

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 500129 | 280W, 230V | LB1, LB2 | 049057 |
| 2 | 500003 | 290W, 230V | LTB11, LTB12, LTB22 | 069450, 069804, 069675, 069805 |
| 3 | 500114 | 740W, 230V | LS32, LS33, LS61 - LS64, LS7DP, LS8DP | 048885 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 500090 | 550W, 230V | LS360, LS365, LS510, LS520, LS521 | 046370 |
| 2 | 500396 | 750W, 230V | LS5, LS6 | 049876 |
| 3 | 500113 | 740W, 230V (3 ph) | LS7, LS8 | 048304 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 500112 | 550W, 230V | LS540D | 046574 |
| 2 | 500056 | 550W, 400V (3 ph) | LS540D, LS720 | 046346 |

| Item | Order | Description | Model | OEM |
|---|---|---|---|---|
| 1 | 500397 | 1kW, 400V, (3 ph) | LS860, LS1080 | 047708 |
| 2 | 500115 | 1,5 kW, 400V, (3 ph) | LS10, LS12, LS14 | 048216 |

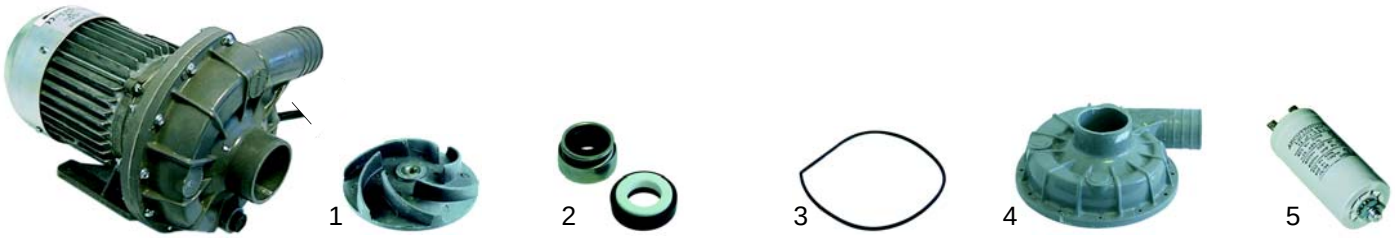


| Pumps | | 1 Impellor | | 2 Mechanical seal | | 3 Housing gasket | | 4 Pump cover | | 5 Capacitor | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| Order | OEM | Order | OEM | Order | OEM | Order | OEM | Order | OEM | Order | OEM |
| 500003 | 069804 | 510615 | 69545 | 510693 | 69543 | 510554 | 69544 | 510512 | - | 365013 | 69541 |
| 500056 | 046346 | 510601 | | 510693 | | 510551 | | 510502 | | -- | |
| 500090 | 046370 | 521237 | | 510692 | | 521709 | | 521531 | | 365014 | |
| 500112 | 046574 | 510601 | | 510693 | | 510551 | | 510502 | | -- | |
| 500113 | 048304 | 521271 | | 510692 | | 521709 | | 521531 | | | |
| 500114 | 048885 | 509021 | | 510692 | | 521709 | | 521531 | | 365021 | |
| 500115 | 048216 | 510602 | | 510693 | | 510551 | | 521515 | | -- | |
| 500129 | 049057 | 521227 | | 510692 | | 521705 | | 521522 | | 365012 | |
| 500394 | 049310 | 521206 | | 510695 | | 509002 | | 510384 | | 365012 | |
| 500396 | 049876 | 521208 | | 510692 | | 521702 | | 521506 | | 365021 | |
| 500397 | 047708 | 521216 | | 510693 | | 510551 | | 521514 | 48059 | -- | |

GASTROPARTS

GASTROPARTS Sp. J.
Klonowica 37
87-100 Toruń

www.gastroparts.com
gastroparts@gastroparts.com
tel. +48 56 657 00 68
/gastroparts.global
/gastroparts.global